

# J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

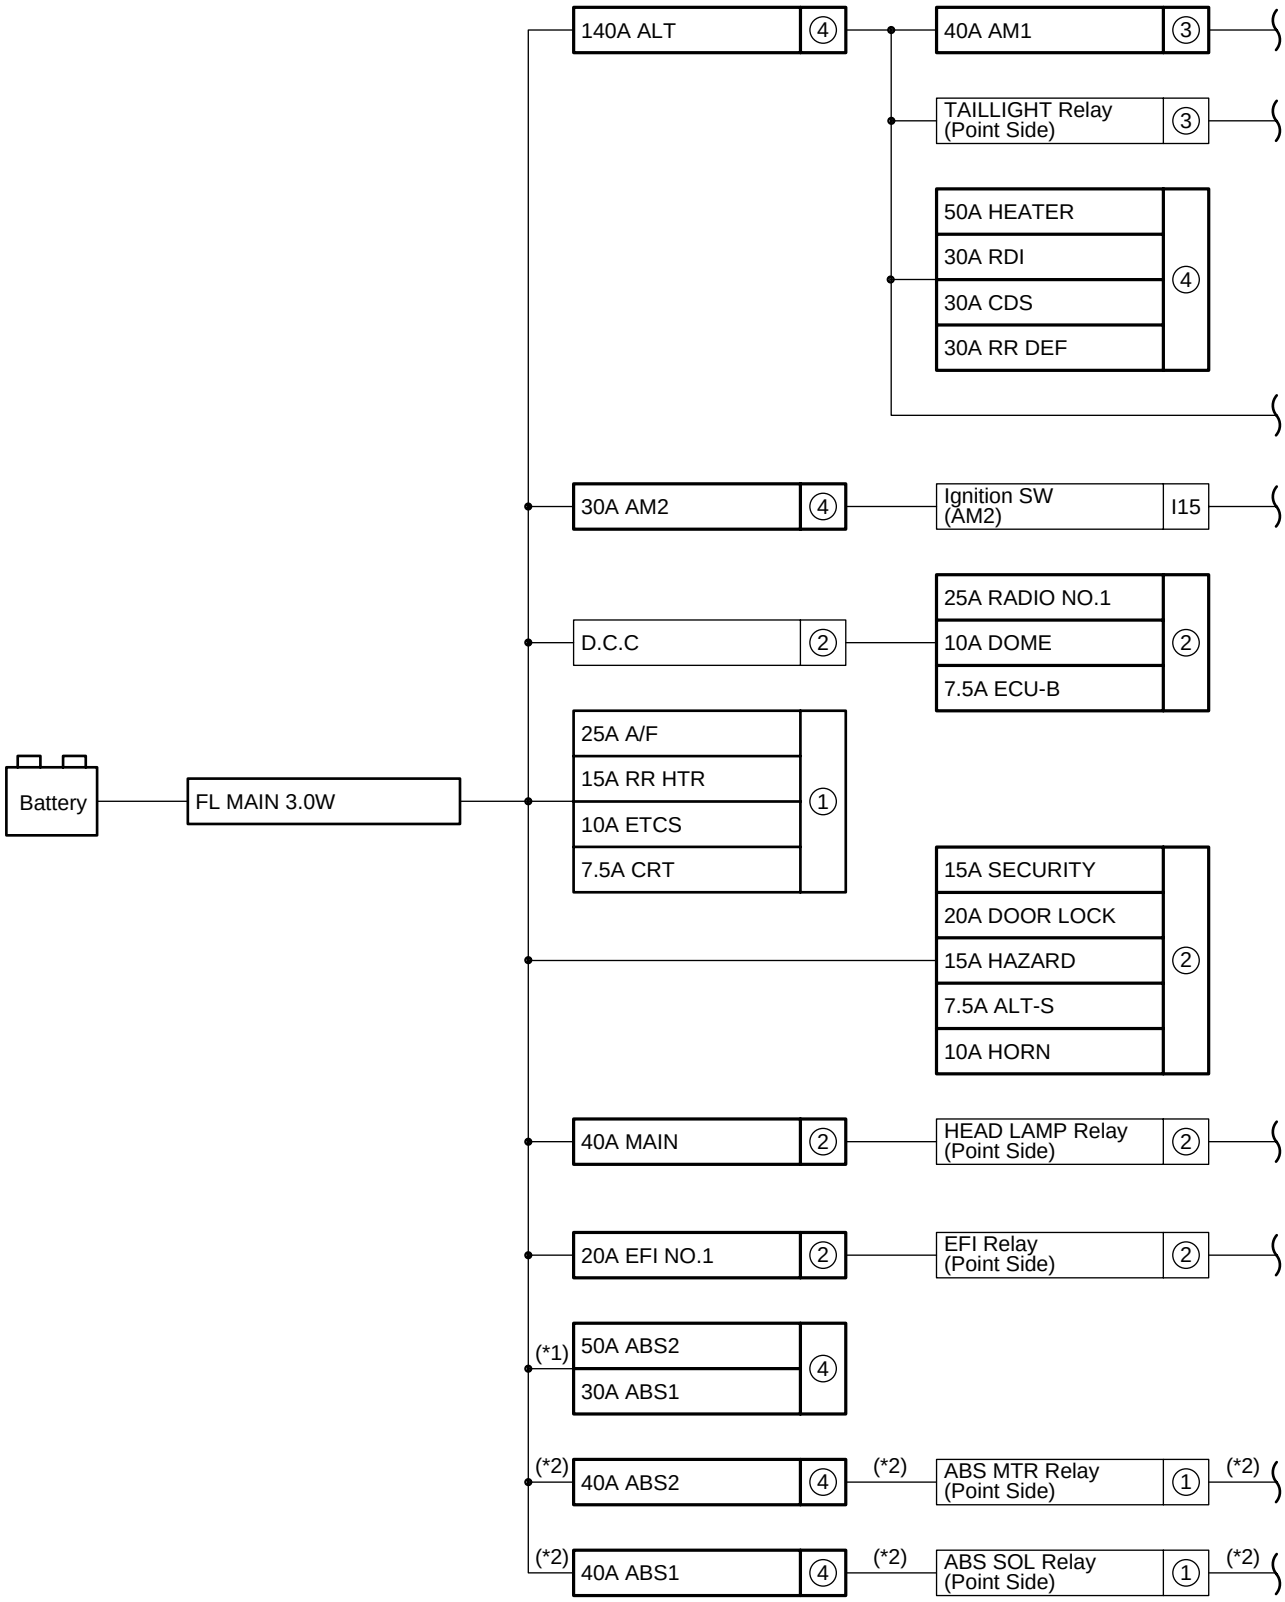

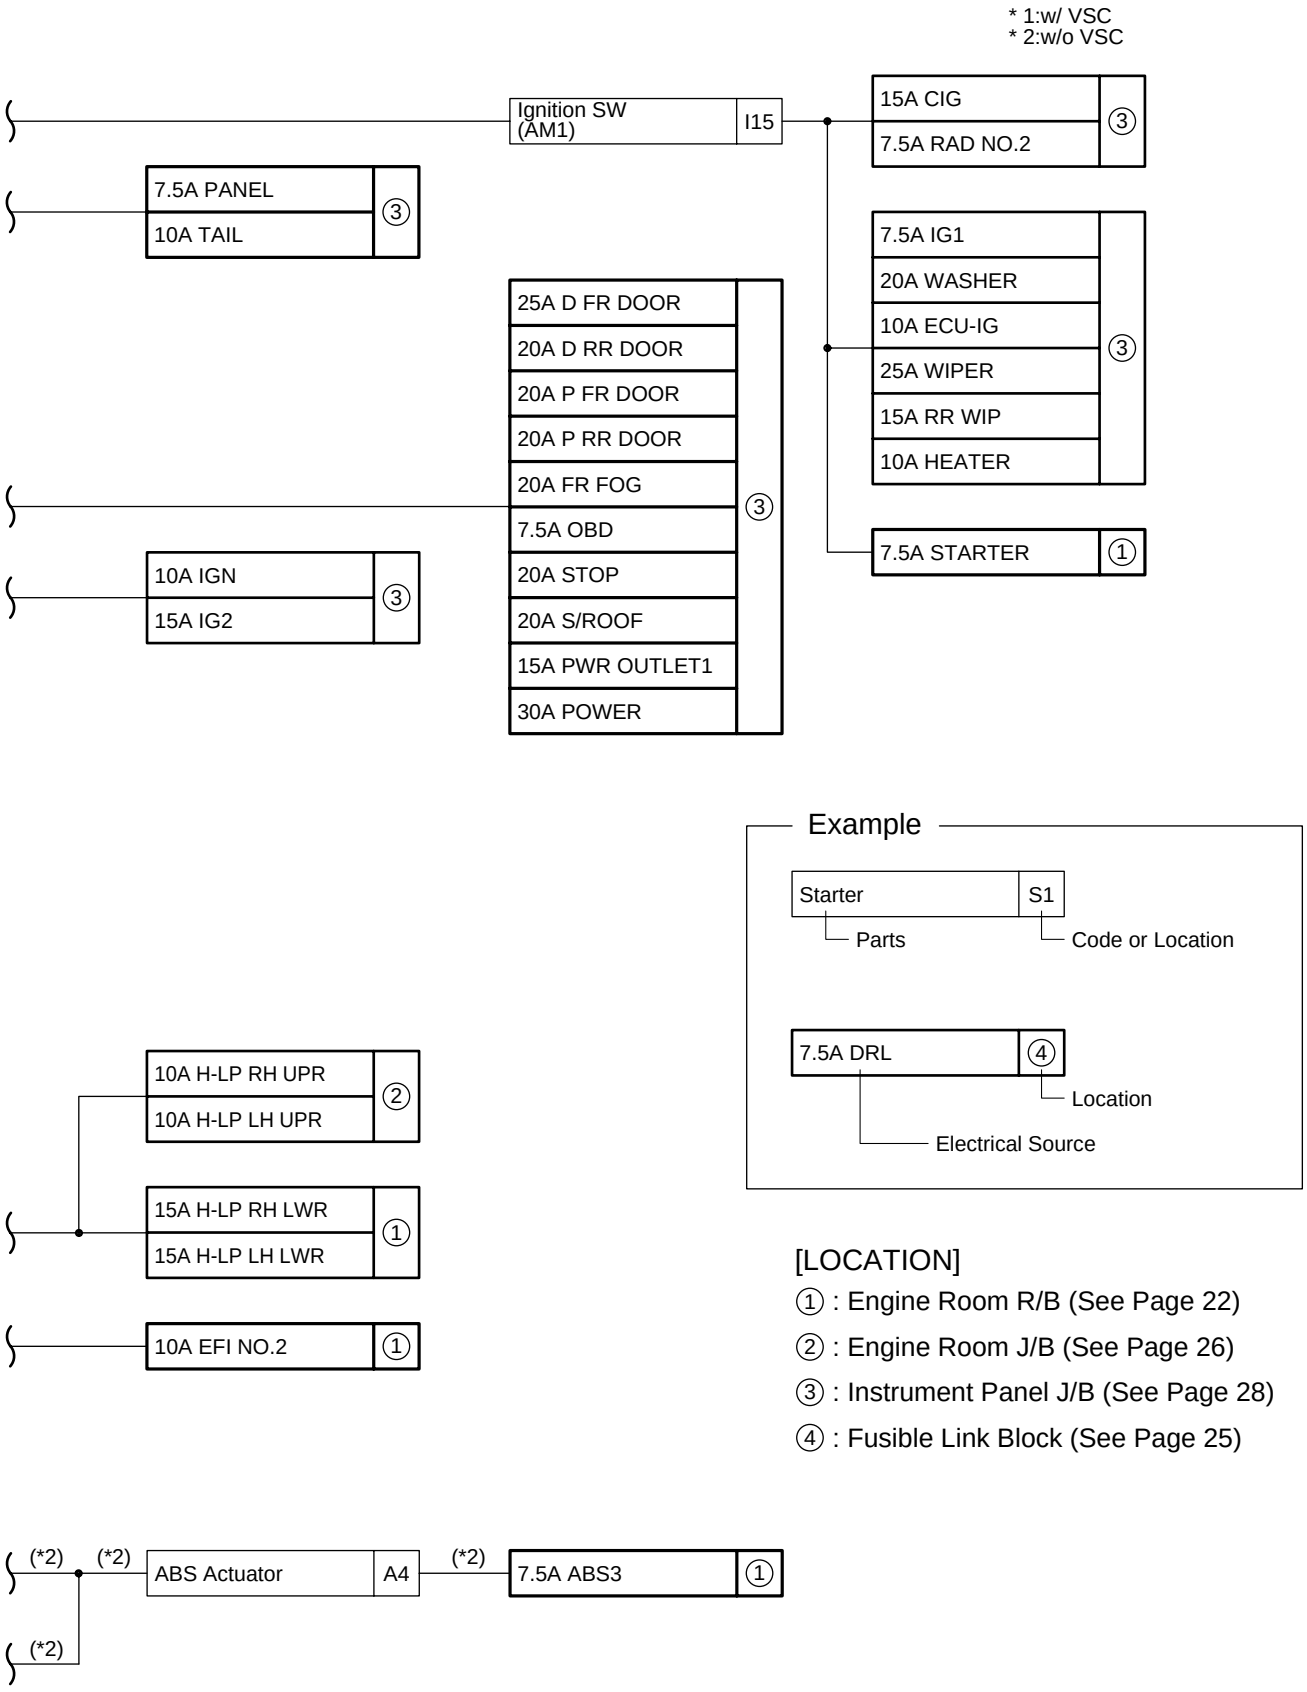


[LOCATION]

① : Engine Room R/B (See Page 22)

② : Engine Room J/B (See Page 26)

③ : Instrument Panel J/B (See Page 28)

④ : Fusible Link Block (See Page 25)