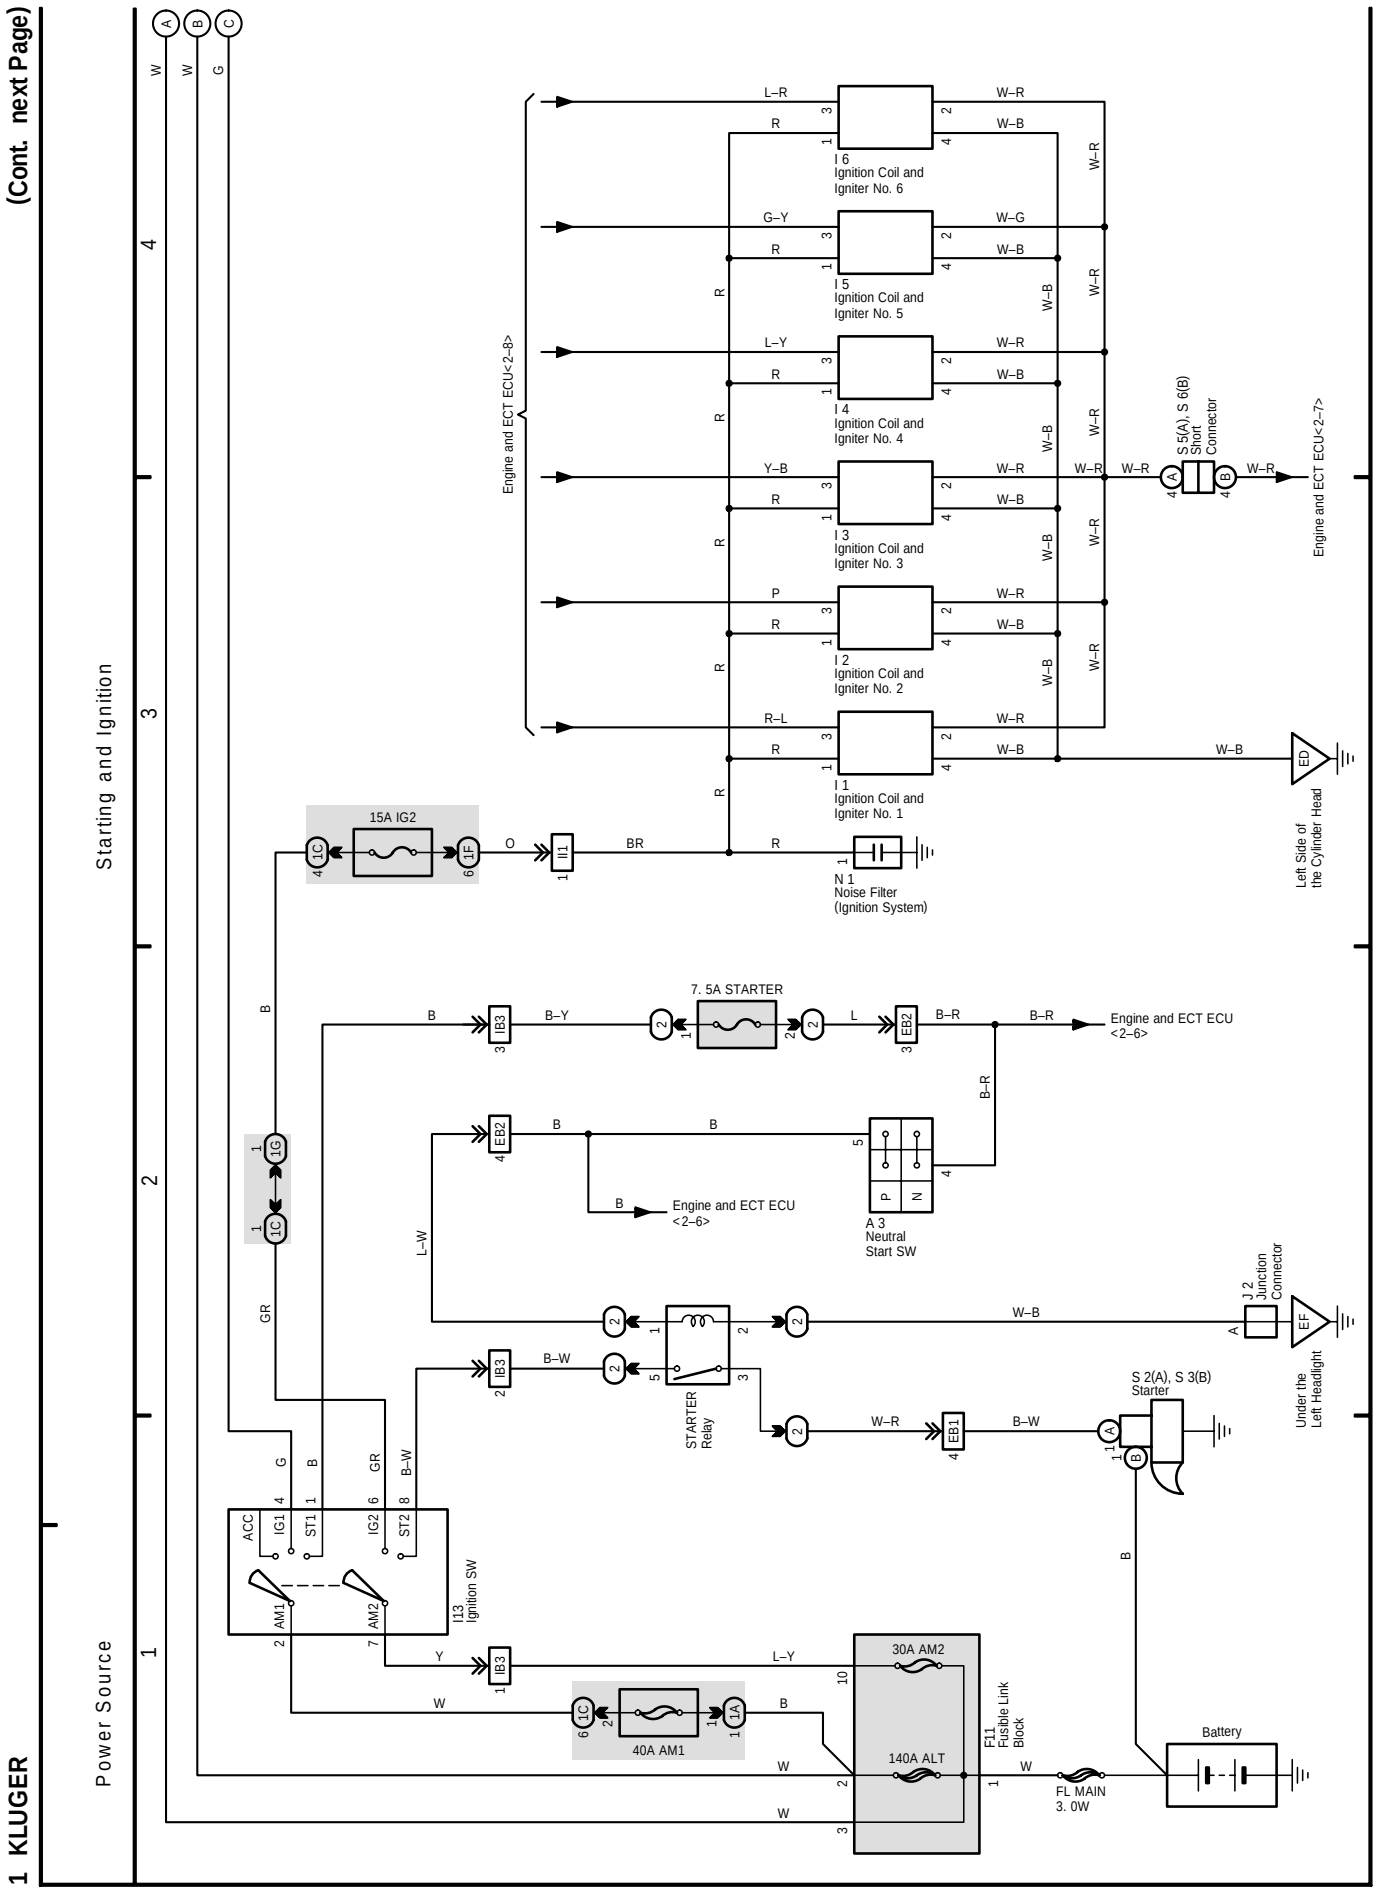

(Cont. next Page)
1 KLUGER
Power Source
Starting and Ignition
Engine and ECT ECU<2–8>
I 6 Ignition Coil and Igniter No. 6
I 5 Ignition Coil and Igniter No. 5
I 4 Ignition Coil and Igniter No. 4
I 3 Ignition Coil and Igniter No. 3
I 2 Ignition Coil and Igniter No. 2
I 1 Ignition Coil and Igniter No. 1
S 5(A), S 6(B) Short Connector
Engine and ECT ECU<2–7>
Left Side of the Cylinder Head
15A IG2
N 1 Noise Filter (Ignition System)
7. 5A STARTER
Engine and ECT ECU <2–6>
A 3 Neutral Start SW
J 2 Junction Connector
Under the Left Headlight
S 2(A), S 3(B) Starter
STARTER Relay
I13 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
30A AM2
140A ALT
40A AM1
F11 Fusible Link Block
FL MAIN 3. 0W
Battery

1 KLUGER (Cont' d)

