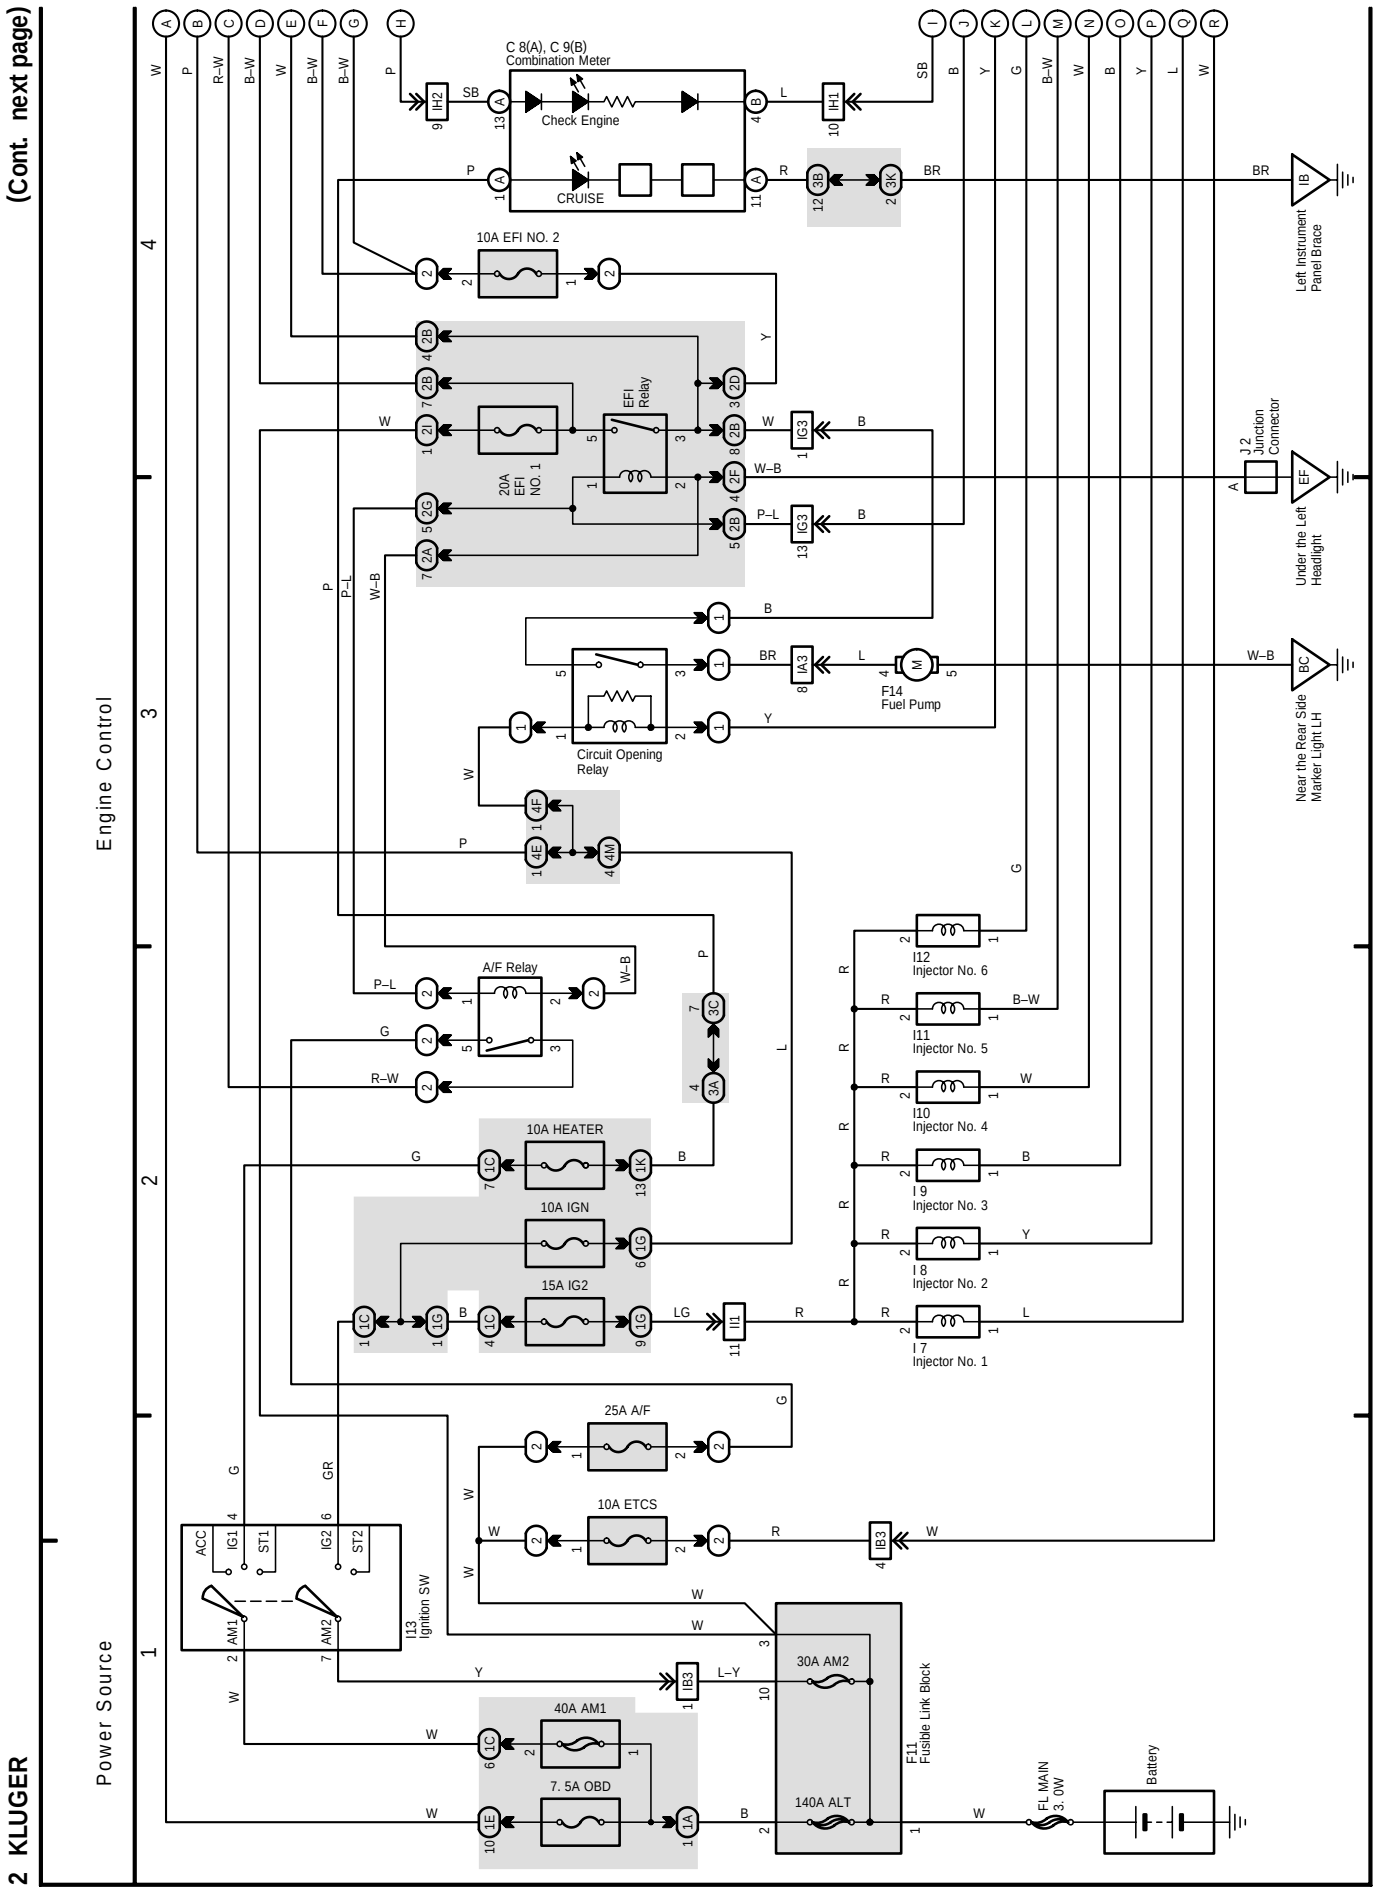
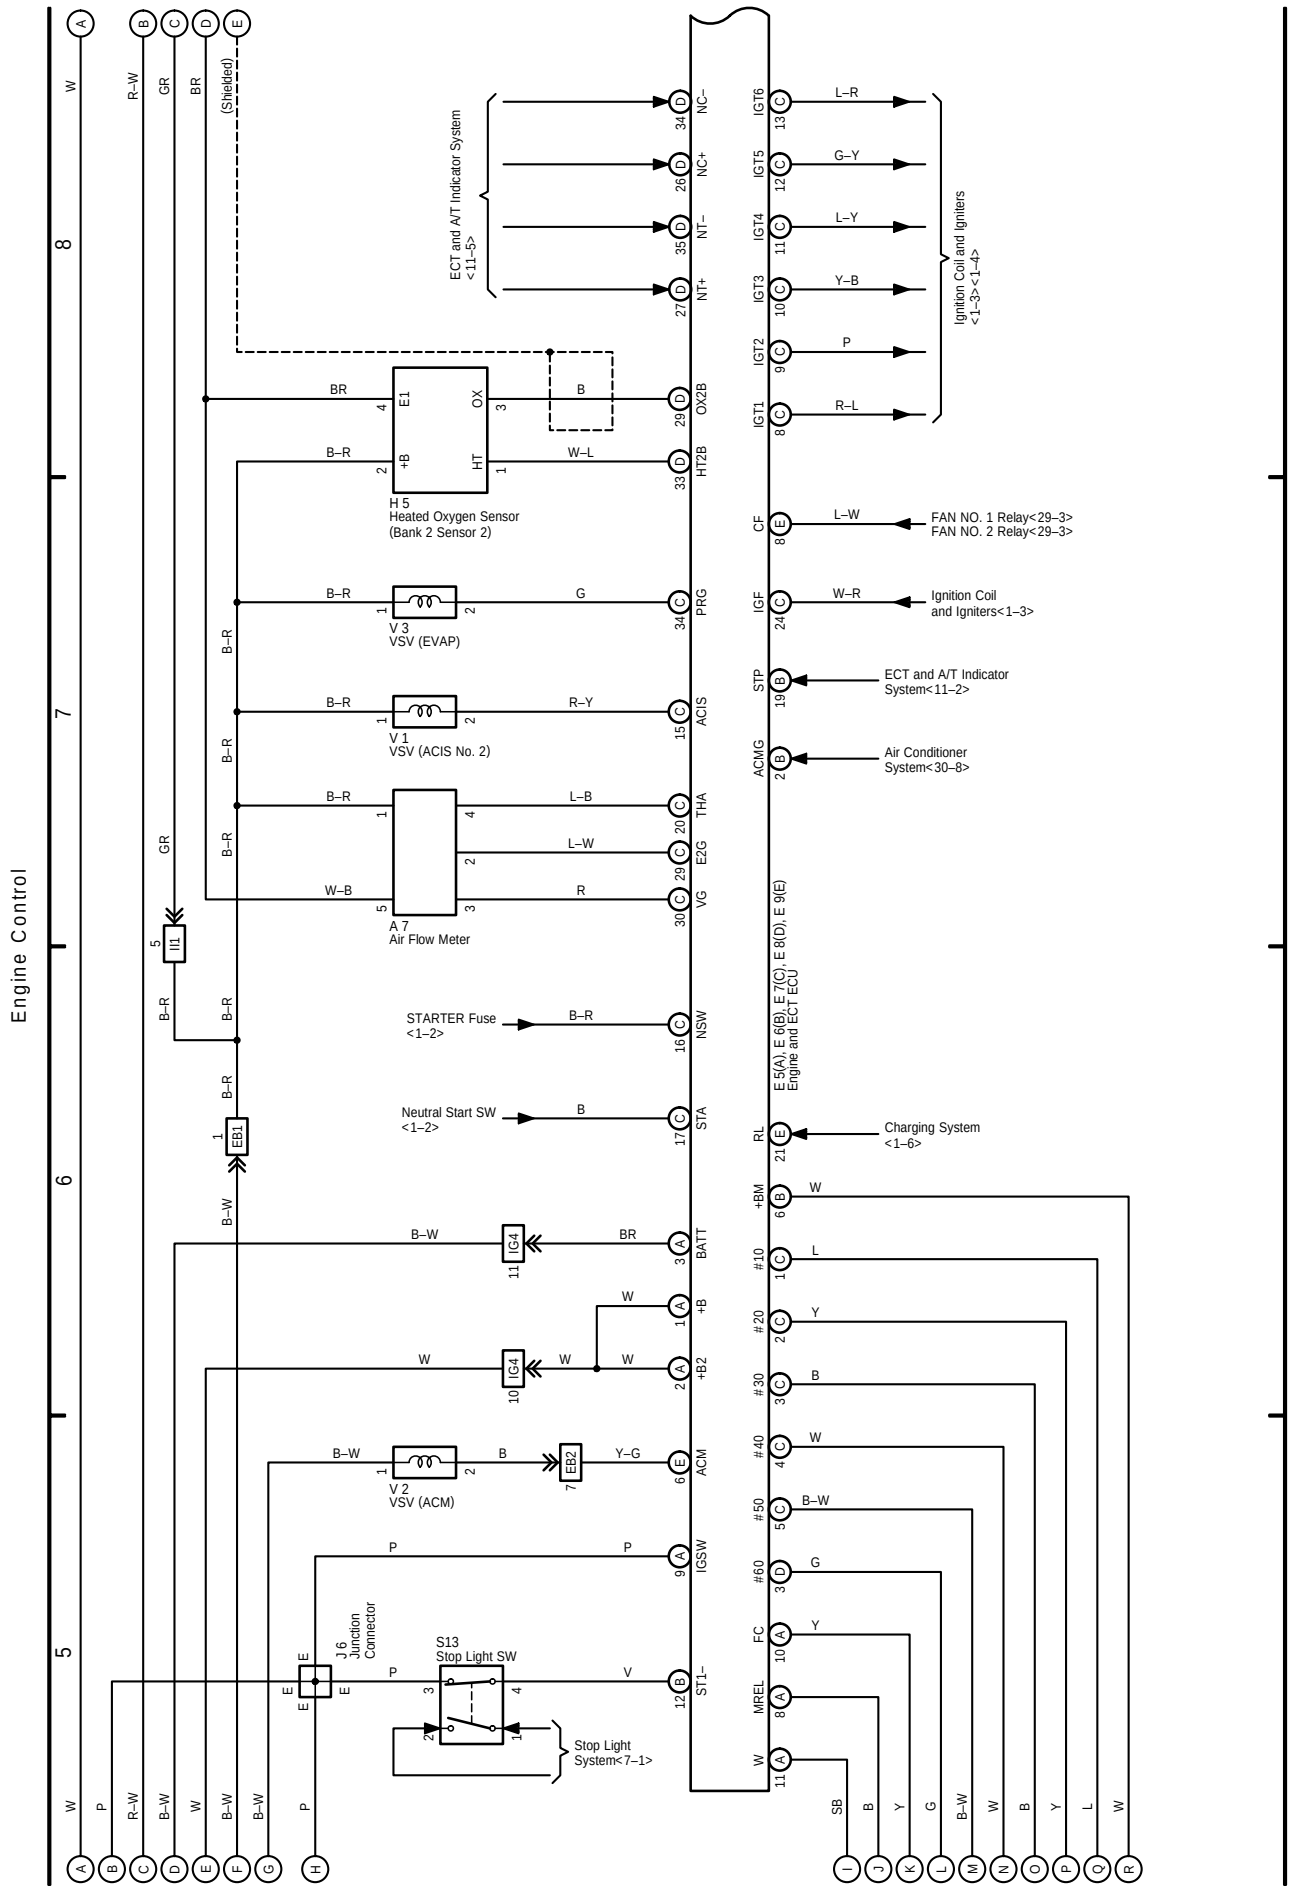
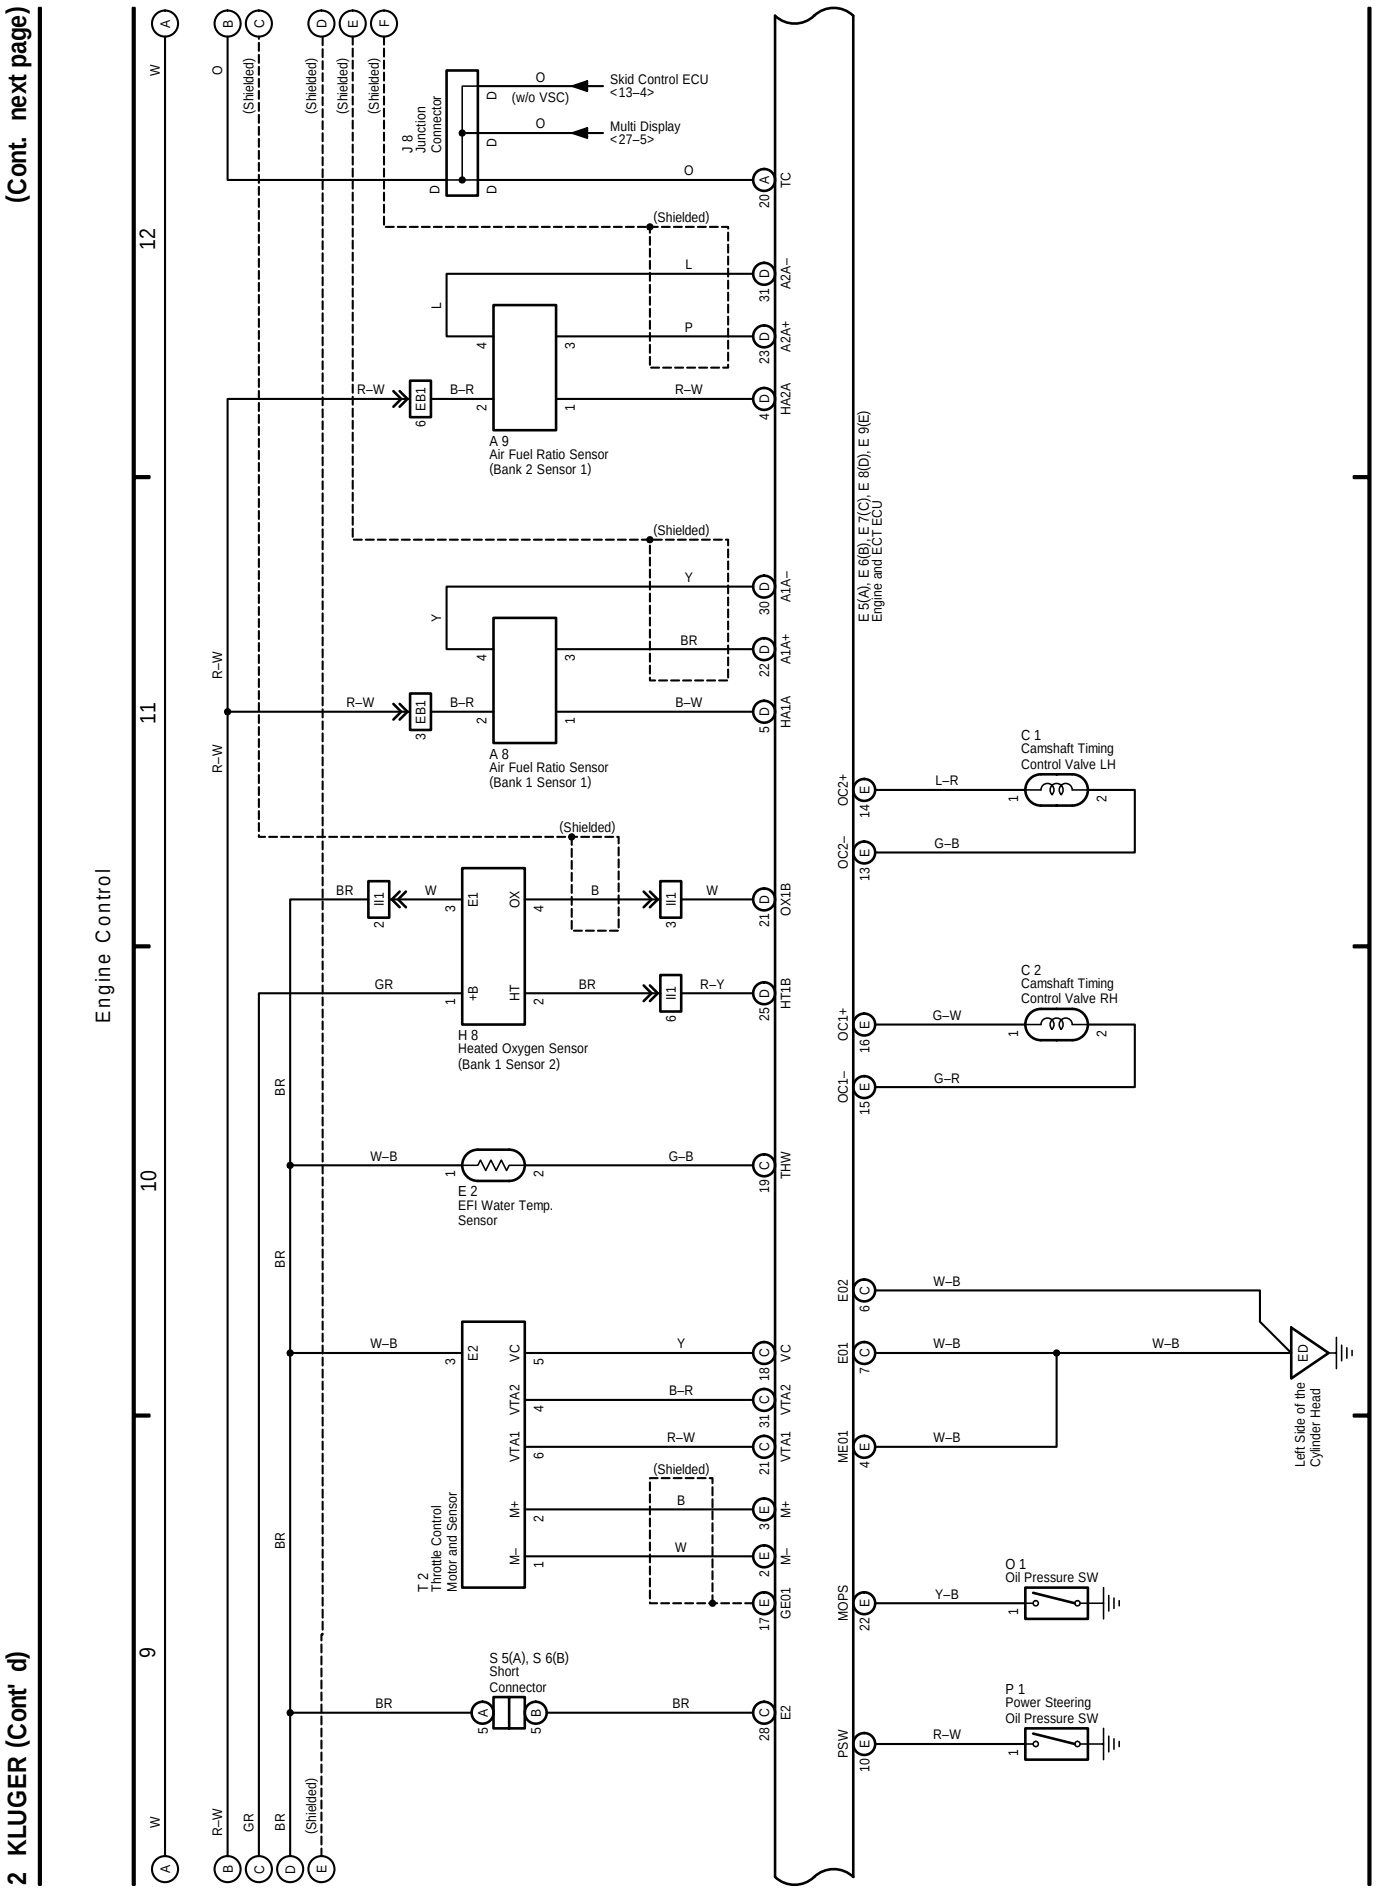
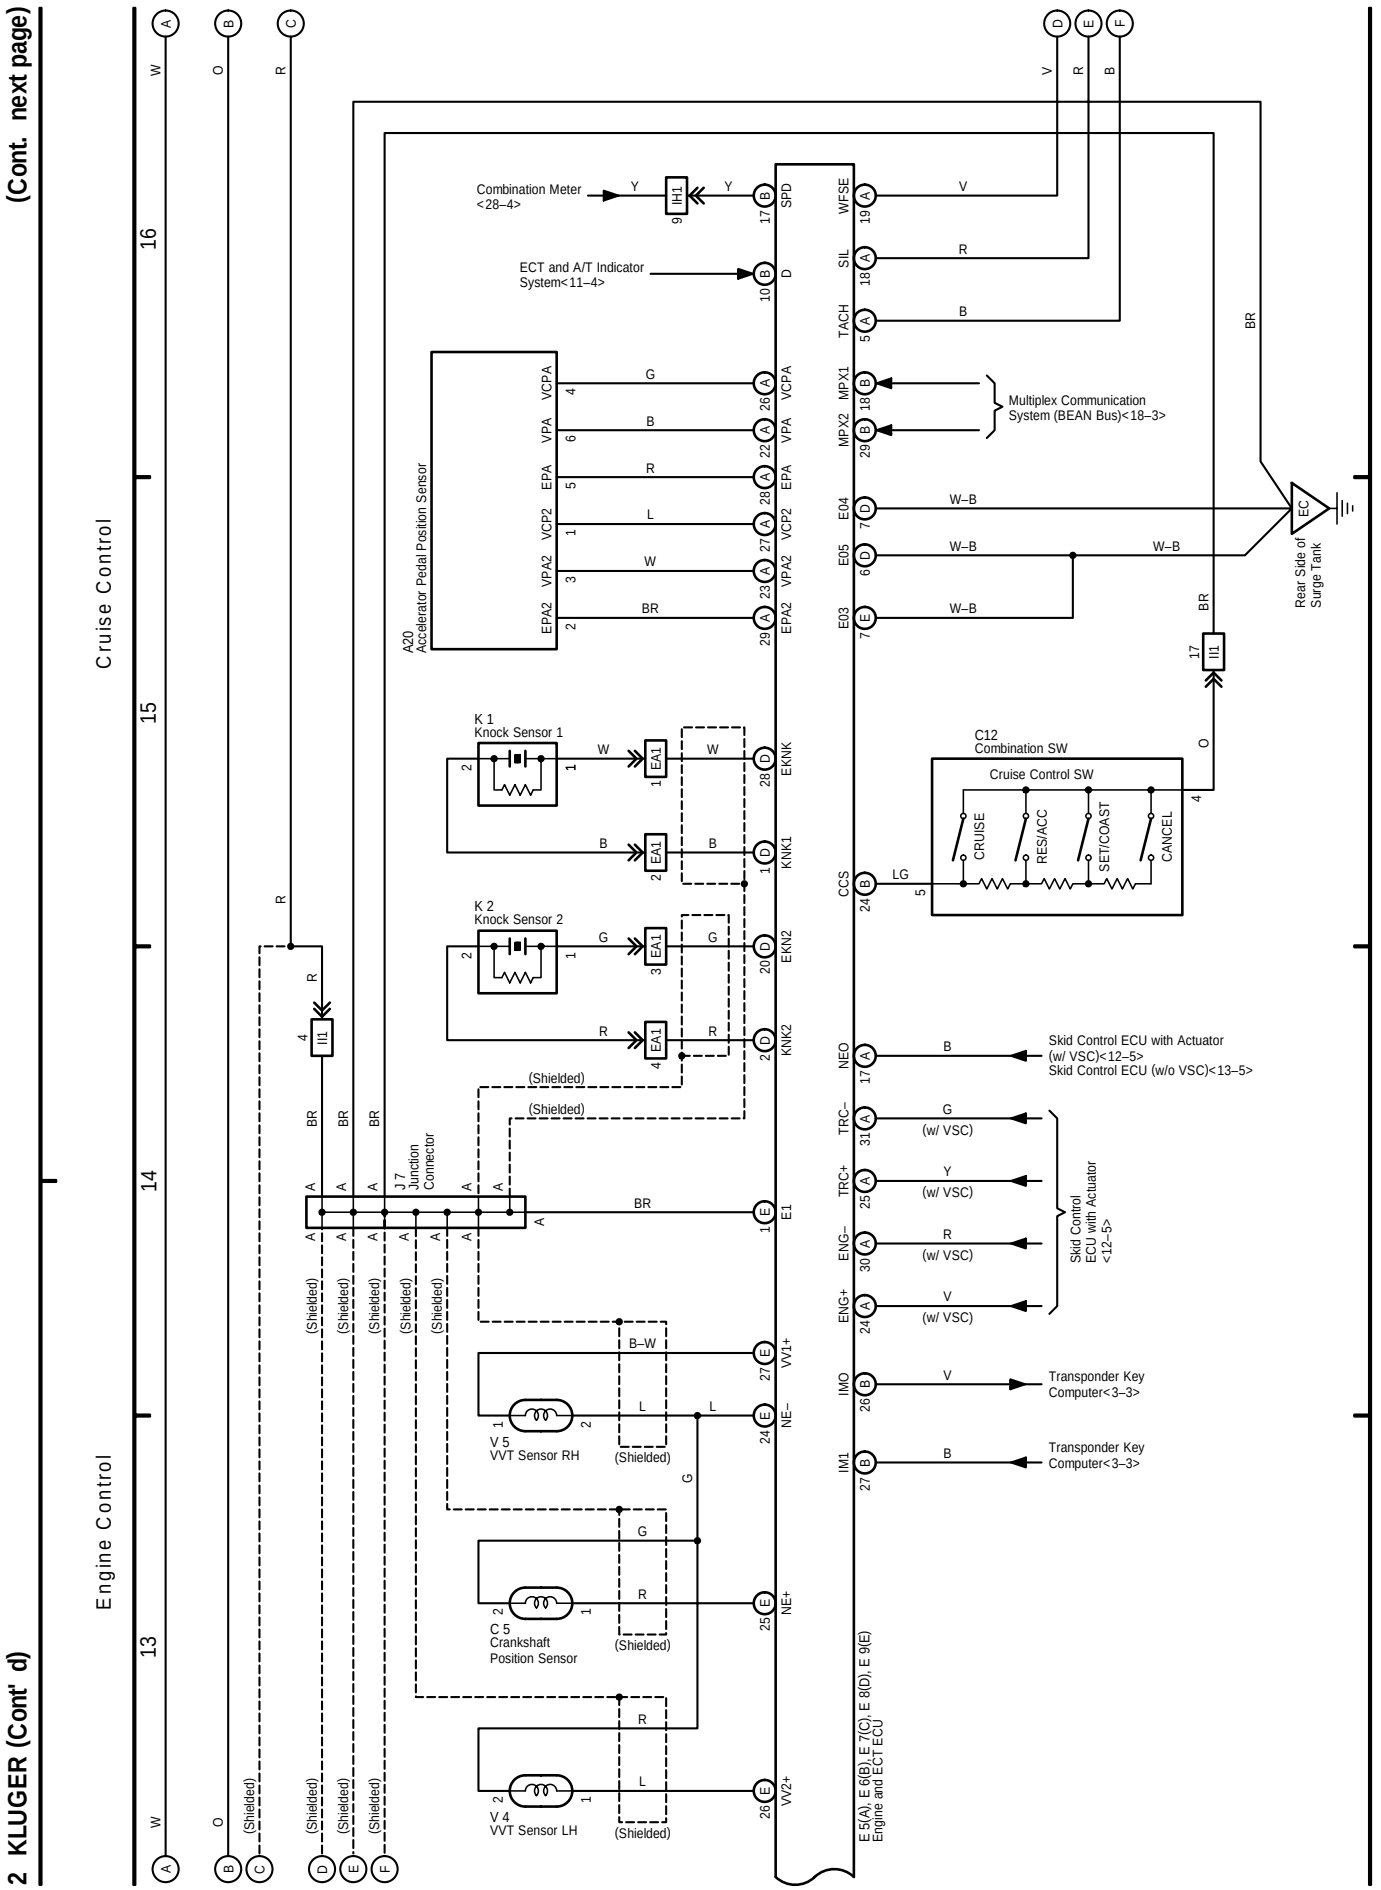

(Cont. next page)
2 KLUGER
Power Source
Engine Control
C 8(A), C 9(B)
Combination Meter
Check Engine
CRUISE
10A EFI NO. 2
EFI Relay
20A EFI NO. 1
A/F Relay
Circuit Opening Relay
F14 Fuel Pump
10A HEATER
10A IGN
15A IG2
25A A/F
10A ETCS
40A AM1
7. 5A OBD
30A AM2
140A ALT
F11 Fusible Link Block
I13 Ignition SW
I12 Injector No. 6
I11 Injector No. 5
I10 Injector No. 4
I 9 Injector No. 3
I 8 Injector No. 2
I 7 Injector No. 1
J 2 Junction Connector
Left Instrument Panel Brace
Under the Left Headlight
Near the Rear Side Marker Light LH
FL MAIN 3. 0W
Battery

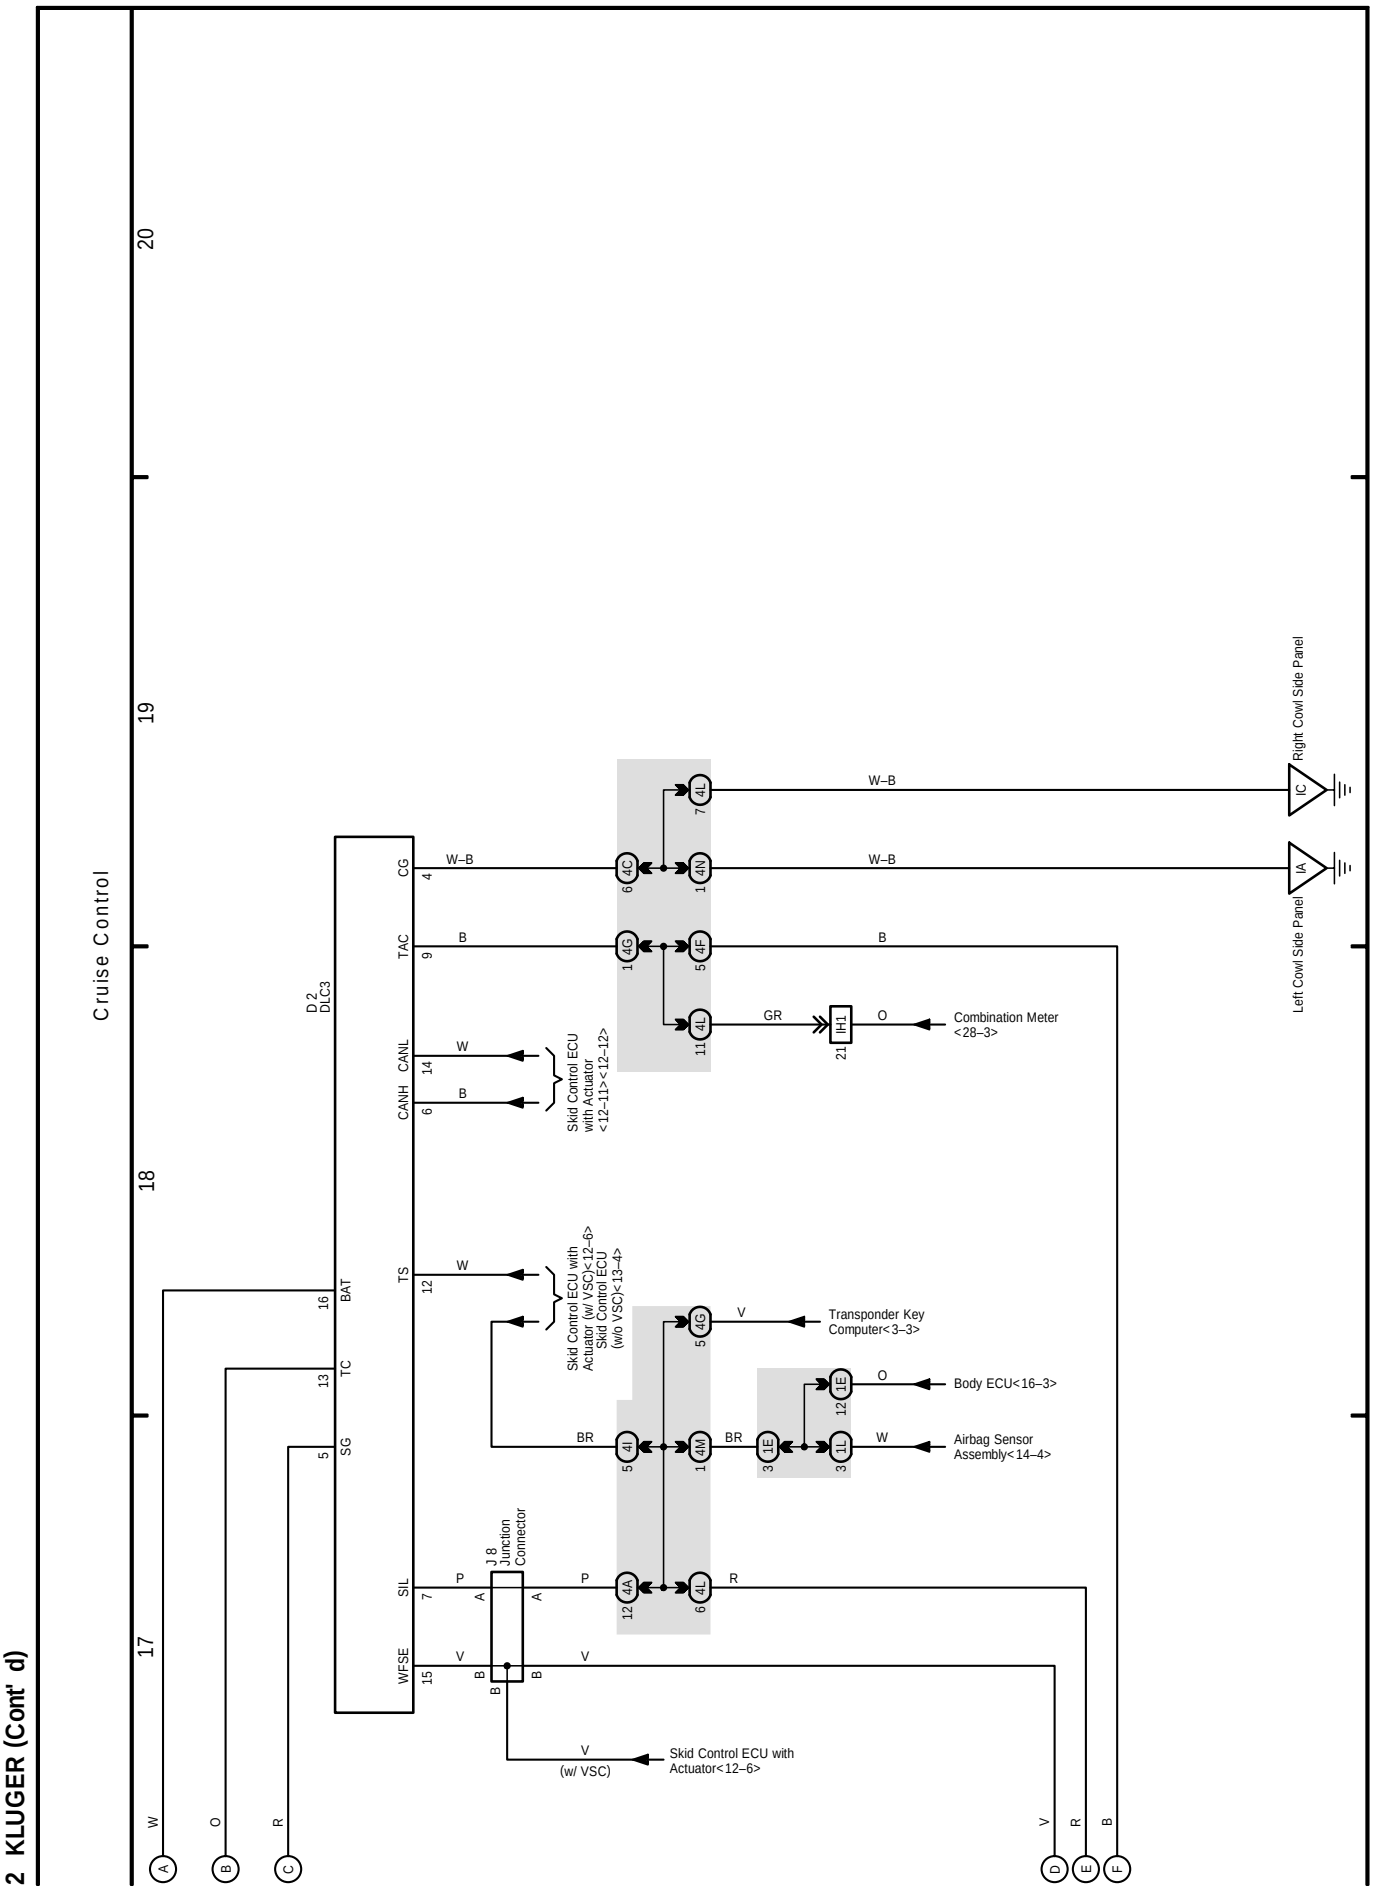
2 KLUGER (Cont' d)

(Cont. next page)




(Cont. next page)
2 KLUGER (Cont' d)
Engine Control
Skid Control ECU <13–4>
(w/o VSC)
Multi Display <27–5>
J 8 Junction Connector
A 9 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
A 8 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)
E 2 EFI Water Temp. Sensor
T 2 Throttle Control Motor and Sensor
S 5(A), S 6(B) Short Connector
E 5(A), E 6(B), E 7(C), E 8(D), E 9(E) Engine and ECT ECU
C 1 Camshaft Timing Control Valve LH
C 2 Camshaft Timing Control Valve RH
O 1 Oil Pressure SW
P 1 Power Steering Oil Pressure SW
Left Side of the Cylinder Head
(Shielded)


2 KLUGER (Cont' d)
(Cont. next page)
Cruise Control
Engine Control
13
14
15
16
Combination Meter <28–4>
ECT and A/T Indicator System<11–4>
Multiplex Communication System (BEAN Bus)<18–3>
A20 Accelerator Pedal Position Sensor
K 1 Knock Sensor 1
K 2 Knock Sensor 2
J 7 Junction Connector
V 5 VVT Sensor RH
C 5 Crankshaft Position Sensor
V 4 VVT Sensor LH
C12 Combination SW
Cruise Control SW
CRUISE
RES/ACC
SET/COAST
CANCEL
Skid Control ECU with Actuator (w/ VSC)<12–5>
Skid Control ECU (w/o VSC)<13–5>
Skid Control ECU with Actuator <12–5>
Transponder Key Computer<3–3>
Transponder Key Computer<3–3>
Rear Side of Surge Tank
E 5(A), E 6(B), E 7(C), E 8(D), E 9(E) Engine and ECT ECU
(Shielded)


2 KLUGER (Cont' d)
Cruise Control
20
19
18
17
D 2
DLC3
BAT
TC
SG
CG
TAC
CANL
CANH
TS
SIL
WFSE
W–B
B
W
O
R
V
P
BR
GR
Skid Control ECU with Actuator <12–11><12–12>
Skid Control ECU with Actuator (w/ VSC)<12–6> Skid Control ECU (w/o VSC)<13–4>
J 8 Junction Connector
Skid Control ECU with Actuator<12–6>
(w/ VSC)
Transponder Key Computer<3–3>
Body ECU<16–3>
Airbag Sensor Assembly<14–4>
Combination Meter <28–3>
Right Cowl Side Panel
Left Cowl Side Panel
IC
IA
IH1