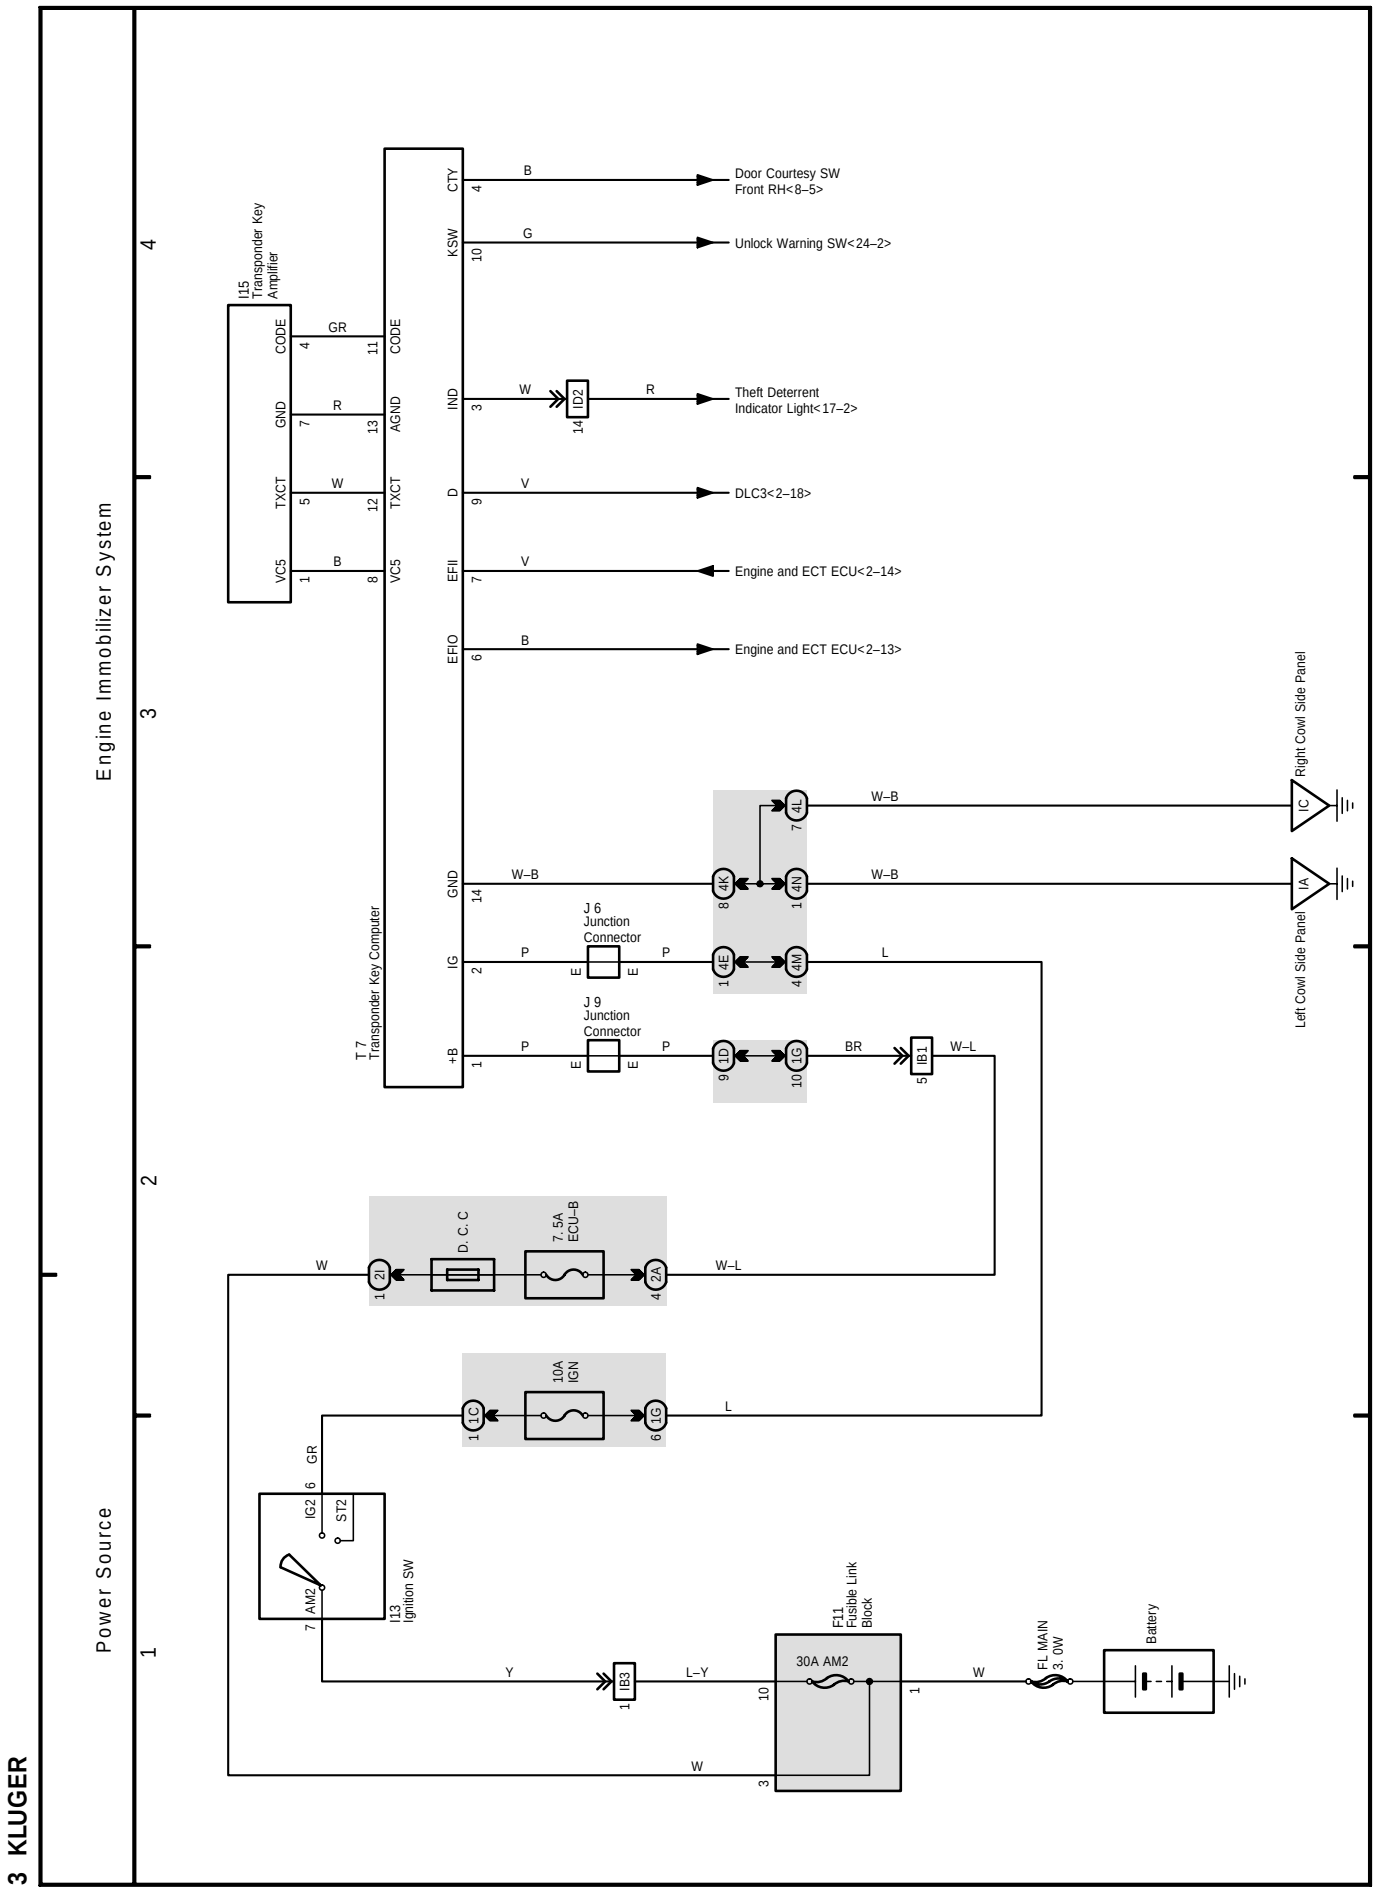

3 KLUGER
Power Source
Engine Immobilizer System
1
2
3
4
I15 Transponder Key Amplifier
CODE
GND
TXCT
VC5
GR
R
W
B
T 7 Transponder Key Computer
CTY
KSW
IND
D
EFII
EFIO
GND
IG
+B
Door Courtesy SW Front RH<8–5>
Unlock Warning SW<24–2>
Theft Deterrent Indicator Light<17–2>
DLC3<2–18>
Engine and ECT ECU<2–14>
Engine and ECT ECU<2–13>
J 6 Junction Connector
J 9 Junction Connector
Right Cowl Side Panel
Left Cowl Side Panel
D. C. C
7.5A ECU–B
10A IGN
I13 Ignition SW
IG2
ST2
AM2
F11 Fusible Link Block
30A AM2
FL MAIN 3. 0W
Battery