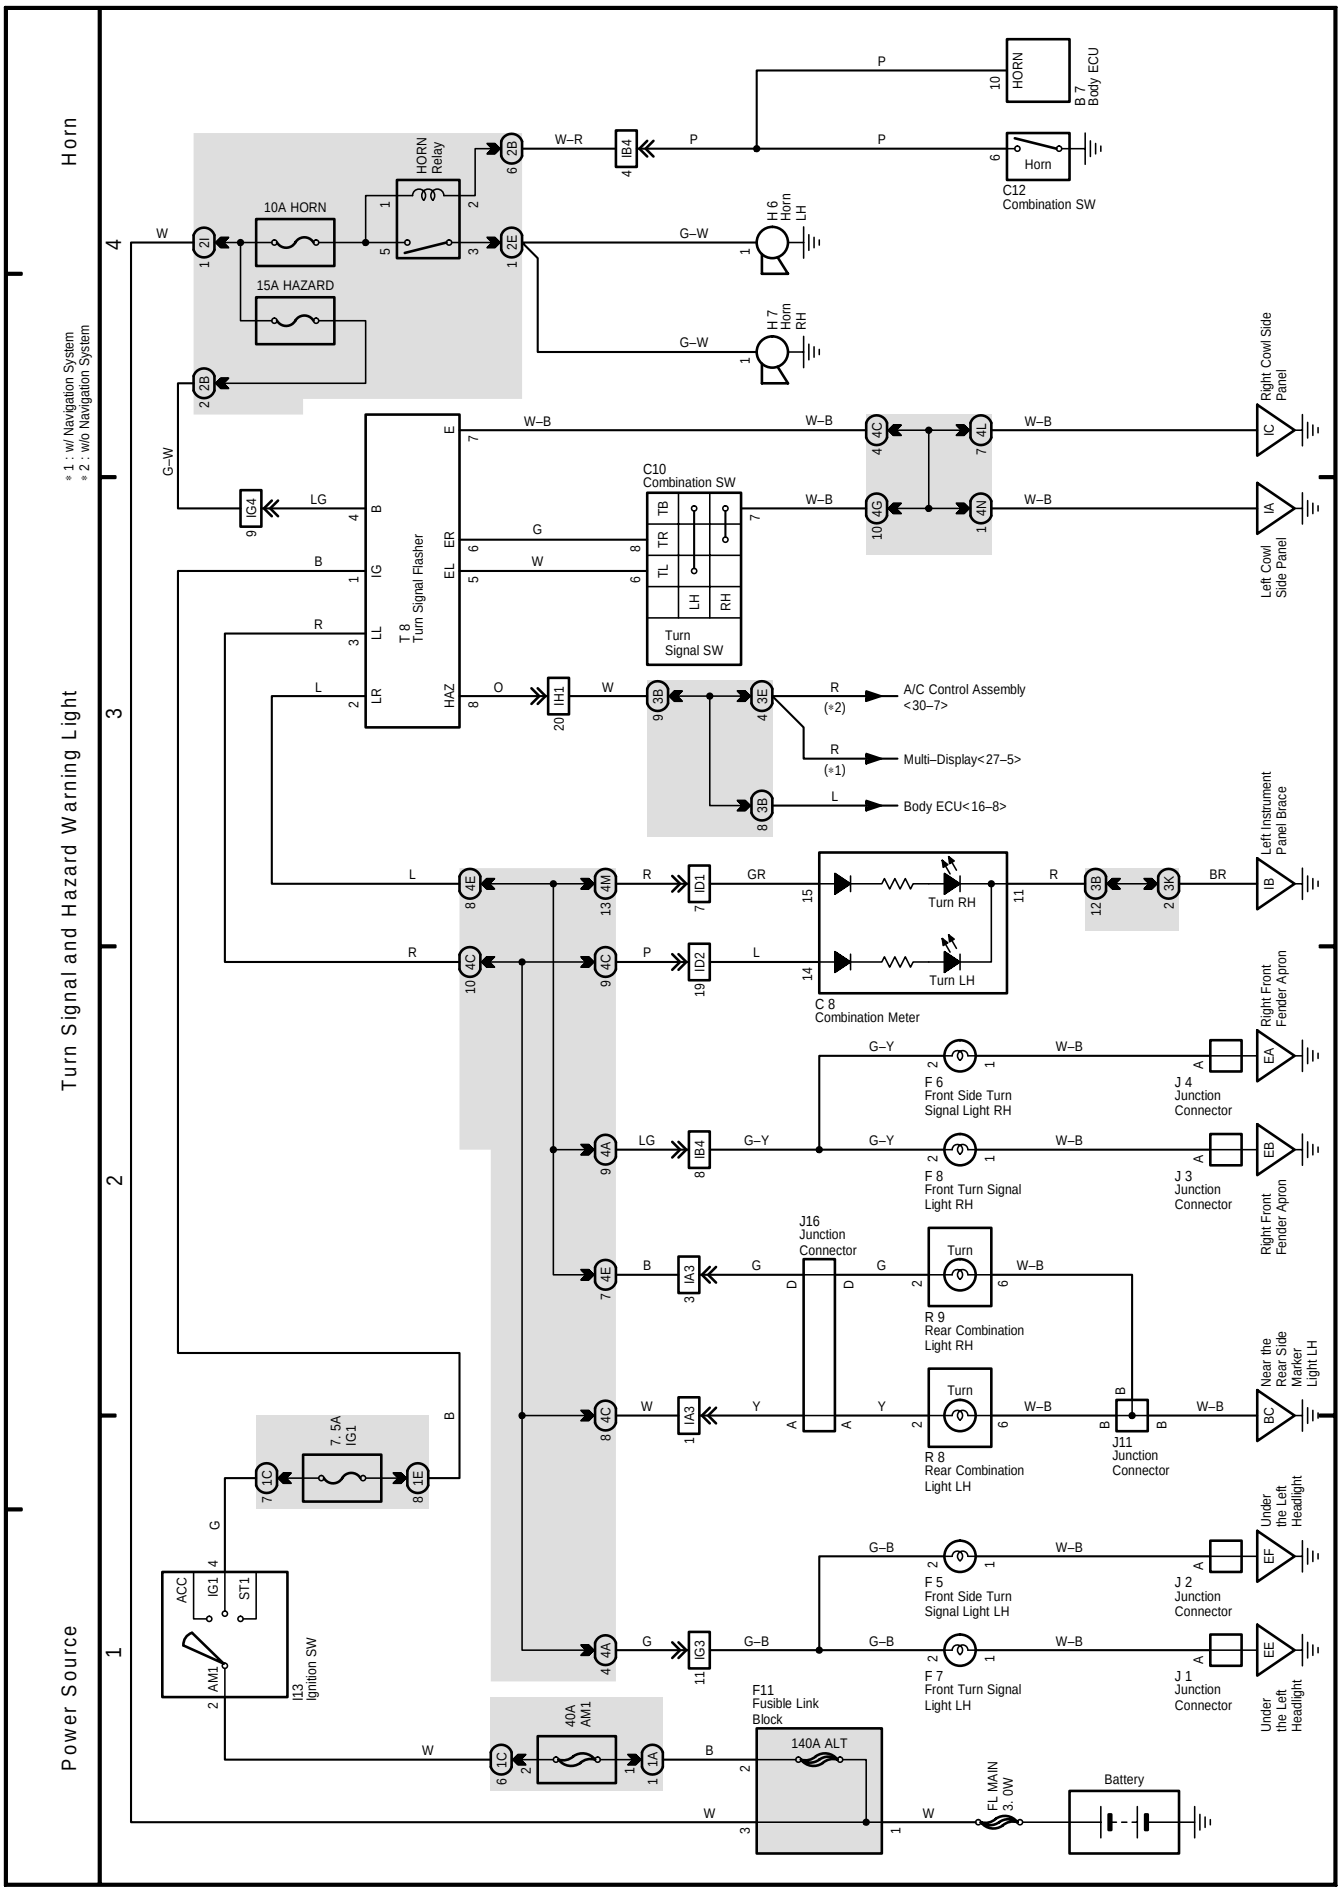

Horn
Turn Signal and Hazard Warning Light
Power Source
* 1 : w/ Navigation System
* 2 : w/o Navigation System
HORN
B 7
Body ECU
Horn
C12
Combination SW
HORN
Relay
10A HORN
15A HAZARD
H 6
Horn
LH
H 7
Horn
RH
Right Cowl Side
Panel
C10
Combination SW
Turn
Signal SW
T 8
Turn Signal Flasher
Left Cowl
Side Panel
A/C Control Assembly
<30–7>
Multi–Display<27–5>
Body ECU<16–8>
Left Instrument
Panel Brace
Turn RH
Turn LH
C 8
Combination Meter
Right Front
Fender Apron
F 6
Front Side Turn
Signal Light RH
J 4
Junction
Connector
F 8
Front Turn Signal
Light RH
J 3
Junction
Connector
J16
Junction
Connector
R 9
Rear Combination
Light RH
R 8
Rear Combination
Light LH
J11
Junction
Connector
Near the
Rear Side
Marker
Light LH
7. 5A
IG1
ACC
IG1
ST1
AM1
I13
Ignition SW
F 5
Front Side Turn
Signal Light LH
J 2
Junction
Connector
F 7
Front Turn Signal
Light LH
J 1
Junction
Connector
Under
the Left
Headlight
40A
AM1
F11
Fusible Link
Block
140A ALT
FL MAIN
3. 0W
Battery