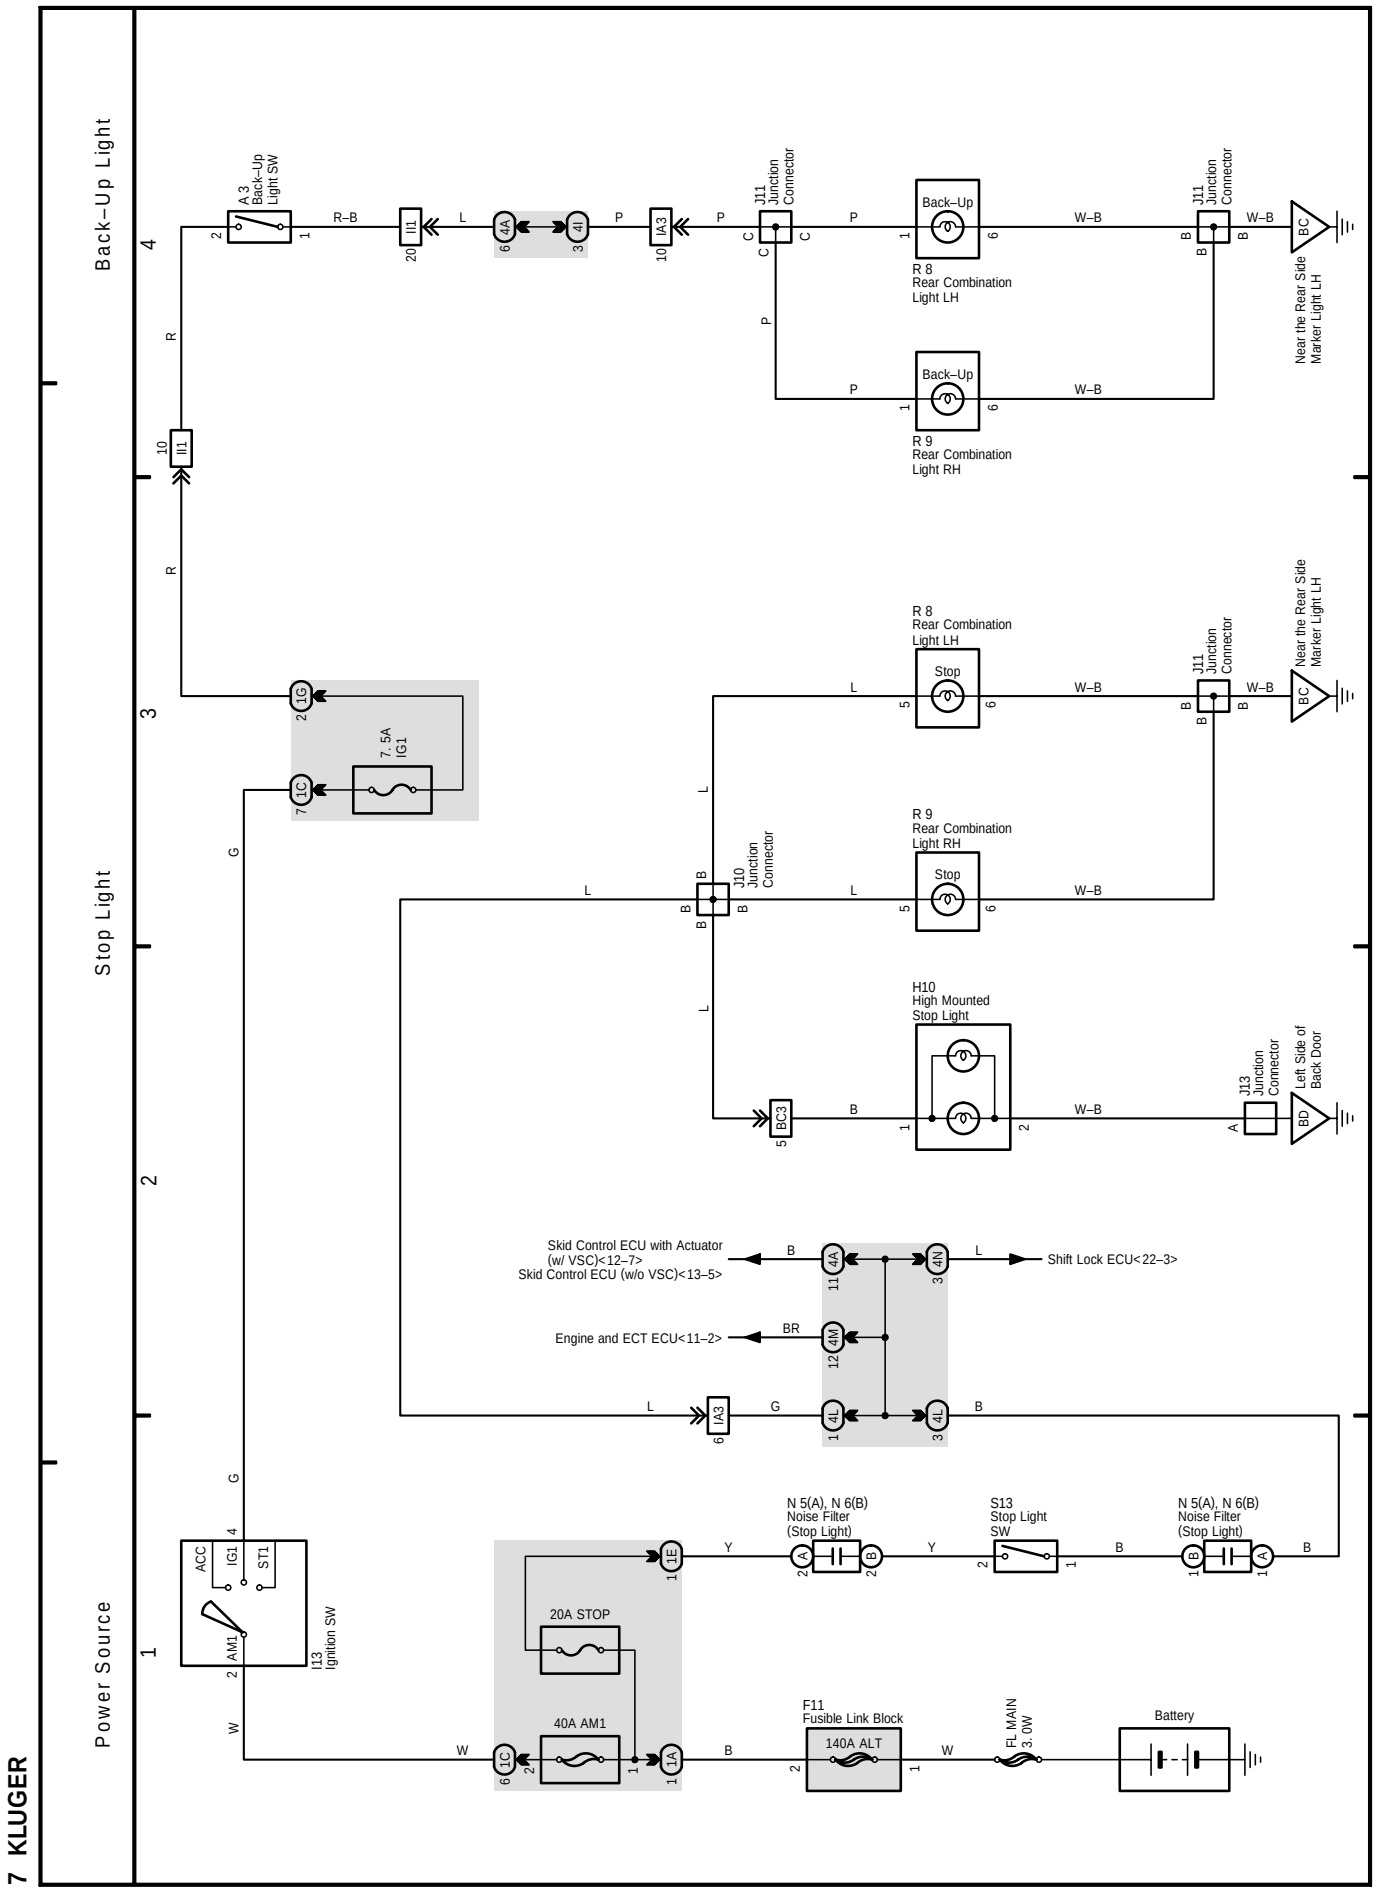

Back–Up Light
Stop Light
Power Source
A 3
Back–Up
Light SW
I11
J11
Junction
Connector
Back–Up
R 8
Rear Combination
Light LH
R 9
Rear Combination
Light RH
Near the Rear Side
Marker Light LH
BC
W–B
R–B
L
P
R
G
7. 5A
IG1
Stop
J10
Junction
Connector
H10
High Mounted
Stop Light
BC3
J13
Junction
Connector
Left Side of
Back Door
BD
Skid Control ECU with Actuator
(w/ VSC)<12–7>
Skid Control ECU (w/o VSC)<13–5>
Shift Lock ECU<22–3>
Engine and ECT ECU<11–2>
BR
I13
Ignition SW
ACC
IG1
ST1
AM1
20A STOP
40A AM1
F11
Fusible Link Block
140A ALT
FL MAIN
3. 0W
Battery
N 5(A), N 6(B)
Noise Filter
(Stop Light)
S13
Stop Light
SW