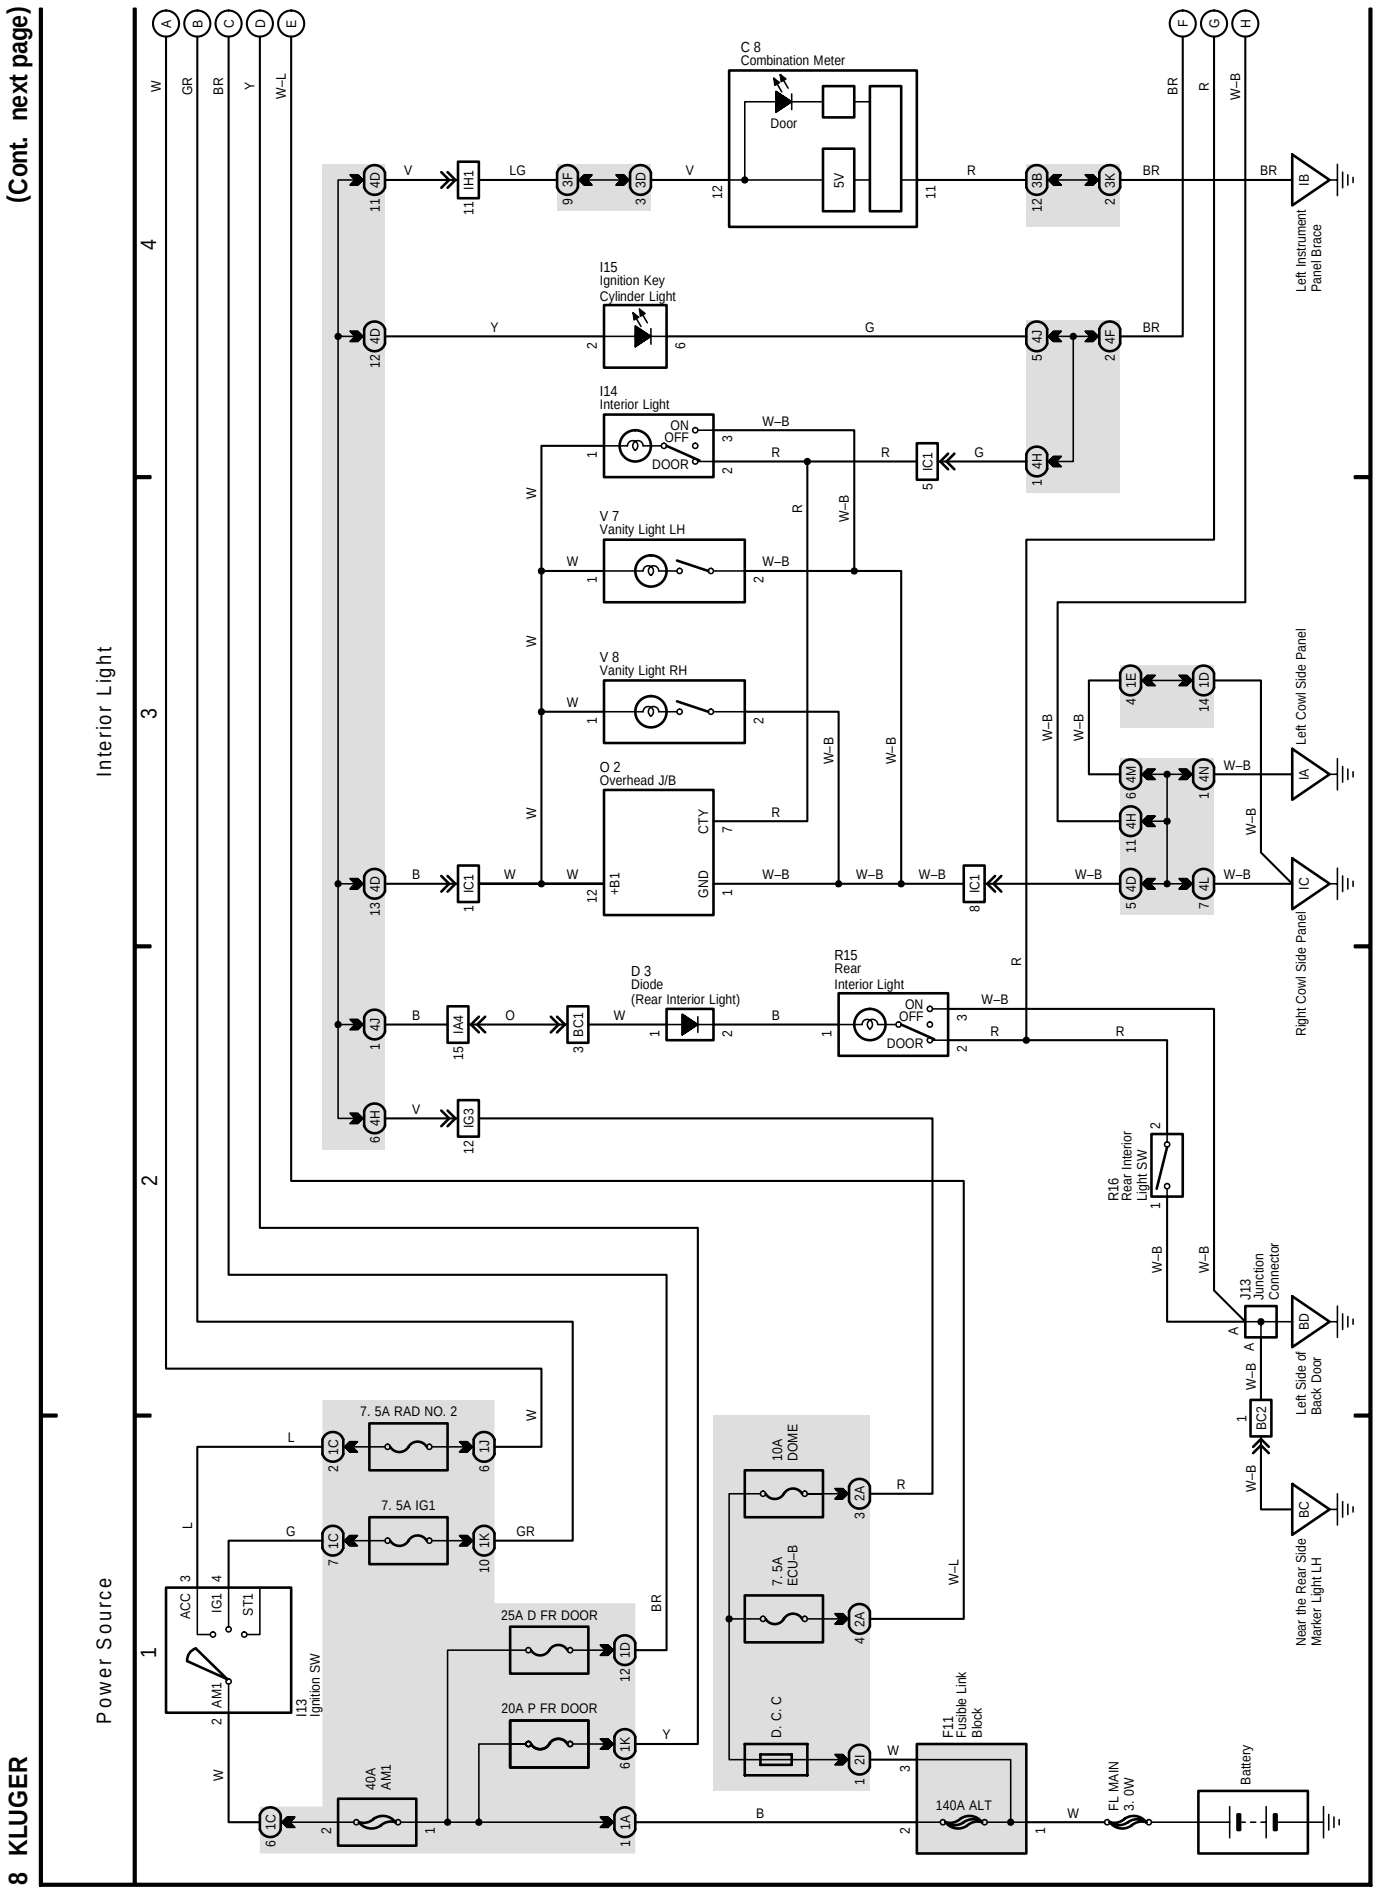

(Cont. next page)
Interior Light
Power Source
C 8
Combination Meter
Door
5V
I15
Ignition Key
Cylinder Light
I14
Interior Light
ON
OFF
DOOR
V 7
Vanity Light LH
V 8
Vanity Light RH
O 2
Overhead J/B
+B1
GND
CTY
D 3
Diode
(Rear Interior Light)
R15
Rear
Interior Light
R16
Rear Interior
Light SW
J13
Junction
Connector
I13
Ignition SW
ACC
IG1
ST1
AM1
7. 5A RAD NO. 2
7. 5A IG1
25A D FR DOOR
20A P FR DOOR
40A
AM1
10A
DOME
7. 5A
ECU–B
D. C. C
F11
Fusible Link
Block
140A ALT
FL MAIN
3. 0W
Battery
Left Instrument
Panel Brace
Left Cowl Side Panel
Right Cowl Side Panel
Left Side of
Back Door
Near the Rear Side
Marker Light LH
8 KLUGER

8 KLUGER (Cont' d)

