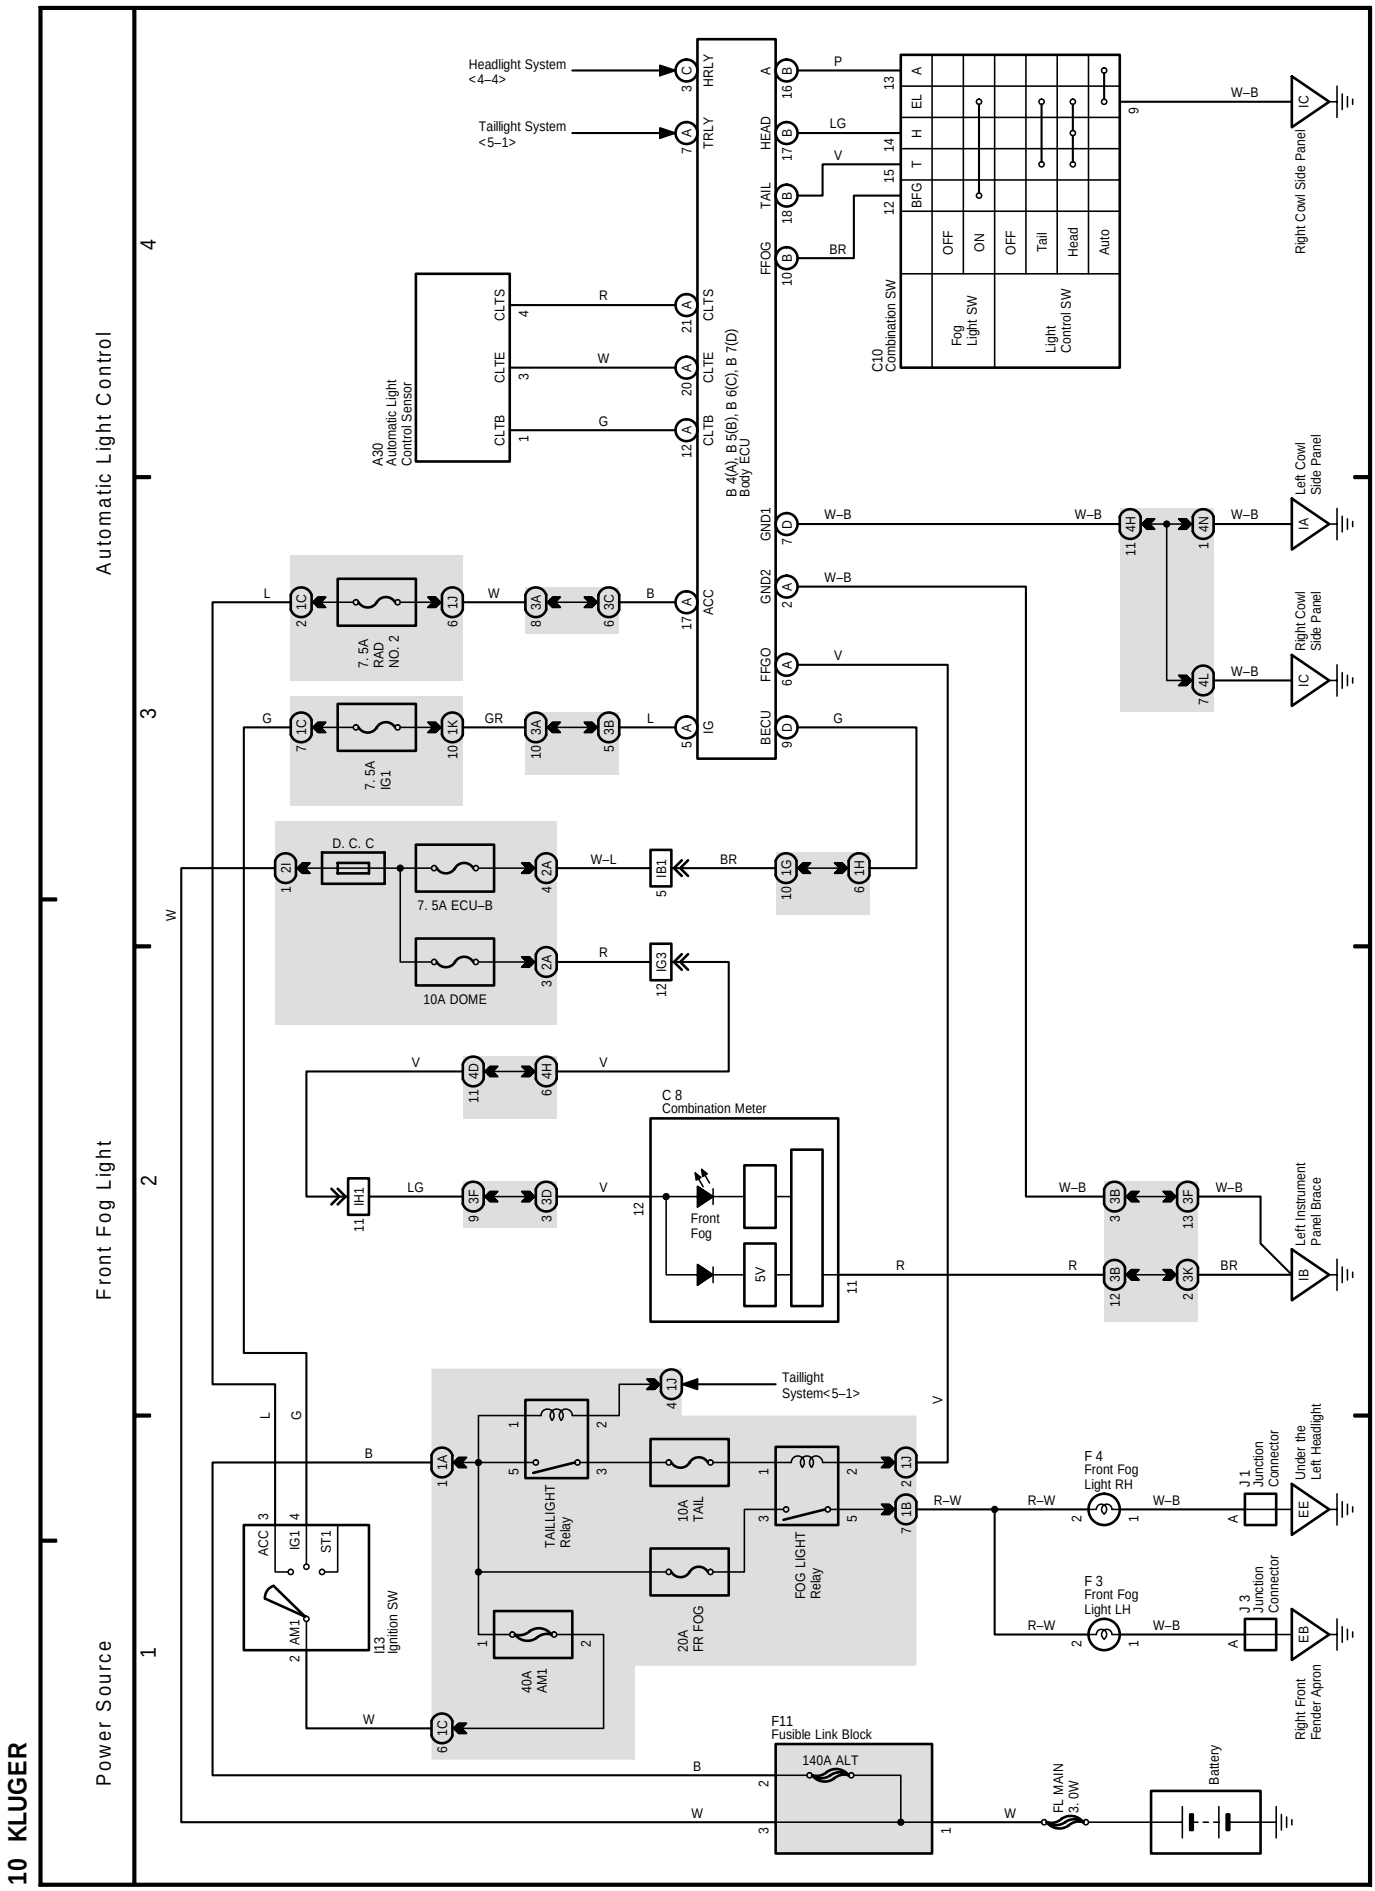

10 KLUGER
Power Source
Front Fog Light
Automatic Light Control
1
2
3
4
Headlight System <4–4>
Taillight System <5–1>
A30 Automatic Light Control Sensor
B 4(A), B 5(B), B 6(C), B 7(D) Body ECU
C10 Combination SW
Fog Light SW
Light Control SW
OFF
ON
Tail
Head
Auto
Right Cowl Side Panel
Left Cowl Side Panel
Right Cowl Side Panel
7. 5A RAD NO. 2
7. 5A IG1
D. C. C
7. 5A ECU–B
10A DOME
C 8 Combination Meter
Front Fog
Left Instrument Panel Brace
Taillight System<5–1>
TAILLIGHT Relay
10A TAIL
FOG LIGHT Relay
20A FR FOG
40A AM1
I13 Ignition SW
ACC
IG1
ST1
AM1
F 4 Front Fog Light RH
F 3 Front Fog Light LH
J 1 Junction Connector
J 3 Junction Connector
Under the Left Headlight
Right Front Fender Apron
F11 Fusible Link Block
140A ALT
FL MAIN 3. 0W
Battery