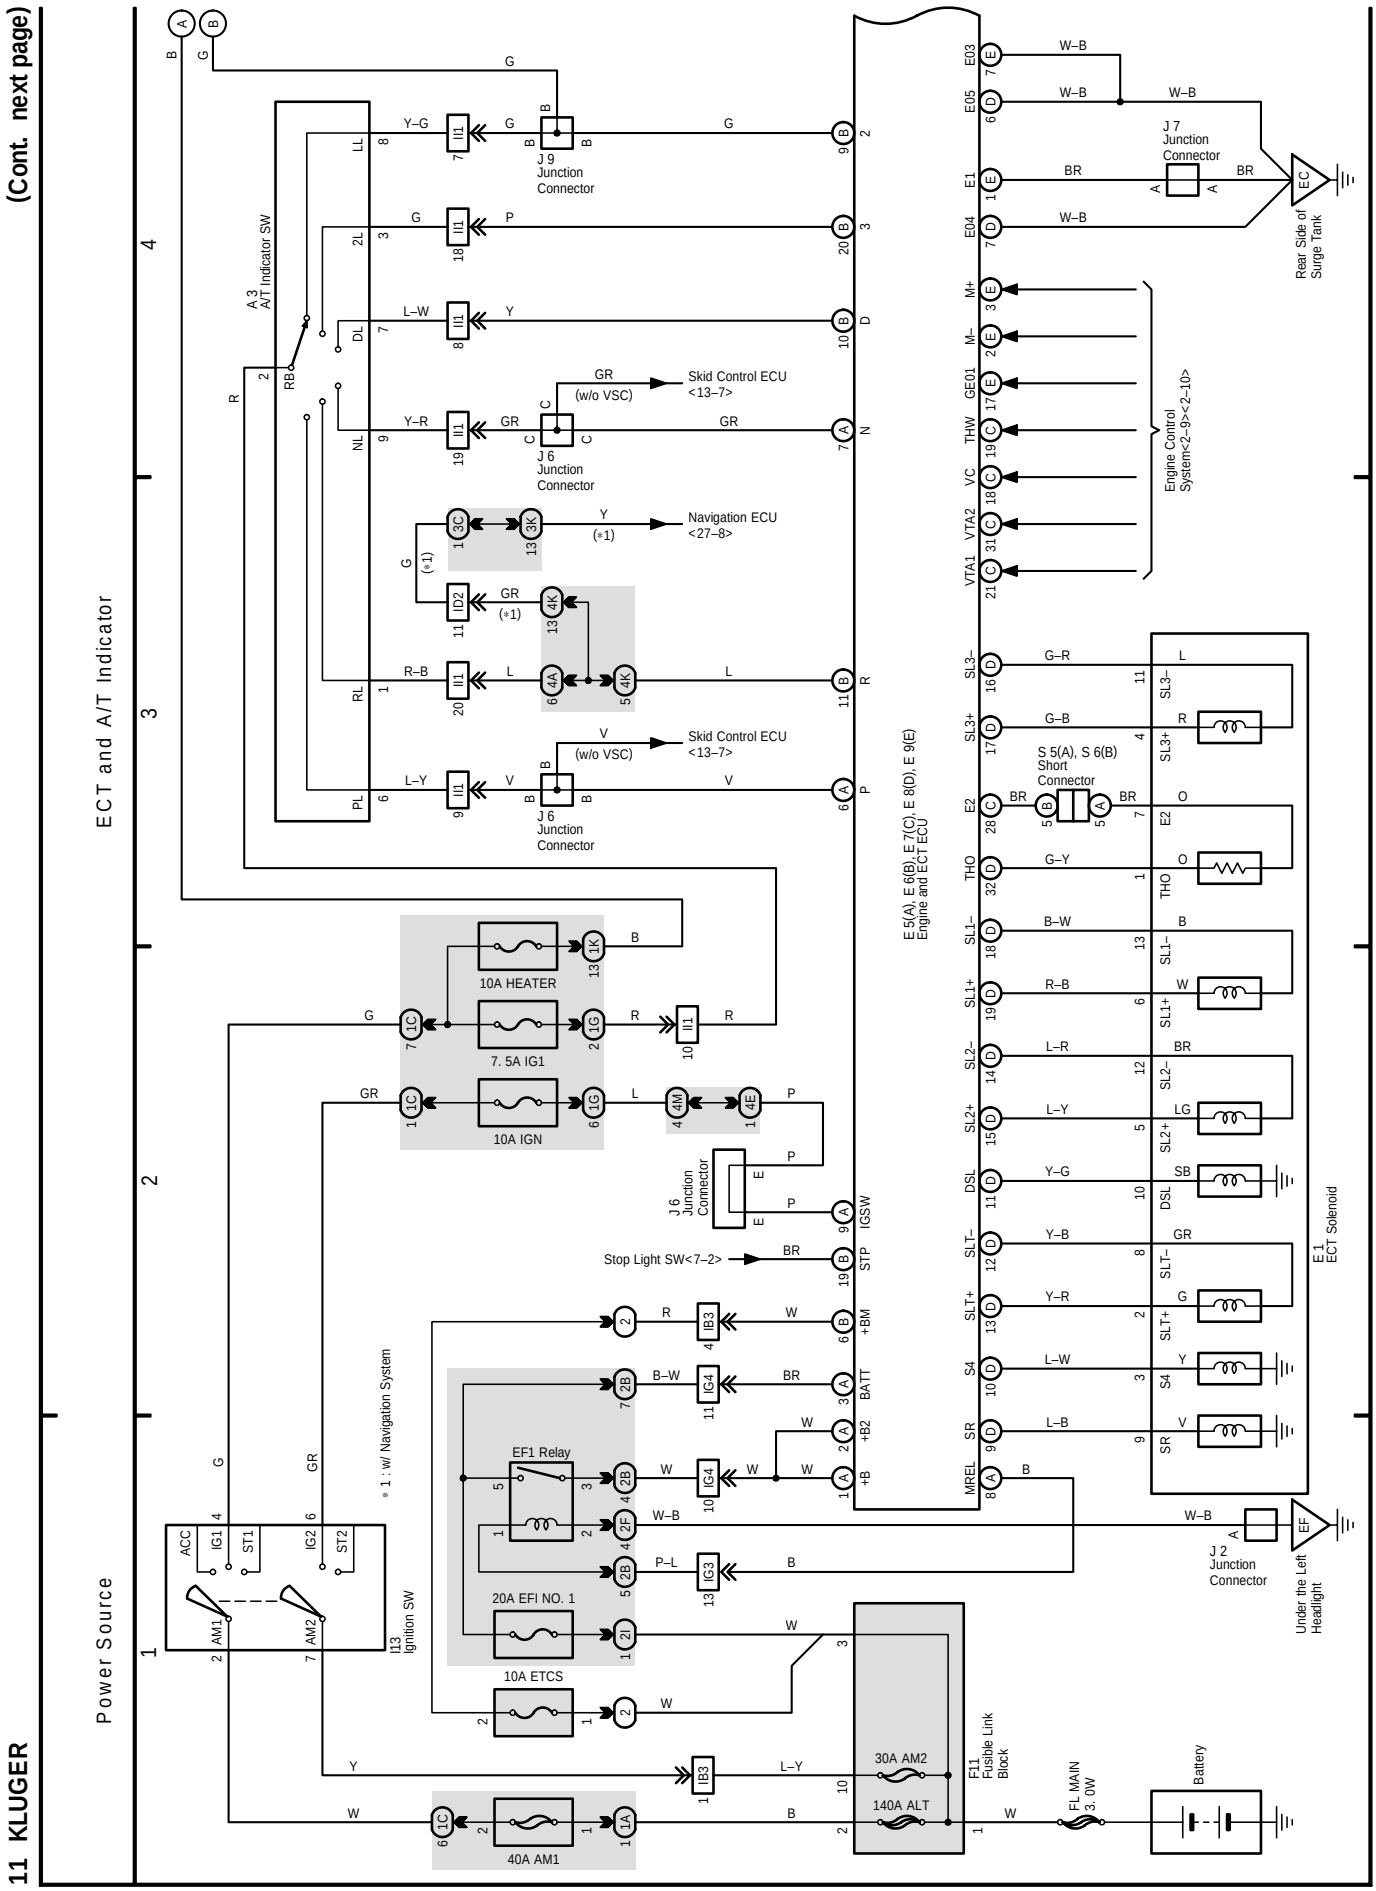
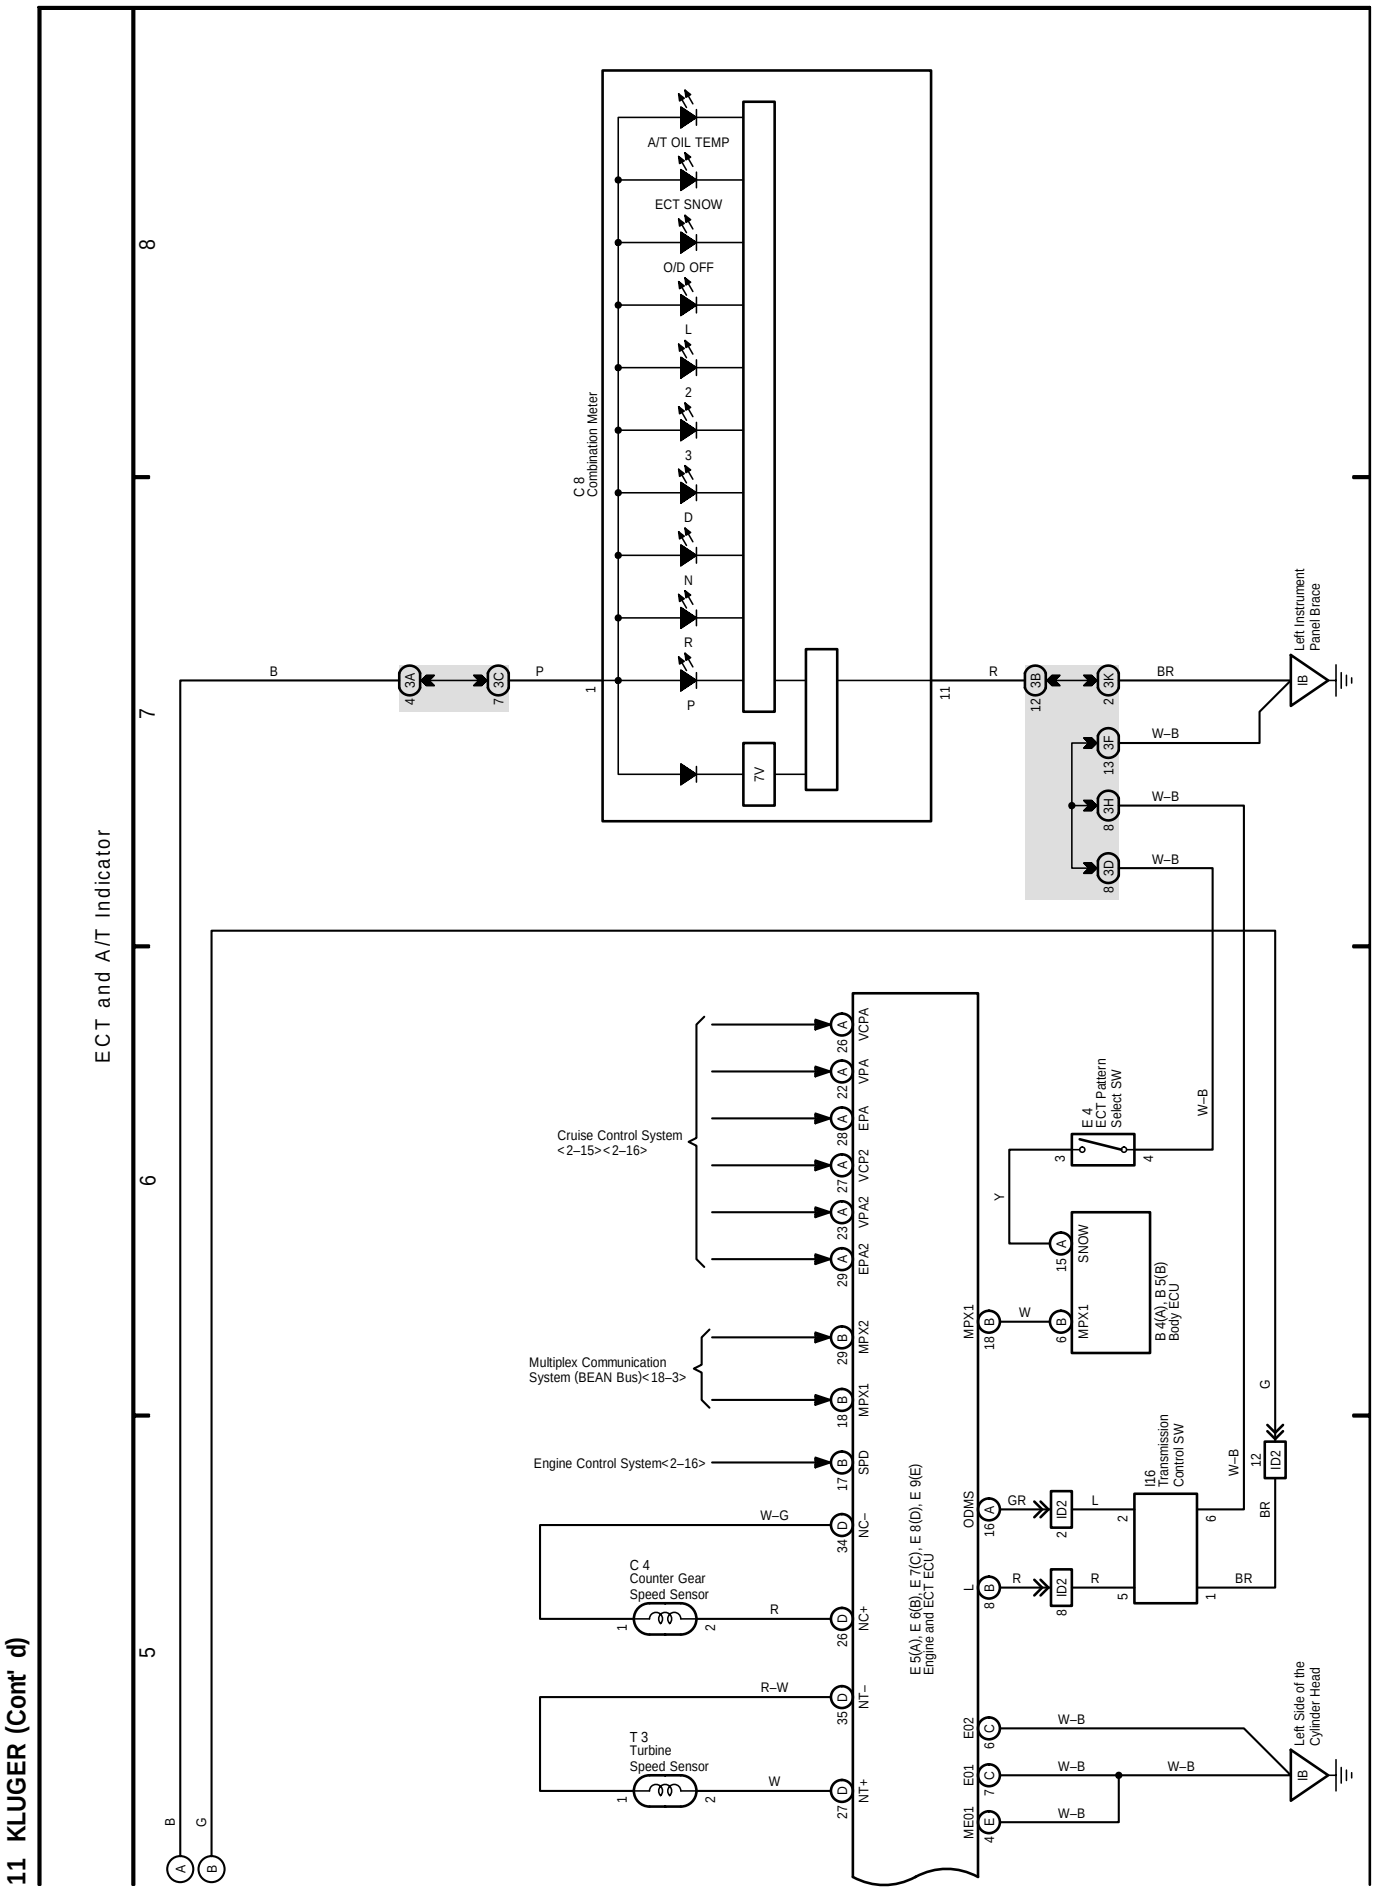

(Cont. next page)
11 KLUGER
Power Source
ECT and A/T Indicator
A 3 A/T Indicator SW
J 9 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 2 Junction Connector
S 5(A), S 6(B) Short Connector
Skid Control ECU <13–7>
(w/o VSC)
Navigation ECU <27–8>
Stop Light SW<7–2>
Engine Control System<2–9><2–10>
Rear Side of Surge Tank
Under the Left Headlight
E 5(A), E 6(B), E 7(C), E 8(D), E 9(E) Engine and ECT ECU
E1 ECT Solenoid
I13 Ignition SW
EF1 Relay
10A HEATER
7. 5A IG1
10A IGN
20A EFI NO. 1
10A ETCS
40A AM1
30A AM2
140A ALT
FL1 Fusible Link Block
FL MAIN 3. 0W
Battery
* 1 : w/ Navigation System


11 KLUGER (Cont' d)
ECT and A/T Indicator
A/T OIL TEMP
ECT SNOW
O/D OFF
L
2
3
D
N
R
P
7V
C 8
Combination Meter
Left Instrument Panel Brace
E 4
ECT Pattern Select SW
B 4(A), B 5(B)
Body ECU
SNOW
MPX1
Cruise Control System
<2–15><2–16>
Multiplex Communication System (BEAN Bus)< 18–3>
Engine Control System< 2–16>
VCPA
VPA
EPA
VCP2
VPA2
EPA2
MPX2
SPD
NC–
NC+
NT–
NT+
ODMS
E02
E01
ME01
E 5(A), E 6(B), E 7(C), E 8(D), E 9(E)
Engine and ECT ECU
C 4
Counter Gear Speed Sensor
T 3
Turbine Speed Sensor
I16
Transmission Control SW
Left Side of the Cylinder Head