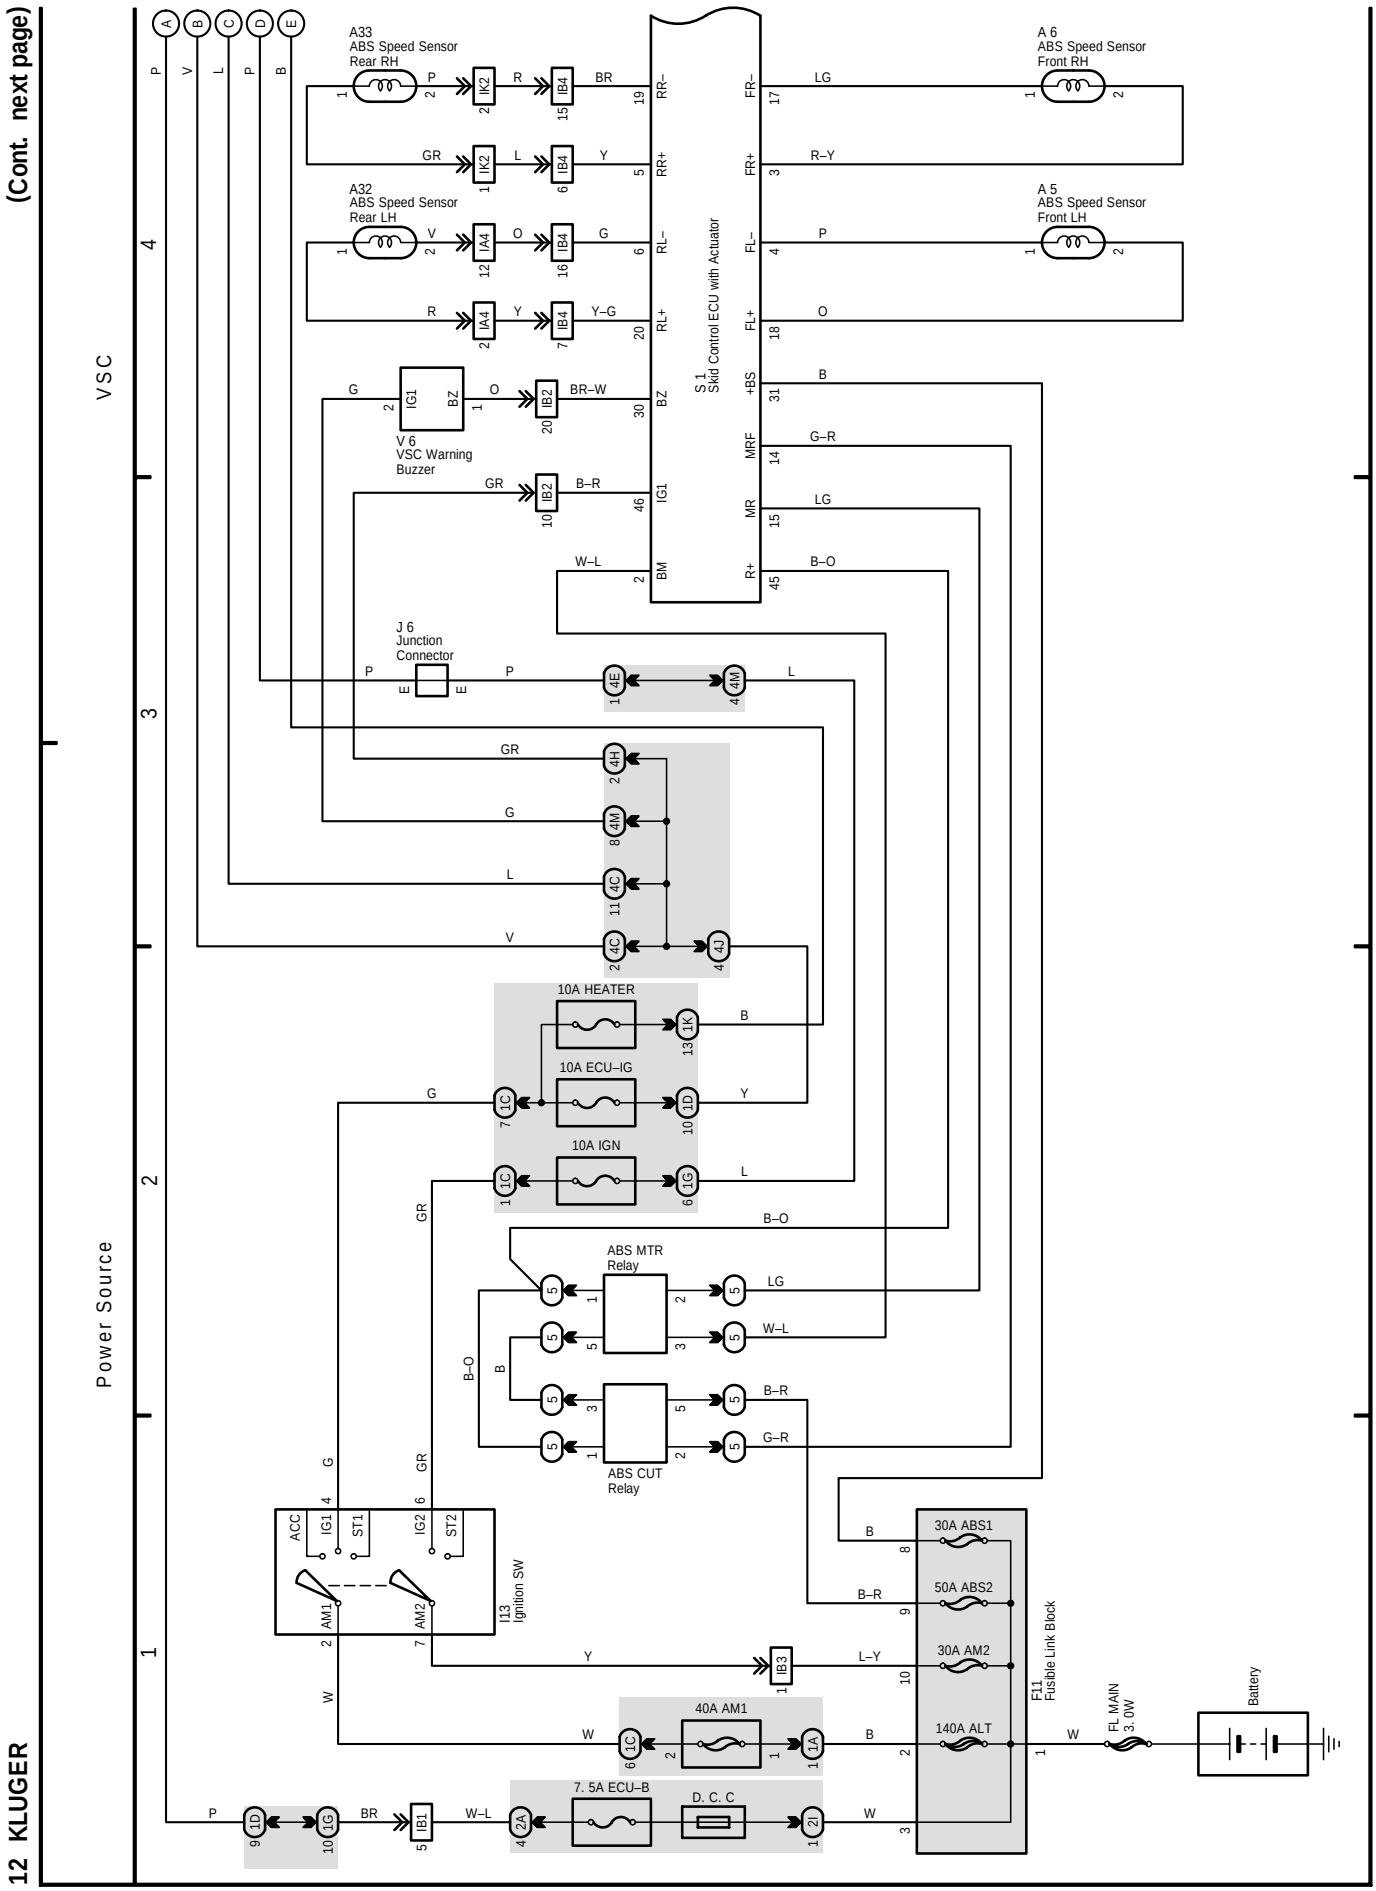
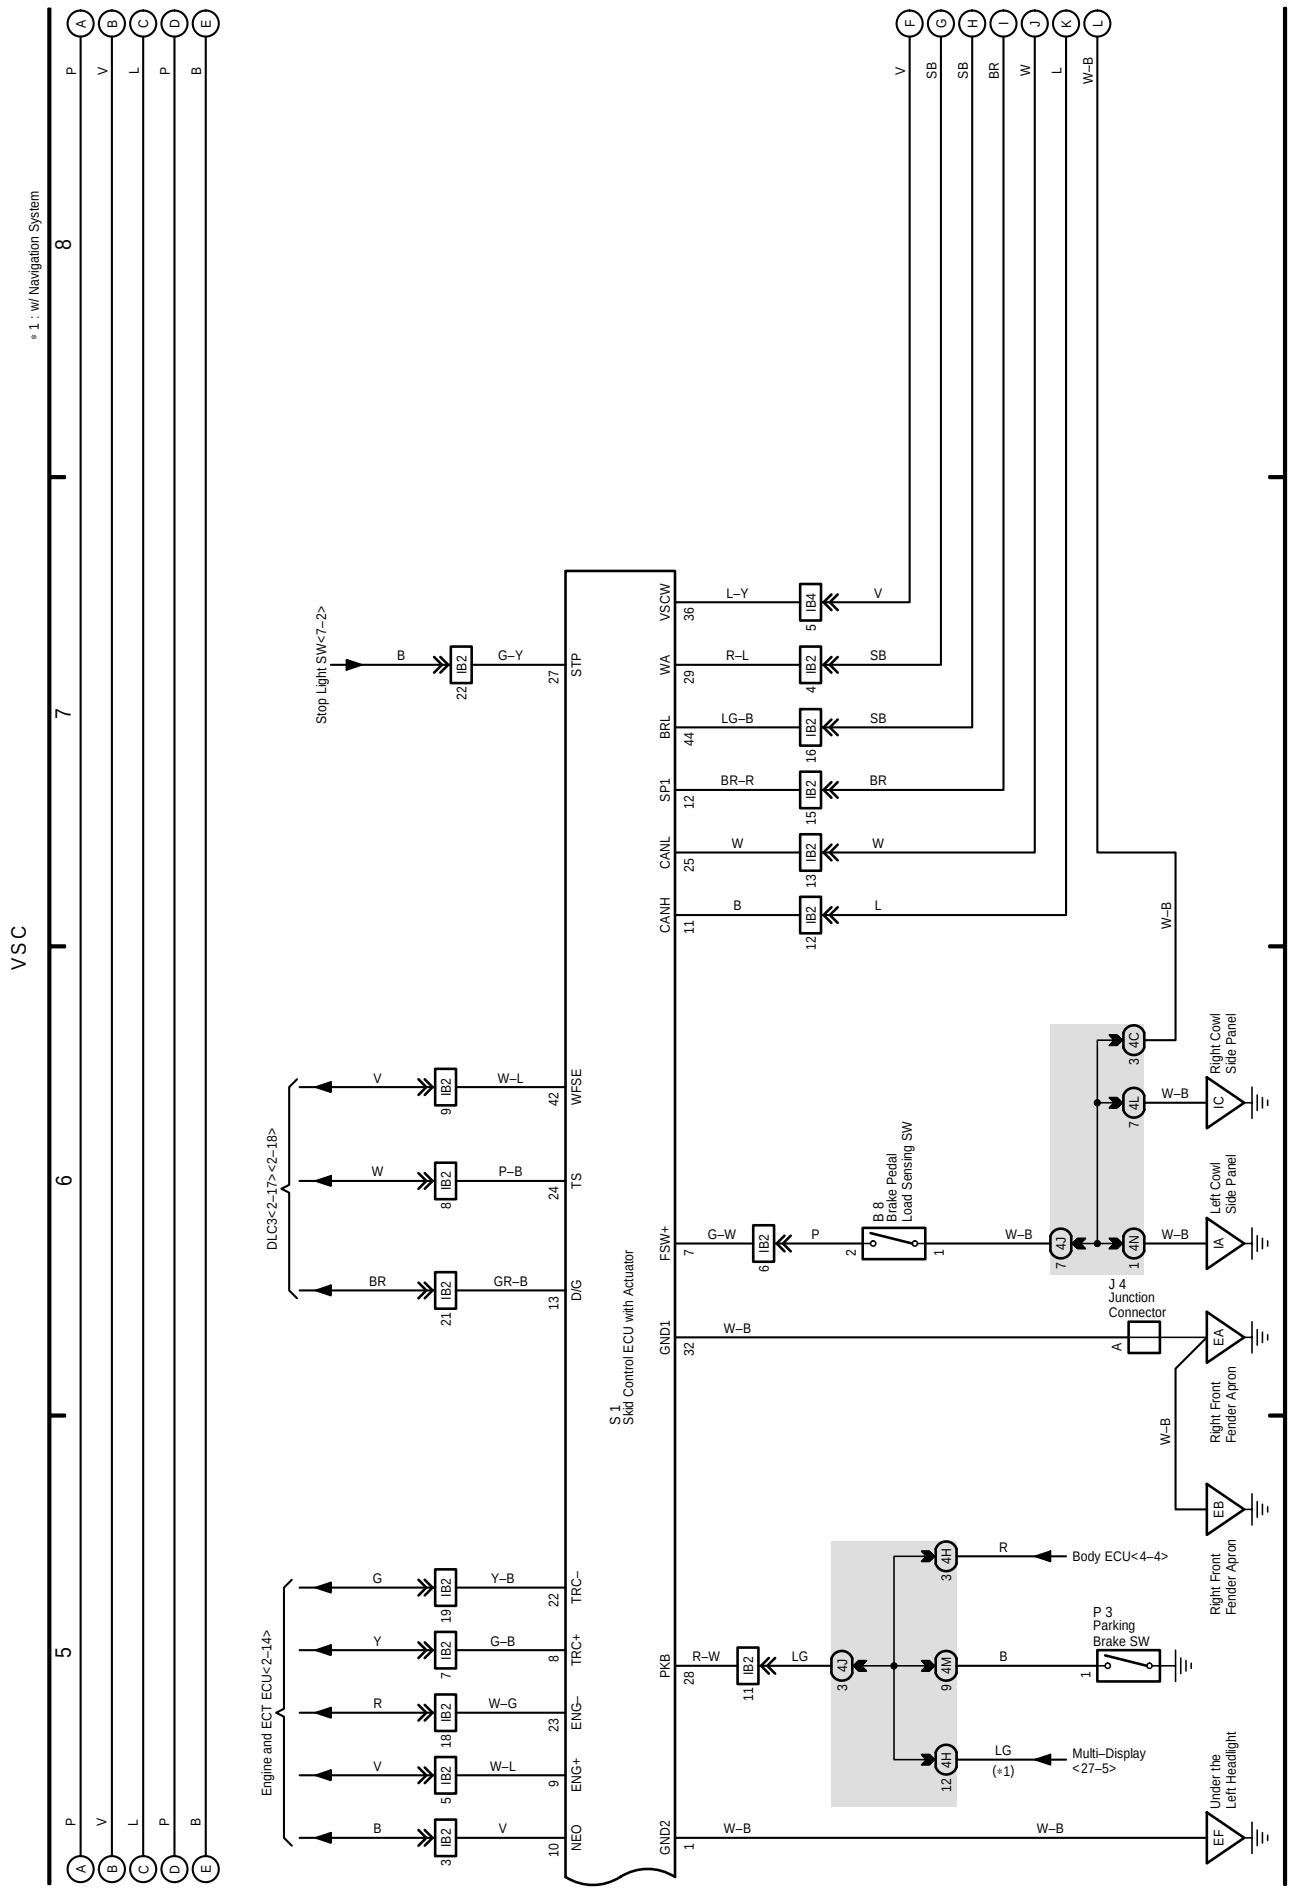
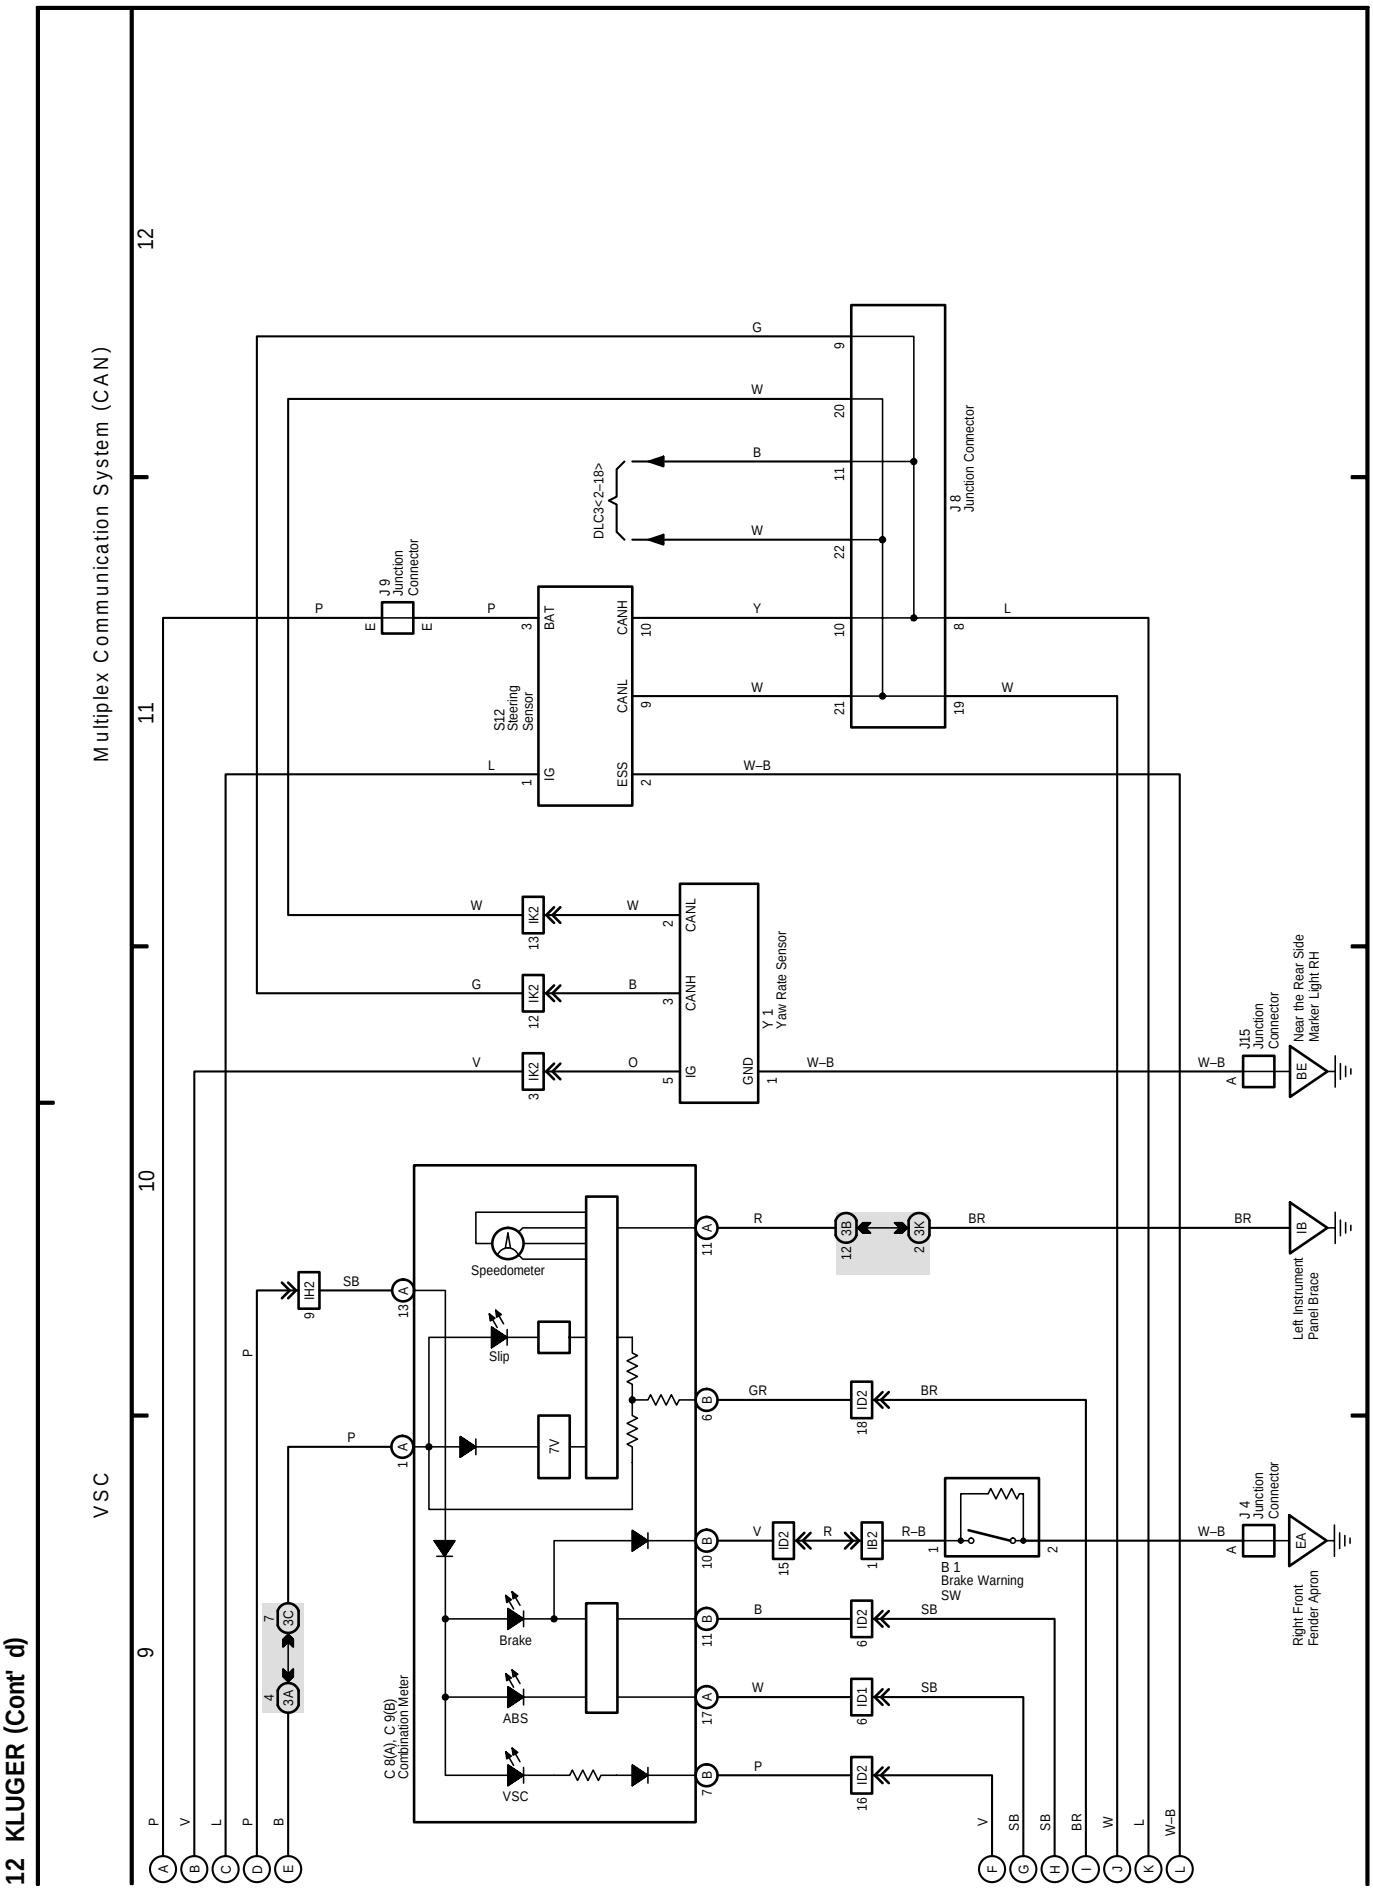

(Cont. next page)
VSC
Power Source
12 KLUGER
A33
ABS Speed Sensor
Rear RH
A32
ABS Speed Sensor
Rear LH
A 6
ABS Speed Sensor
Front RH
A 5
ABS Speed Sensor
Front LH
S 1
Skid Control ECU with Actuator
V 6
VSC Warning
Buzzer
J 6
Junction
Connector
10A HEATER
10A ECU–IG
10A IGN
ABS MTR
Relay
ABS CUT
Relay
ACC
IG1
ST1
IG2
ST2
AM1
AM2
13
Ignition SW
30A ABS1
50A ABS2
30A AM2
140A ALT
F11
Fusible Link Block
FL MAIN
3. 0W
Battery
40A AM1
7. 5A ECU–B
D. C. C

12 KLUGER (Cont' d)

(Cont. next page)




12 KLUGER (Cont' d)
VSC
Multiplex Communication System (CAN)
12
11
10
9
J8 Junction Connector
J9 Junction Connector
DLC3<2-18>
S12 Steering Sensor
BAT
CANH
CANL
IG
ESS
Y1 Yaw Rate Sensor
GND
J15 Junction Connector
Near the Rear Side Marker Light RH
Speedometer
Slip
Brake
ABS
VSC
7V
C 8(A), C 9(B) Combination Meter
Left Instrument Panel Brace
B 1 Brake Warning SW
J4 Junction Connector
Right Front Fender Apron