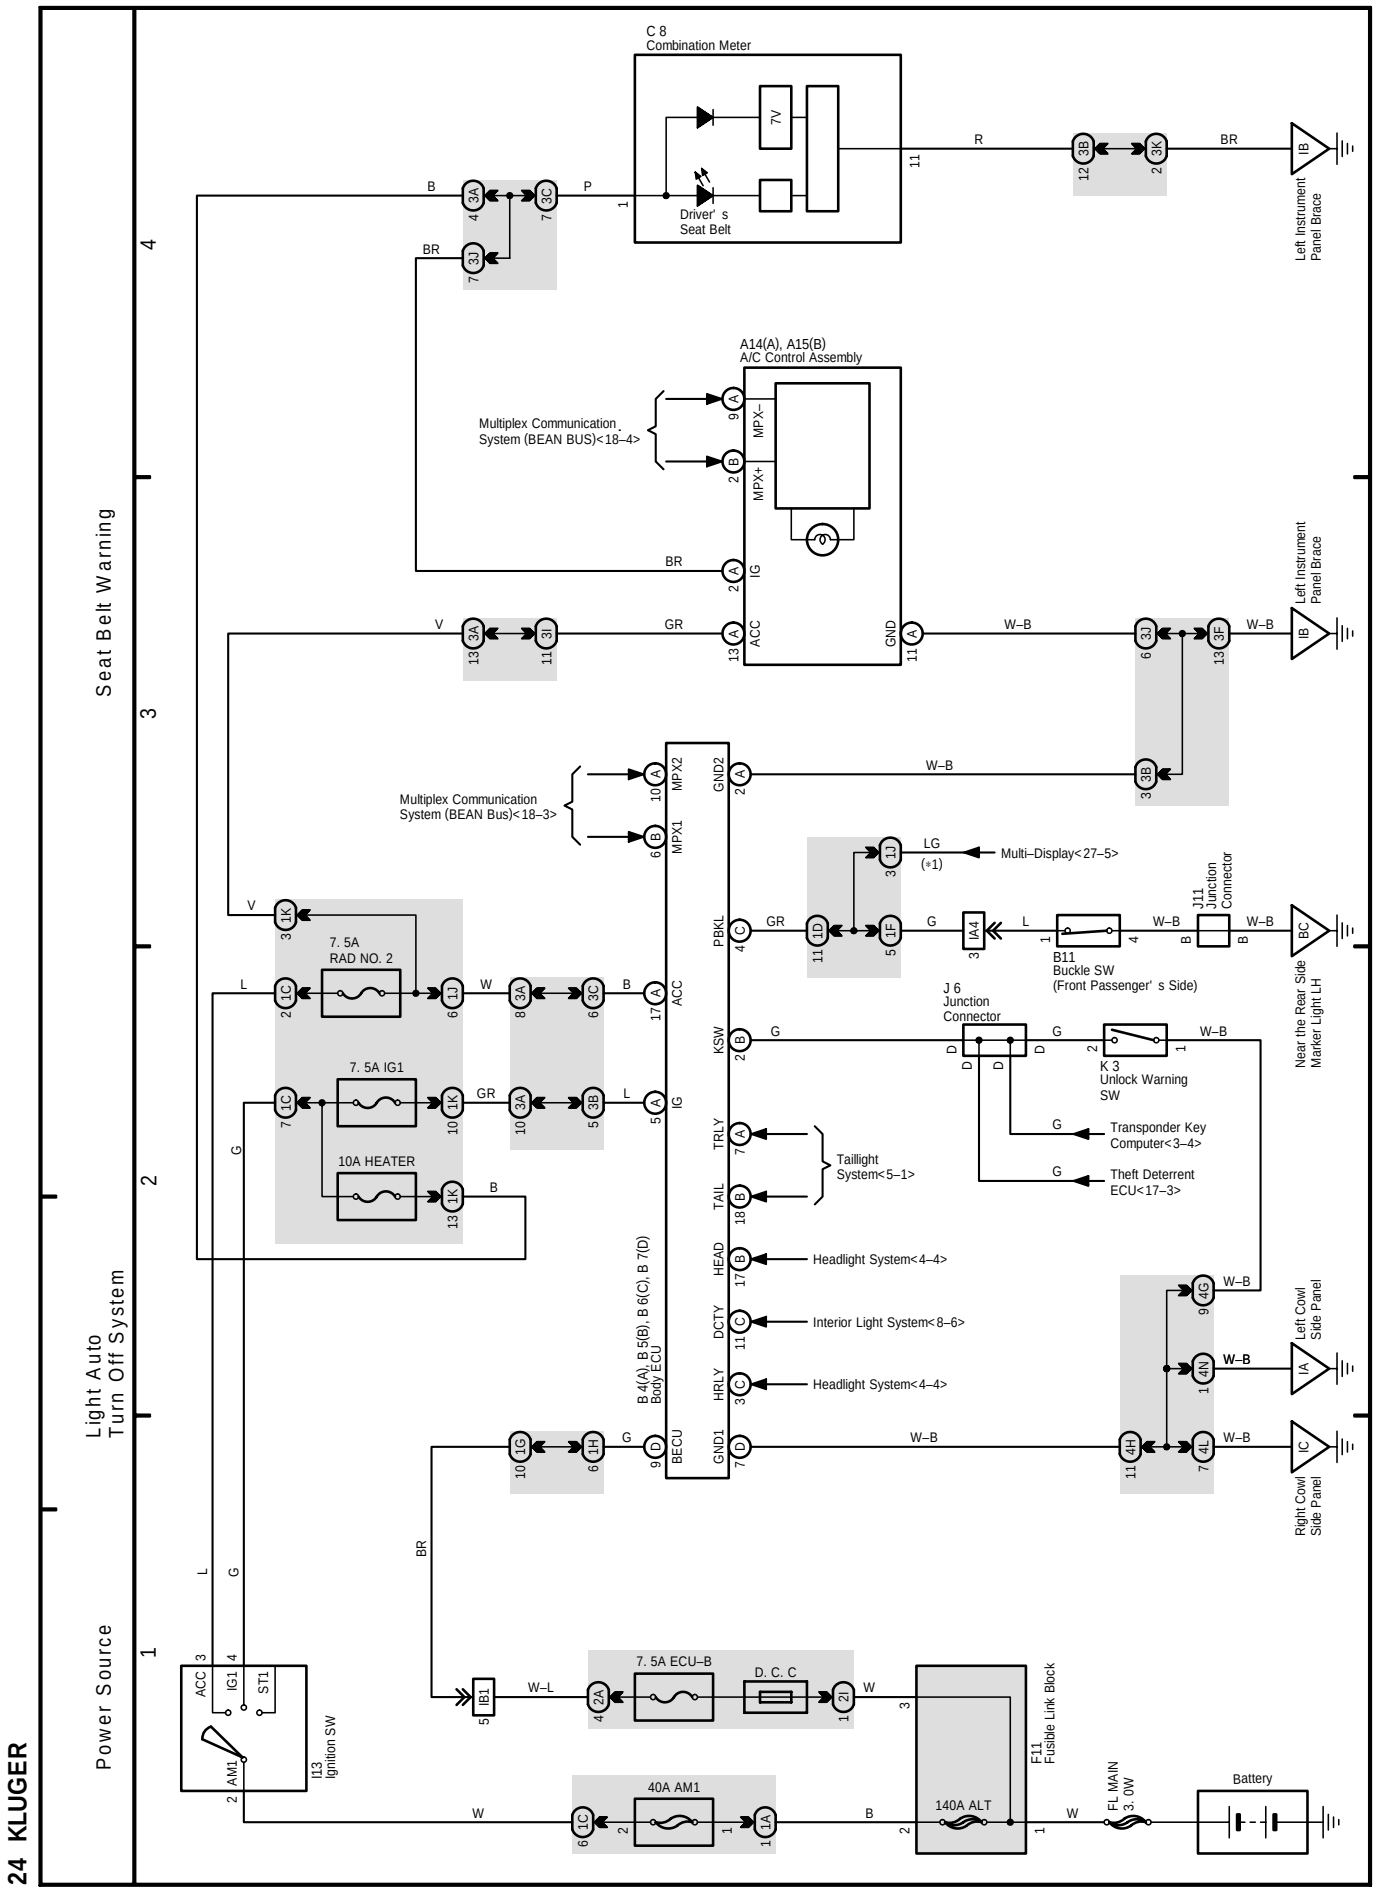

24 KLUGER
Power Source
Light Auto Turn Off System
Seat Belt Warning
C 8 Combination Meter
7V
Driver' s Seat Belt
Left Instrument Panel Brace
A14(A), A15(B) A/C Control Assembly
Multiplex Communication System (BEAN BUS)<18–4>
MPX–
MPX+
IG
ACC
GND
Multiplex Communication System (BEAN Bus)<18–3>
MPX2
MPX1
GND2
7. 5A RAD NO. 2
7. 5A IG1
10A HEATER
ACC
IG
PBKL
KSW
TRLY
TAIL
HEAD
DCTY
HRLY
GND1
B 4(A), B 5(B), B 6(C), B 7(D) Body ECU
BECU
LG (*1)
Multi–Display<27–5>
J11 Junction Connector
B11 Buckle SW (Front Passenger' s Side)
Near the Rear Side Marker Light LH
J 6 Junction Connector
K 3 Unlock Warning SW
Transponder Key Computer<3–4>
Theft Deterrent ECU<17–3>
Taillight System<5–1>
Headlight System<4–4>
Interior Light System<8–6>
Headlight System<4–4>
Left Cowl Side Panel
Right Cowl Side Panel
ACC
IG1
ST1
AM1
I13 Ignition SW
7. 5A ECU–B
D. C. C
40A AM1
140A ALT
F11 Fusible Link Block
FL MAIN 3. 0W
Battery