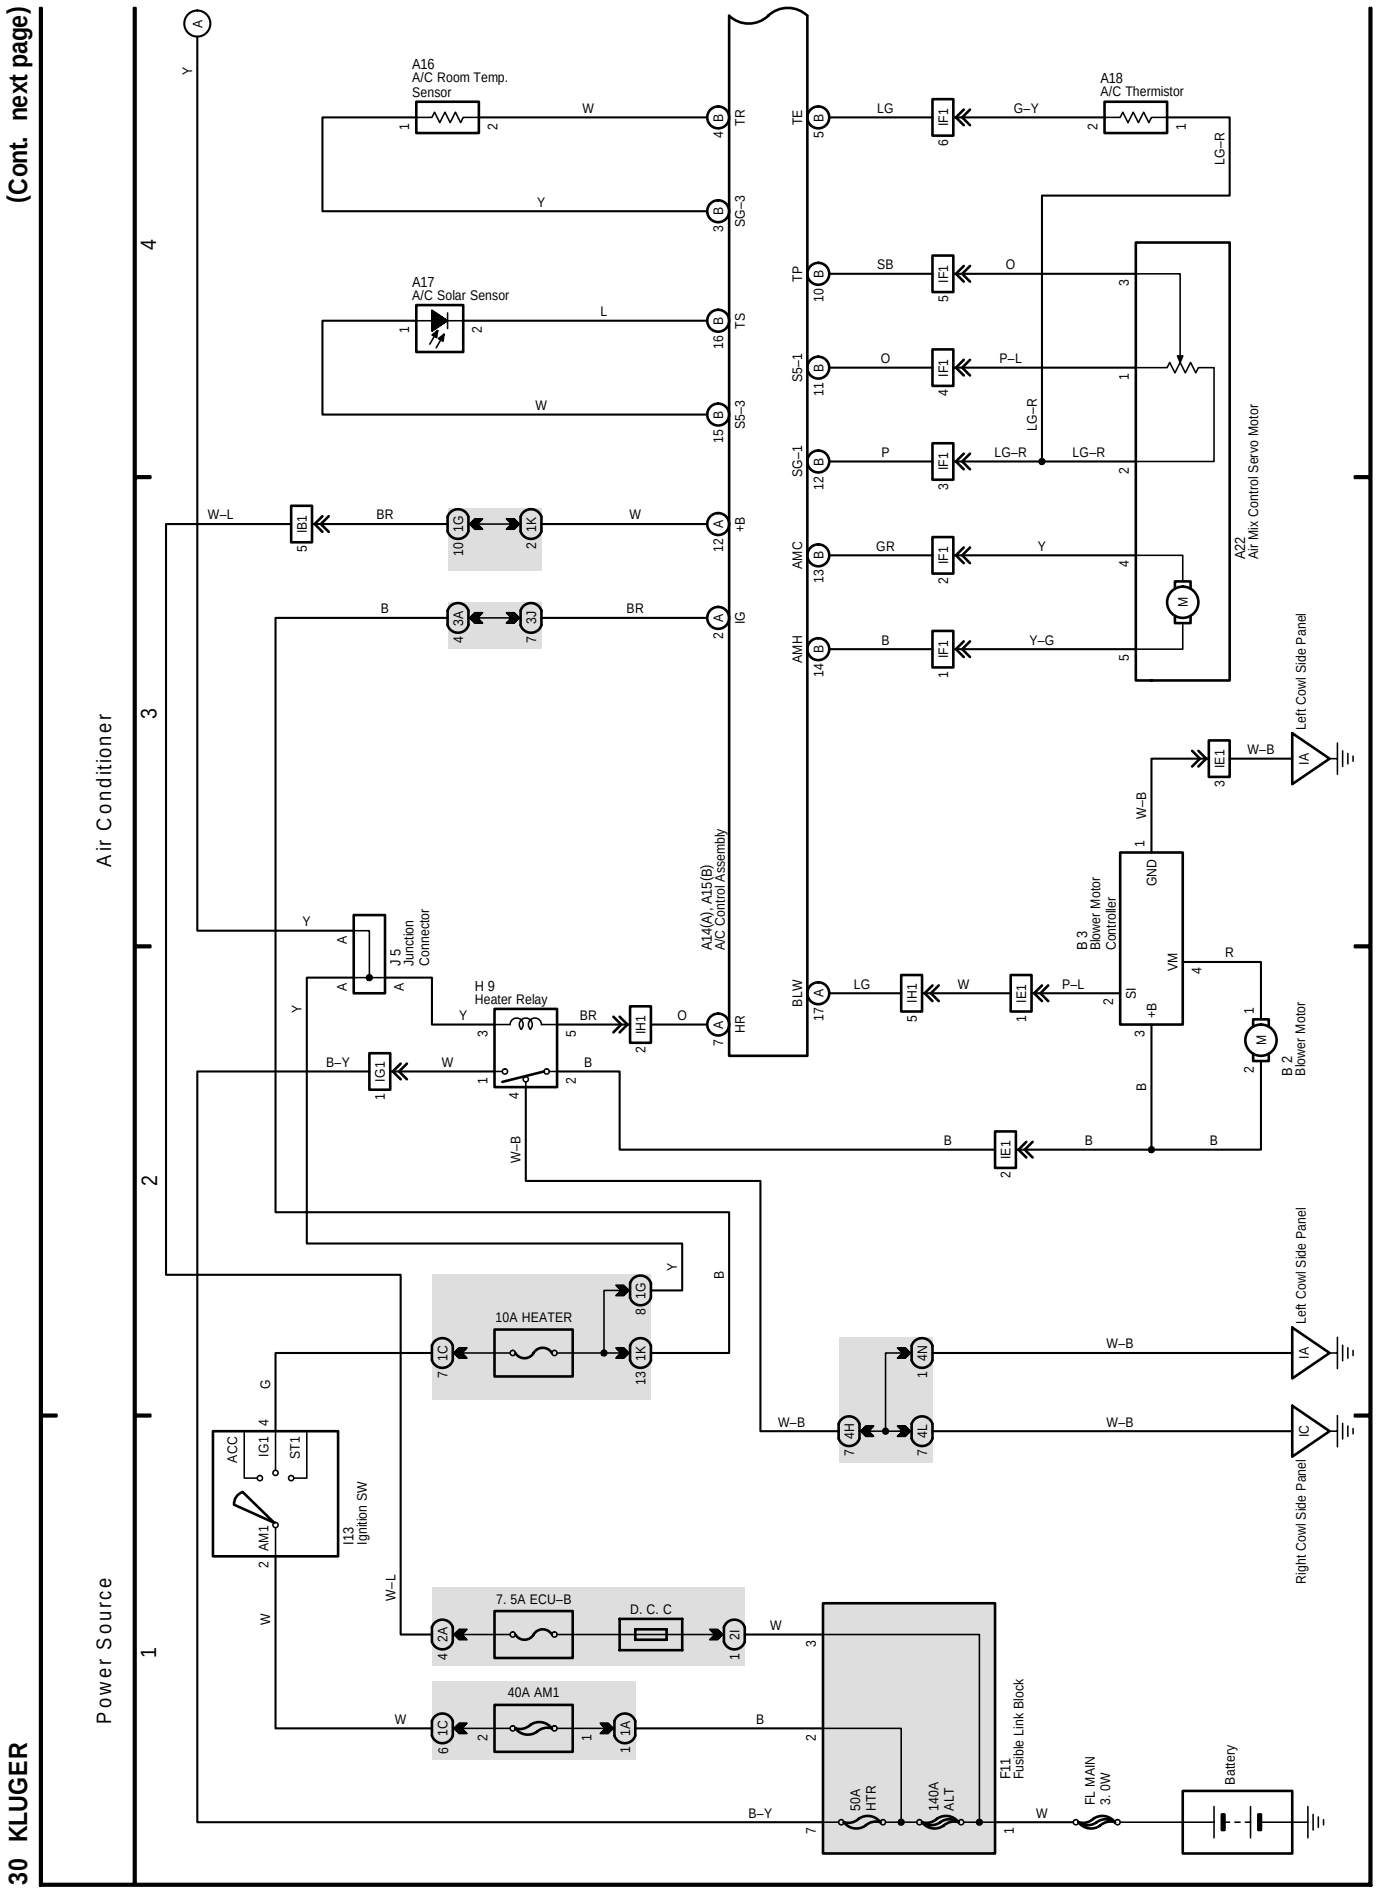
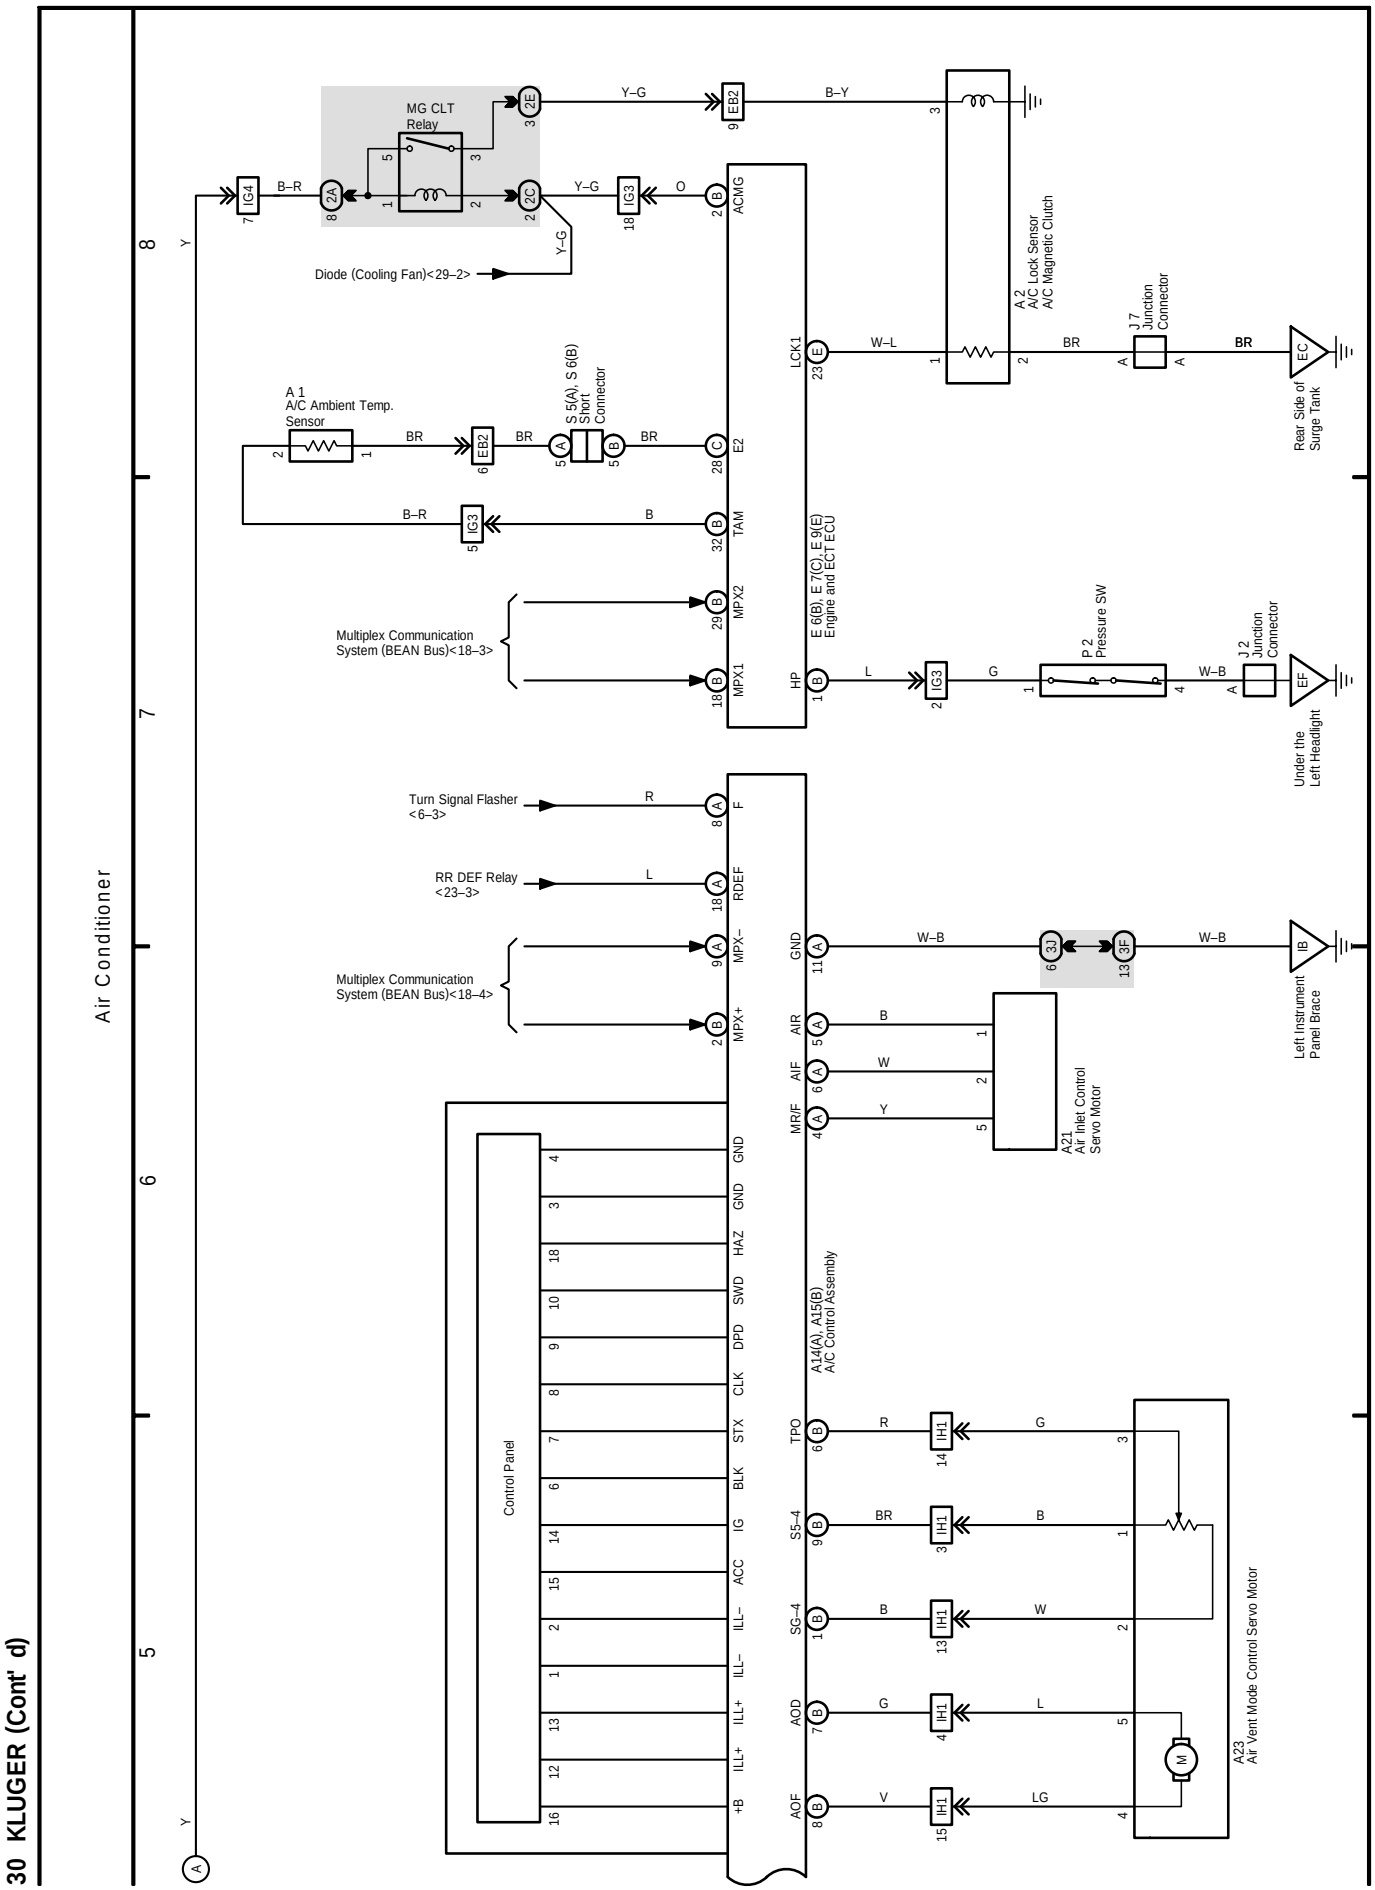

(Cont. next page)
30 KLUGER
Power Source
Air Conditioner
A16
A/C Room Temp. Sensor
A17
A/C Solar Sensor
A18
A/C Thermistor
A22
Air Mix Control Servo Motor
A14(A), A15(B)
A/C Control Assembly
J5
Junction Connector
H 9
Heater Relay
B 3
Blower Motor Controller
B 2
Blower Motor
I13
Ignition SW
10A HEATER
7. 5A ECU–B
D. C. C
40A AM1
F11
Fusible Link Block
50A HTR
140A ALT
FL MAIN
3. 0W
Battery
Left Cowl Side Panel
Right Cowl Side Panel


30 KLUGER (Cont' d)
Air Conditioner
MG CLT Relay
Diode (Cooling Fan)<29–2>
A 1 A/C Ambient Temp. Sensor
S 5(A), S 6(B) Short Connector
A 2 A/C Lock Sensor A/C Magnetic Clutch
J 7 Junction Connector
Rear Side of Surge Tank
E 6(B), E 7(C), E 9(E) Engine and ECT ECU
P 2 Pressure SW
J 2 Junction Connector
Under the Left Headlight
Multiplex Communication System (BEAN Bus)<18–3>
Multiplex Communication System (BEAN Bus)<18–4>
Turn Signal Flasher <6–3>
RR DEF Relay <23–3>
Left Instrument Panel Brace
A21 Air Inlet Control Servo Motor
A14(A), A15(B) A/C Control Assembly
Control Panel
A23 Air Vent Mode Control Servo Motor