
■AUTOMATIC LIGHT CONTROL SYSTEM

- This system has been provided as an optional equipment.
- When the light control switch is at the AUTO position, the automatic light control sensor detects the ambient light and automatically turns the headlights and taillights ON or OFF accordingly.
- The automatic light control sensor is integrated with the solar sensor that is used in the automatic air conditioning system.
- This system is controlled by the Body ECU.

▶ System Diagram ◀

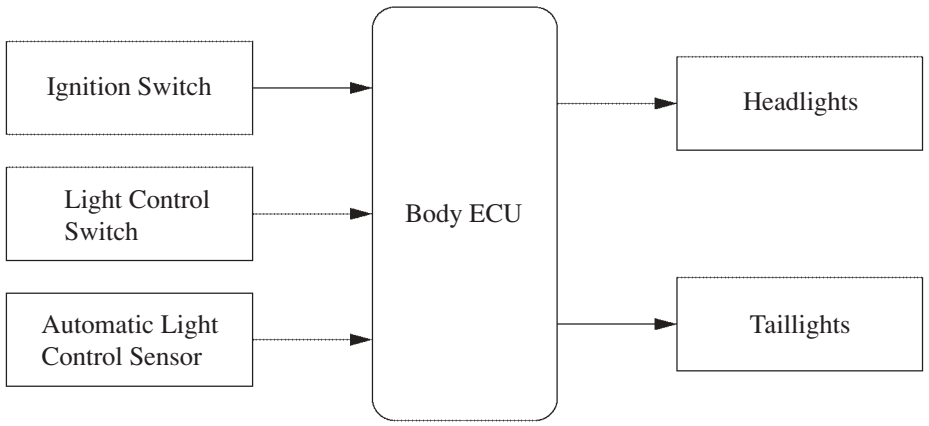

241BE29

BE

■LIGHT AUTO TURN-OFF SYSTEM

- When the headlights, front fog lights and taillights are illuminated through the operation of the light control switch, if the ignition switch is turned OFF and driver's door is opened, this system turns OFF the headlights, front fog lights and taillights.
- This system is controlled by the Body ECU.