
■REAR HEATER

1. General


The rear heater for rear No.2 seat is optional equipment only for the models with rear No.2 seat.

▶ Wiring Diagram ◀

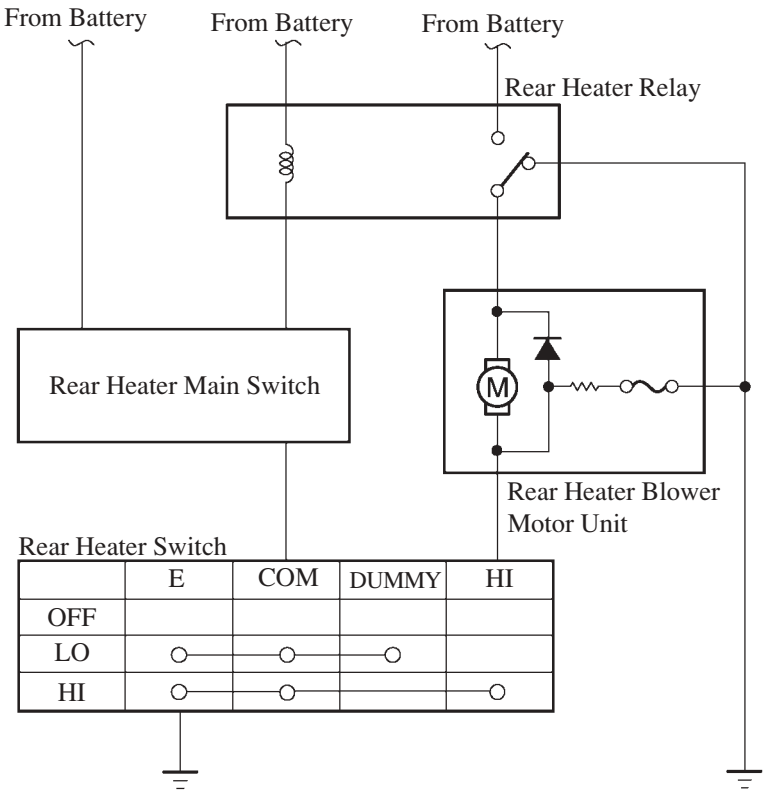


D012BE44

2. Layout of Components

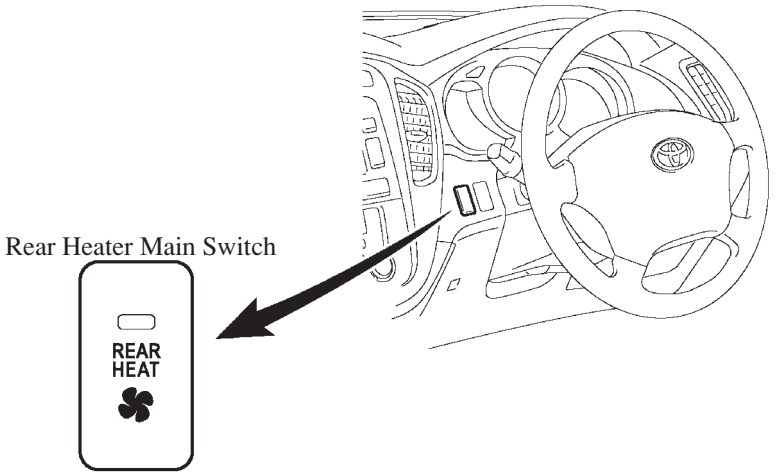

D012BE41

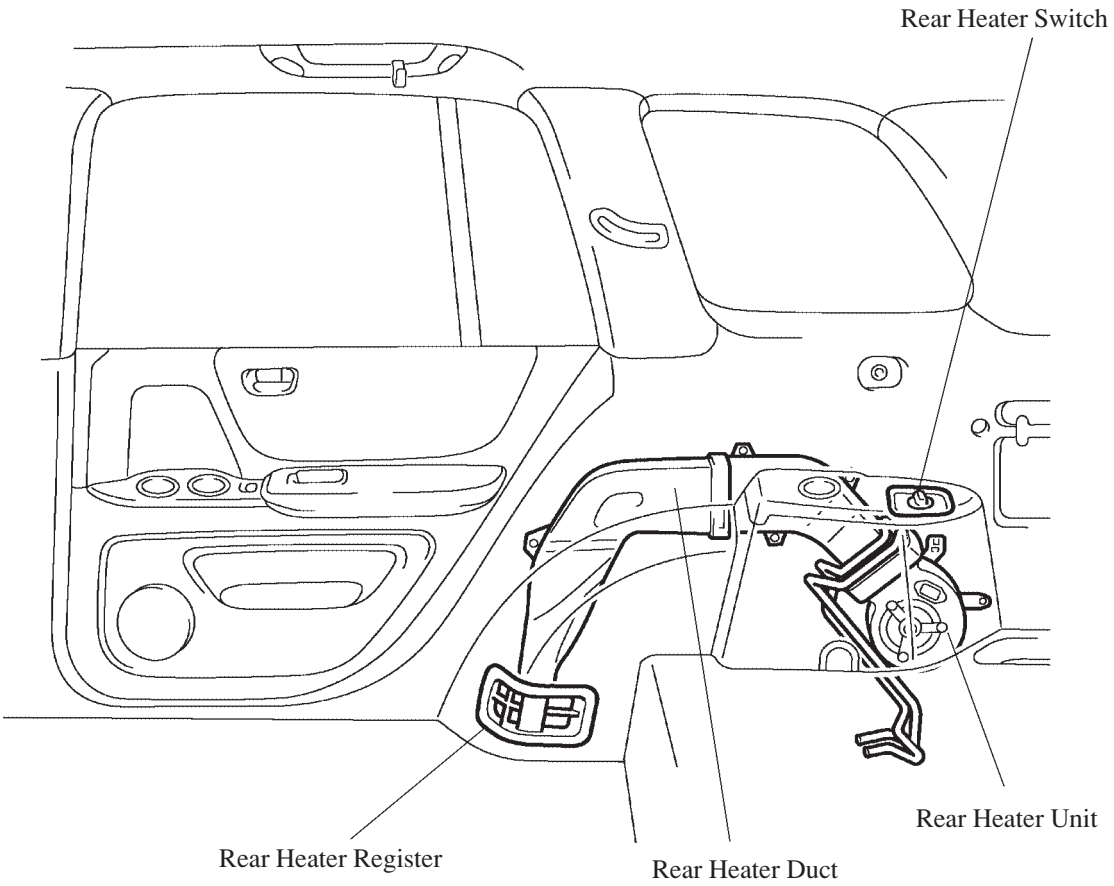

257HL109


3. Construction and Operation

Rear Heater Control Switch

- The rear heater main switch has been provided in the instrument panel.
- The rear heater switch has been provided on the right deck cover of the rear No. 2 seat so that the heater can be controlled and select blower speed (LO or HI) from the rear No. 2 seat.
- The rear heater will not operate even if the rear heater switch is operated with the rear heater main switch OFF.



Rear Heater Main Switch

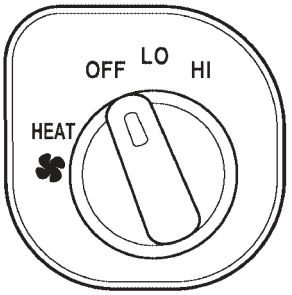


Rear Heater Switch

257HL110

Rear Heater Control Unit

The rear heater unit has been located inside the right deck side trim.

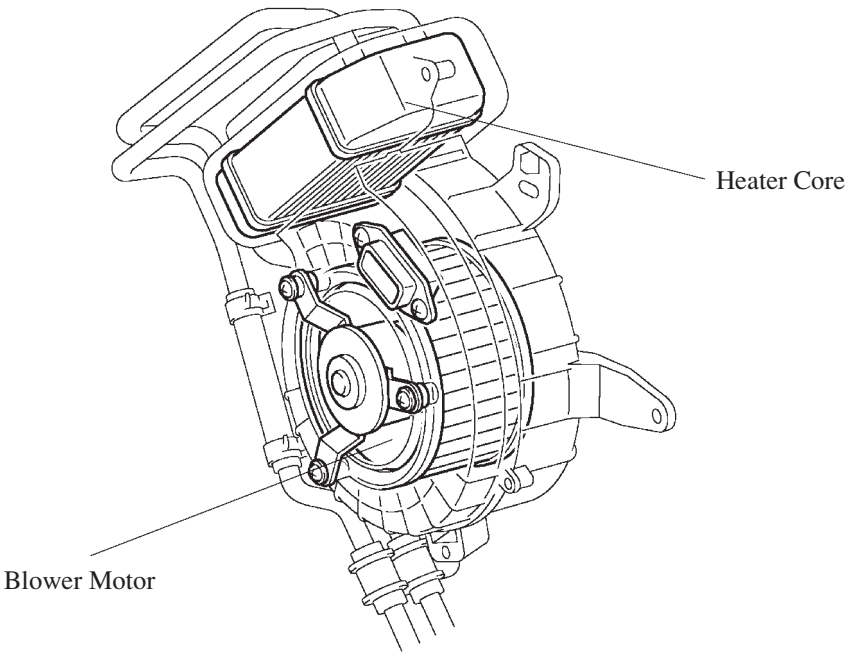

257HL111

BE