■FUNCTION OF MAIN COMPONENTS

1. Display Portion


The multi-information display has the following functions.

Item	Display Contents	Outline
Ambient Temp. Display	 D012BE13	Displays ambient temperature in accordance with the ambient temperature sensor signal.
Average Vehicle Speed After Starting	 D012BE09	● Displays the value that has been calculated by the meter ECU, which is based on the elapsed time and driven distance after the ignition switch has been turned ON or the INFO switch has been pressed for 0.8 seconds or longer. ● The display updates every 10 seconds.
Average Fuel Consumption After Refueling	 D012BE10	● Displays the value that has been calculated by the meter ECU, which is based on the driven distance after refueling and the fuel consumption volume (fuel injection signal from No. 1 injector). ● The meter ECU determines that the vehicle has been refueled in accordance with the signal from the fuel sender gauge. ● The display updates every 10 seconds.
Instant Fuel Consumption	 D012BE11	● Displays the value that has been calculated by the meter ECU, which is based on the driven distance and the fuel consumption volume (fuel injection signal from No. 1 injector), provided that the ignition switch is turned ON. ● The display updates every 2 seconds.
Elapsed Time	 D012BE12	Displays the length of time that has elapsed from the time the ignition switch has been turned ON after the battery terminals have been connected.

2. Switch

- The contents of a trip information display can be changed by pressing the INFO switch while the ignition switch is ON.
- Pressing the INFO switch for 0.8 seconds or longer resets the display contents of average vehicle speed mode.

▶ Sequence for Switching the Contents of a Trip Information Display ◀

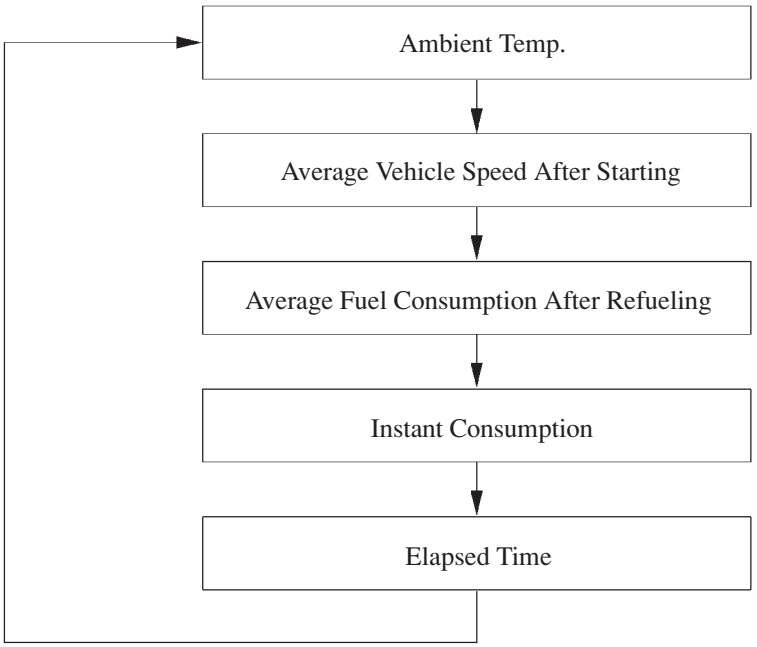

D012BE14