










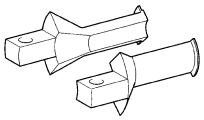








AUTOMATIC TRANSMISSION / TRANS




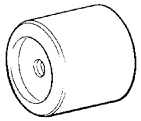



022FX–01






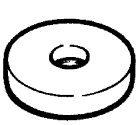
PREPARATION











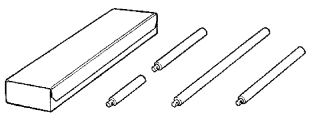
SST

	09214–76011	Crankshaft Pulley Replacer	FRONT DIFFERENTIAL ASSY(U151F)
	09215–00013	Crankshaft Bearing Remover & Replacer Set B	FRONT DIFFERENTIAL ASSY(U151E)
	(09215–00471)	Camshaft Bearing Remover & Replacer	FRONT DIFFERENTIAL ASSY(U151E)
	09223–15020	Oil Seal & Bearing Replacer	FRONT DIFFERENTIAL ASSY(U151E) FRONT DIFFERENTIAL ASSY(U151F)
	09223–15030	Oil Seal & Bearing Replacer	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	09308–00010	Oil Seal Puller	FRONT DIFFERENTIAL ASSY(U151E) OIL PUMP ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	09316–12010	Transfer Bearing Replacer	FRONT DIFFERENTIAL ASSY(U151E)
	09316–20011	Transfer Bearing Replacer	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	09350–32014	TOYOTA Automatic Transmission Tool Set	OIL PUMP ASSY(U151E/U151F) UNDERDRIVE CLUTCH ASSY(U151E/U151F)
	(09351–32070)	No.2 Piston Spring Compressor	UNDERDRIVE CLUTCH ASSY(U151E/U151F)
	(09351–32140)	Oil Seal Replacer	OIL PUMP ASSY(U151E/U151F)
	09387–00020	Direct Clutch Wrench	AUTOMATIC TRANSAXLE ASSY(U151E/U151F) FORWARD CLUTCH ASSY(U151E/U151F) DIRECT CLUTCH ASSY(U151E/U151F)

	09387–00030	Counter Drive Gear Holding Tool	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	09387–00041	Bearing Puller Assembly	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09387–01010)	Claw No.1	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09387–01021)	Claw No.2	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09387–01030)	Pin	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09387–01040)	Bearing Puller Body	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	09387–00050	Under Drive Gear Puller	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	09387–00060	Second Brake Wrench	SECOND BRAKE PISTON ASSY(U151E/U151F)
	09387–00070	First & Reverse Brake Wrench	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	09387–00080	Counter Drive Gear Nut Wrench	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	09502–12010	Differential Bearing Replacer	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	09506–35010	Differential Drive Pinion Rear Bearing Replacer	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	09514–35011	Rear Wheel Bearing Puller	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)





	09527–17011	Rear Axle Shaft Bearing Remover	AUTOMATIC TRANSAXLE ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	09550–60010	Differential Side Bearing Replacer	FRONT DIFFERENTIAL ASSY(U151E)
	(09951–00490)	Replacer 49	FRONT DIFFERENTIAL ASSY(U151E)
	09564–32011	Differential Preload Adaptor	FRONT DIFFERENTIAL ASSY(U151E) FRONT DIFFERENTIAL ASSY(U151F)
	09608–10010	Steering Knuckle Oil Seal Replacer	FRONT DIFFERENTIAL ASSY(U151E) FRONT DIFFERENTIAL ASSY(U151F)
	09649–17010	Steering Knuckle Tool	AUTOMATIC TRANSAXLE ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	09710–30050	Suspension Arm Bushing Replacer	FRONT DIFFERENTIAL ASSY(U151E)
	09726–40010	Lower Control Shaft Bearing Replacer	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	09930–00010	Drive Shaft Nut Chisel	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	(09931–00010)	Handle	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	(09931–00020)	Nut Chisel	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	09950–00020	Bearing Remover	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)

	09950–00030	Bearing Remover Attachment	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	09950–40011	Puller B Set	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	(09957–04010)	Attachment	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	09950–60010	Replacer Set	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	(09951–00230)	Replacer 23	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09951–00260)	Replacer 26	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	(09951–00320)	Replacer 32	AUTOMATIC TRANSAXLE ASSY(U151E/U151F) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)
	(09951–00450)	Replacer 45	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09951–00480)	Replacer 48	FRONT DIFFERENTIAL ASSY(U151F)
	(09951–00490)	Replacer 49	FRONT DIFFERENTIAL ASSY(U151E)
	(09951–00500)	Replacer 50	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)

	(09951–00590) Replacer 59	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09951–00600) Replacer 60	FRONT DIFFERENTIAL ASSY(U151F)
	(09952–06010) Adapter	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	09950–60020 Replacer Set No.2	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	(09951–00730) Replacer 73	FRONT DIFFERENTIAL ASSY(U151F)
	(09951–00750) Replacer 75	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09951–00810) Replacer 81	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09951–00890) Replacer 89	FRONT DIFFERENTIAL ASSY(U151E) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	(09951–00910) Replacer 91	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	(09951–01030) Replacer 103	AUTOMATIC TRANSAXLE ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	09950–70010 Handle Set	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)

	(09951–07100)	Handle 100	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F) UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	(09951–07150)	Handle 150	FRONT DIFFERENTIAL ASSY(U151E) AUTOMATIC TRANSAXLE ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)

Recomended Tools

	09031–00030	Pin Punch	AUTOMATIC TRANSAXLE ASSY(U151E/U151F)
	09031–00040	Pin Punch .	FRONT DIFFERENTIAL ASSY(U151E) FRONT DIFFERENTIAL ASSY(U151F)
	09905–00012	Snap Ring No.1 Expander	AUTOMATIC TRANSAXLE ASSY(U151E/U151F) FORWARD CLUTCH ASSY(U151E/U151F) DIRECT CLUTCH ASSY(U151E/U151F) FRONT DIFFERENTIAL ASSY(U151F)
	09905–00013	Snap Ring Pliers	UNDERDRIVE PLANETARY GEAR ASSY(U151E/U151F)

Equipment

Dial indicator with magnetic base	
Feeler gauge	
Vernier calipers	
Torque wrench	
Plastic hammer	
Straight edge	
Press	
Seal packing 2403, THREE BOND 2403 or equivalent	
Seal packing 2430, THREE BOND 2430 or equivalent	

Lubricant

item		
U151E / U151F Automatic transaxle fluid Dry fill Drain and refill	 6.8 liter (7.2 USqts, 6.0 Imp.qts) 2.9 liter (3.1 USqts, 2.6 Imp.qts)	ATF type T–IV

SSM (Special Service Materials)

08826–00090	Seal Packing 1281, THREE BOND 1281 or equivalent (FIPG)	
08833–00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	