











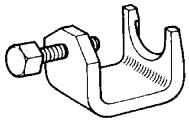





DRIVE SHAFT / PROPELLER SHAFT











PREPARATION

023PP–01









SST

	09240–00020	Wire Gauge Set	FRONT DRIVE SHAFT REAR DRIVE SHAFT
	09316–60011	Transmission & Transfer Bearing Replacer	FRONT AXLE HUB SUB–ASSY LH
	(09316–00011)	Replacer Pipe	FRONT AXLE HUB SUB–ASSY LH
	(09316–00031)	Replacer ”B”	FRONT AXLE HUB SUB–ASSY LH
	09325–20010	Transmission Oil Plug	PROPELLER W/CENTER BEARING SHAFT ASSY
	09330–00021	Companion Flange Holding Tool	PROPELLER W/CENTER BEARING SHAFT ASSY
	09370–50010	Drive Line Angle Gauge	PROPELLER W/CENTER BEARING SHAFT ASSY
	09520–00031	Rear Axle Shaft Puller	FRONT AXLE HUB SUB–ASSY LH
	09520–01010	Drive Shaft Remover Attachment	FRONT DRIVE SHAFT
	09520–24010	Differential Side Gear Shaft Puller	FRONT DRIVE SHAFT
	(09520–32040)	Shocker Set	FRONT DRIVE SHAFT
	09521–24010	Rear Axle Shaft Puller	FRONT DRIVE SHAFT REAR DRIVE SHAFT

	09527–10011	Rear Axle Shaft Bearing Remover	FRONT DRIVE SHAFT
	09527–17011	Rear Axle Shaft Bearing Remover	FRONT AXLE HUB SUB–ASSY LH
	09527–21011	Rear Axle Shaft Bearing Remover	REAR DRIVE SHAFT
	09608–16042	Front Hub Bearing Adjusting Tool	FRONT DRIVE SHAFT
	(09608–02021)	Bolt & Nut	FRONT DRIVE SHAFT
	(09608–02041)	Retainer	FRONT DRIVE SHAFT
	09608–32010	Steering Knuckle Oil Seal Replacer	FRONT AXLE HUB SUB–ASSY LH
	09628–10011	Ball Joint Puller	FRONT AXLE LH HUB BOLT REAR AXLE LH HUB BOLT
	09628–62011	Boll Joint Puller	FRONT AXLE HUB SUB–ASSY LH FRONT DRIVE SHAFT
	09930–00010	Drive Shaft Nut Chisel	FRONT AXLE HUB SUB–ASSY LH FRONT DRIVE SHAFT REAR DRIVE SHAFT REAR AXLE CARRIER SUB–ASSY LH REAR AXLE HUB & BEARING ASSY LH
	09950–00020	Bearing Remover	FRONT AXLE HUB SUB–ASSY LH FRONT DRIVE SHAFT REAR DRIVE SHAFT
	09950–40011	Puller B Set	PROPELLER W/CENTER BEARING SHAFT ASSY
	(09951–04020)	Hanger 200	PROPELLER W/CENTER BEARING SHAFT ASSY

	(09952–04010)	Slide Arm	PROPELLER W/CENTER BEARING SHAFT ASSY
	(09953–04030)	Center Bolt 200	PROPELLER W/CENTER BEARING SHAFT ASSY
	(09954–04010)	Arm 25	PROPELLER W/CENTER BEARING SHAFT ASSY
	(09955–04061)	Claw No.6	PROPELLER W/CENTER BEARING SHAFT ASSY
	(09957–04010)	Attachment	PROPELLER W/CENTER BEARING SHAFT ASSY
	(09958–04011)	Holder	PROPELLER W/CENTER BEARING SHAFT ASSY
	09950–60010	Replacer Set	FRONT AXLE HUB SUB–ASSY LH
	(09951–00430)	Replacer 43	FRONT AXLE HUB SUB–ASSY LH
	09950–60020	Replacer Set No.2	FRONT AXLE HUB SUB–ASSY LH FRONT DRIVE SHAFT
	(09951–00750)	Replacer 75	FRONT AXLE HUB SUB–ASSY LH
	(09951–00810)	Replacer 81	FRONT AXLE HUB SUB–ASSY LH
	09950–70010	Handle Set	FRONT AXLE HUB SUB–ASSY LH FRONT DRIVE SHAFT
	(09951–07100)	Handle 100	FRONT AXLE HUB SUB–ASSY LH FRONT DRIVE SHAFT

Recomended Tools

	09011–12301	Socket Wrench 30 mm	FRONT AXLE HUB SUB–ASSY LH FRONT DRIVE SHAFT REAR DRIVE SHAFT REAR AXLE CARRIER SUB–ASSY LH REAR AXLE HUB & BEARING ASSY LH
	09040–00011	Hexagon Wrench Set	FRONT DRIVE SHAFT PROPELLER W/CENTER BEARING SHAFT ASSY
	09042–00010	Torx Socket T30	FRONT AXLE HUB SUB–ASSY LH
	(09043–20060)	Socket Hexagon Wrench 6	FRONT DRIVE SHAFT PROPELLER W/CENTER BEARING SHAFT ASSY
	09904–00010	Expander Set	REAR DRIVE SHAFT
	(09904–00050)	No. 4 Claw	REAR DRIVE SHAFT
	09905–00012	Snap Ring No.1 Expander	FRONT DRIVE SHAFT
	09905–00013	Snap Ring Pliers	FRONT AXLE HUB SUB–ASSY LH

Equipment

Torque wrench	
Dial gauge with magnetic base	
Dial indicator	
Alighment tester	
Toe–in gauge	

Lubricant

Item		Capacity
Front drive shaft	Outboard joint grease	190 to 200 g (6.7 to 7.1 oz.)
	Inboard joint grease	175 to 185 g (6.3 to 6.6 oz.)
Rear drive shaft		
	Outboard joint grease	95 to 105 g (3.4 to 3.7 oz.)
	Inboard joint grease	125 to 135 g (4.4 to 4.7 oz.)