



















TRANSFER






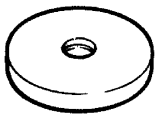

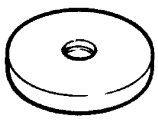
PREPARATION









023PN–01

SST




	09223–00010	Cover & Seal Replacer	TRANSFER ASSY(4WD)
	09223–46011	Crankshaft Front Oil Seal Replacer	TRANSFER RH BEARING RETAINER OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09308–00010	Oil Seal Puller	TRANSFER RH BEARING RETAINER OIL SEAL(4WD) TRANSFER CASE OIL SEAL(4WD) TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09316–60011	Transmission & Transfer Bearing Replacer	TRANSFER ASSY(4WD)
	(09316–00021)	Replacer ”A”	TRANSFER ASSY(4WD)
	(09316–00041)	Replacer ”C”	TRANSFER ASSY(4WD)
	(09316–00061)	Replacer ”E”	TRANSFER ASSY(4WD)
	09325–20010	Transmission Oil Plug	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD)
	09326–20011	Output Shaft Bearing Lock Nut Wrench	TRANSFER ASSY(4WD)
	09387–00010	Transfer Oil Seal Replacer	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09387–00090	Center Differential Centering Tool	TRANSFER ASSY(4WD)
	09506–35010	Differential Drive Pinion Rear Bearing Replacer	TRANSFER ASSY(4WD)




	09520–01010	Drive Shaft Remover Attachment	TRANSFER RH BEARING RETAINER OIL SEAL(4WD)
	09520–10021	Drive Shaft Remover & Replacer	TRANSFER ASSY(4WD)
	09520–24010	Differential Side Gear Shaft Puller	TRANSFER RH BEARING RETAINER OIL SEAL(4WD)
	(09520–32040)	Shocker Set	TRANSFER RH BEARING RETAINER OIL SEAL(4WD)
	09556–16030	Differential Drive Pinion Holding Tool 28	TRANSFER ASSY(4WD)
	(09612–10061)	Steering Pinion Bearing Replacer	TRANSFER ASSY(4WD)
	09930–00010	Drive Shaft Nut Chisel	TRANSFER ASSY(4WD)
	09950–00020	Bearing Remover	TRANSFER ASSY(4WD)
	09950–00030	Bearing Remover Attachment	TRANSFER ASSY(4WD)
	09950–40011	Puller B Set	TRANSFER ASSY(4WD)
	(09951–04010)	Hanger 150	TRANSFER ASSY(4WD)
	(09952–04010)	Slide Arm	TRANSFER ASSY(4WD)
	(09953–04020)	Center Bolt 150	TRANSFER ASSY(4WD)

	(09954–04010)	Arm 25	TRANSFER ASSY(4WD)
	(09955–04061)	Claw No.6	TRANSFER ASSY(4WD)
	(09957–04010)	Attachment	TRANSFER ASSY(4WD)
	(09958–04011)	Holder	TRANSFER ASSY(4WD)
	09950–60010	Replacer Set	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09951–00350)	Replacer 35	TRANSFER ASSY(4WD)
	(09951–00360)	Replacer 36	TRANSFER ASSY(4WD)
	(09951–00380)	Replacer 38	TRANSFER ASSY(4WD)
	(09951–00420)	Replacer 42	TRANSFER ASSY(4WD)
	(09951–00430)	Replacer 43	TRANSFER ASSY(4WD)
	(09951–00560)	Replacer 56	TRANSFER ASSY(4WD)
	(09951–00580)	Replacer 58	TRANSFER ASSY(4WD)
	(09951–00610)	Replacer 61	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)

	(09951–00620)	Replacer 62	TRANSFER ASSY(4WD)
	(09952–06010)	Adapter	TRANSFER ASSY(4WD)
	09950–60020	Replacer Set No.2	TRANSFER ASSY(4WD)
	(09951–00710)	Replacer 71	TRANSFER ASSY(4WD)
	(09951–00750)	Replacer 75	TRANSFER ASSY(4WD)
	(09951–00770)	Replacer 77	TRANSFER ASSY(4WD)
	(09951–00810)	Replacer 81	TRANSFER ASSY(4WD)
	09950–70010	Handle Set	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09951–07150)	Handle 150	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09951–07200)	Handle 200	TRANSFER ASSY(4WD)

Recomended Tools

	09040–00011	Hexagon Wrench Set	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD)
	(09043–20060)	Socket Hexagon Wrench 6	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD)
	(09043–20060)	Socket Hexagon Wrench 6	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD)

	09090–04020	Engine Sling Device	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09904–00010	Expander Set	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09904–00020)	No. 1 Claw	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09905–00013	Snap Ring Pliers	TRANSFER ASSY(4WD)
	(09904–00090)	Claw Set	TRANSFER ASSY(4WD)

SSM

	08826–00090	"Seal Packing 1281," THREE BOND 1281 or equivalent (FIPG)	TRANSFER ASSY(4WD)

Equipment

Torque wrench	
Dial gauge with magnetic base	Transfer assy(4WD)
V–block	Transfer assy(4WD)
Universal engine lifter	

Lubricant

Item	Capacity	Classification
Transfer oil	0.9 litters (0.95 US qts, 0.79 lmp.qts)	Hypoid gear oil SAE 90 (GL–5)