
05JXG–01

DTC CHECK/CLEAR

NOTICE:
Hand–held tester only:
When the diagnosis system is switched from the normal mode to the check (test) mode, it erases all DTCs and freeze frame data recorded in the normal mode. So before switching modes, always check the DTCs and freeze frame data, and then write them down.

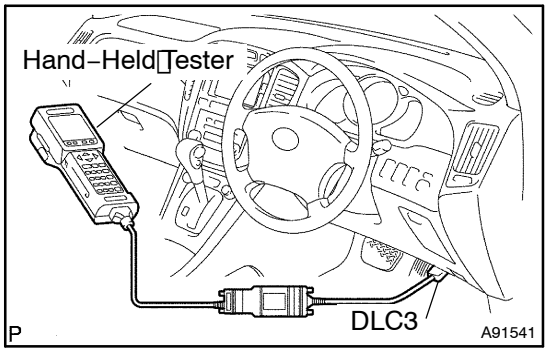

1. CHECK DTC (Using the hand–held tester)

(a) Connect the hand–held tester to the DLC3.

(b) Turn the ignition switch ON and switch the hand–held tester main switch ON.

(c) Use the hand–held tester to check the DTCs and freeze frame data and then write them down. If you need help with the hand–held tester, refer to the hand–held tester's instruction book.


(d) See page 05–27 to confirm the details of the DTCs.

2. CLEAR DTC (Using the hand–held tester)

(a) Connect the hand–held tester to the DLC3.

(b) Turn the ignition switch ON.

(c) When operating the hand–held tester to erase the codes, the DTCs and freeze frame data will be erased. (See the hand–held tester's instruction book for operating instructions.)

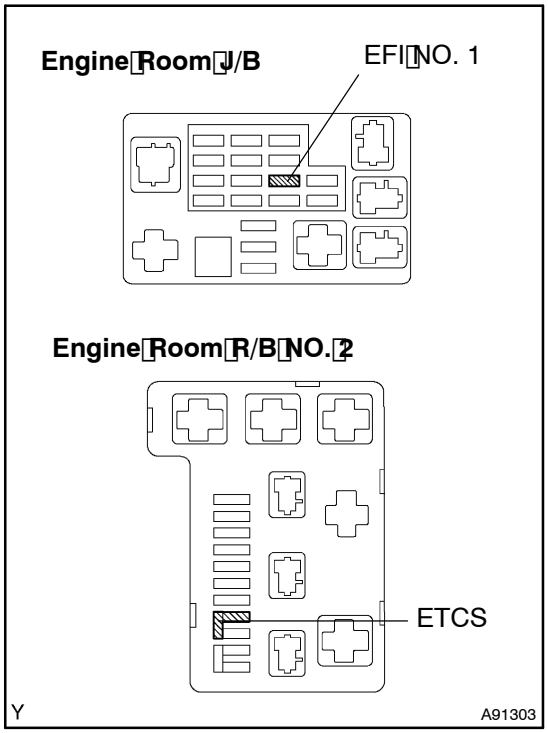

3. CLEAR DTC (Not using the hand–held tester)

(a) Remove the EFI NO. 1 fuse (from the engine room J/B) and the ETCS fuse (from the engine room R/B NO. 2) for more than 60 seconds. After clear DTC, perform the "INITIALIZE" procedure (See page 05–355).