
DTC	C1244/44	OPEN OR SHORT IN DECELERATION SENSOR CIRCUIT

CIRCUIT DESCRIPTION

This sensor detects deceleration on the vehicle. The sensor signal is used in ABS & BA control. If the sensor functions abnormally, the ABS warning light comes on.

DTC No.	DTC Detecting Condition	Trouble Area
C1244/44	Either of the following 1. or 2. is detected: 1. The condition that ECU terminals GL1 voltage is 0.5 V or less or 4.5 V or more continues for 1.2 sec. or more. 2. Deceleration sensor signal momentary open occurs 1 or 7 times or more.	• Deceleration sensor • Deceleration sensor circuit

WIRING DIAGRAM

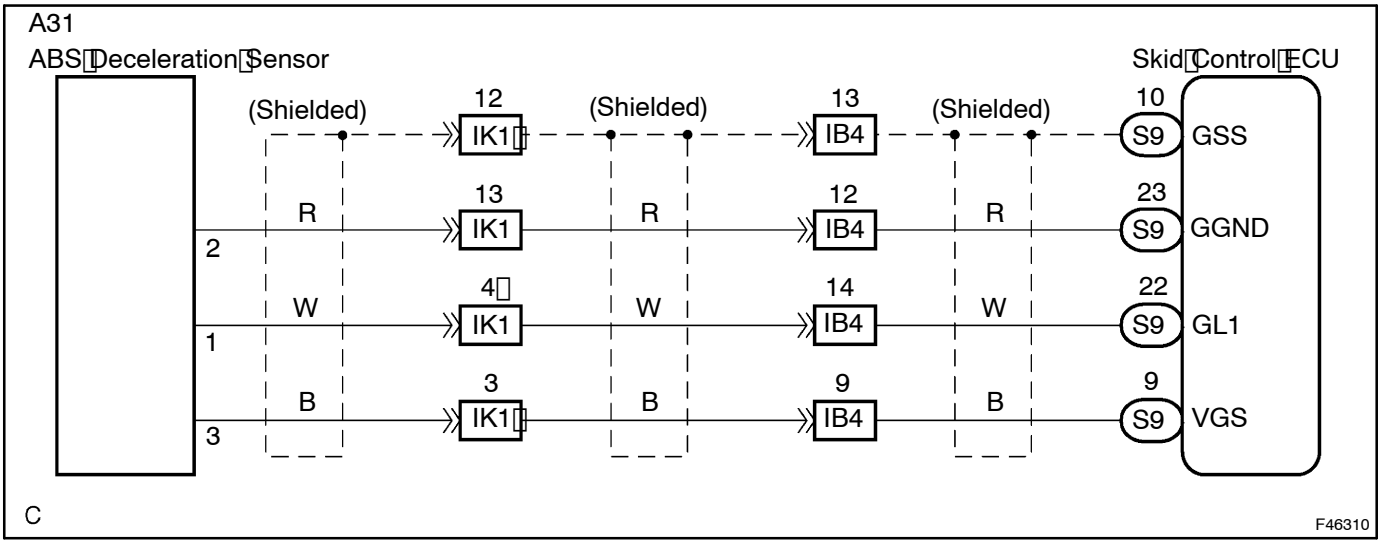

INSPECTION PROCEDURE

1	CHECK HARNESS AND CONNECTOR(DECELERATION SENSOR – SKID CONTROL ECU) (SEE PAGE 01–33)

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2	INSPECT DECELERATION SENSOR (SEE PAGE 05–156)

NG → REPLACE DECELERATION SENSOR (SEE PAGE 32–49)

OK

REPLACE SKID CONTROL ECU ASSY (SEE PAGE 32–54)