
Ts Terminal Circuit

CIRCUIT DESCRIPTION


The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected with the DTC check.
Connecting terminals Ts and CG of the DLC3 starts the check.

WIRING DIAGRAM

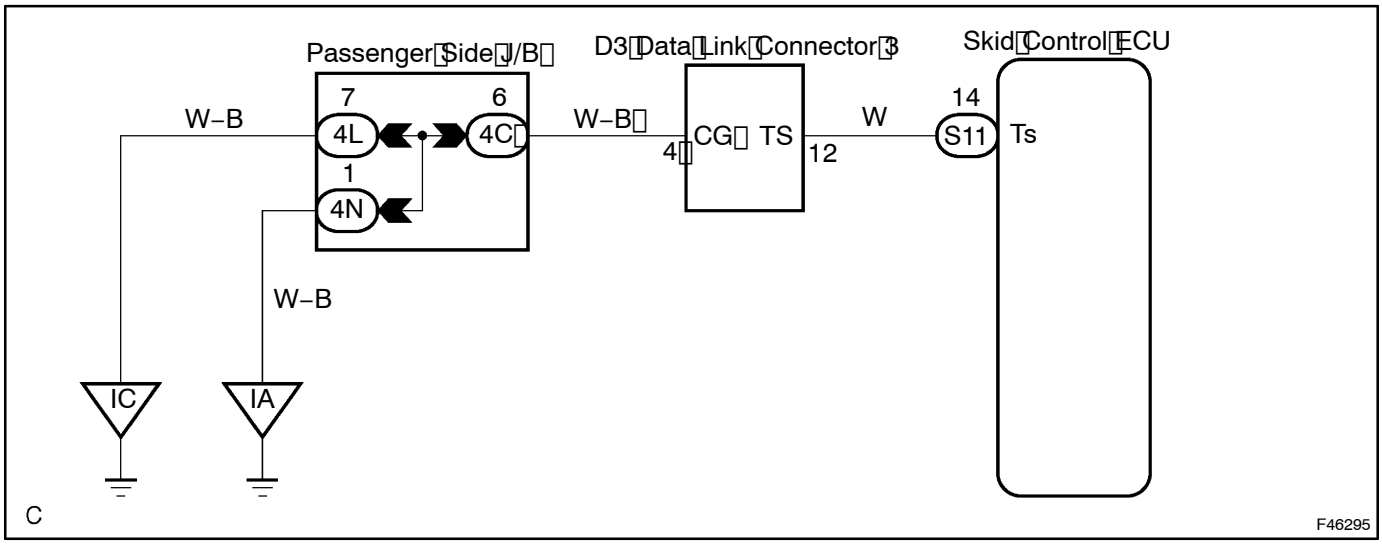

INSPECTION PROCEDURE

1	INSPECT DLC3

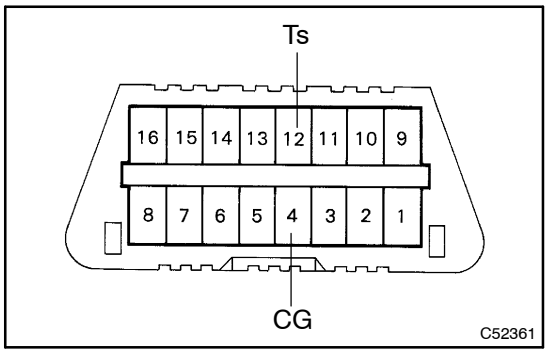

(a) Turn the ignition switch ON.
(b) Measure voltage between terminals Ts and CG of DLC3.
Standard:
10 to 14 V

OK	Go to step 3

NG

2	CHECK HARNESS AND CONNECTOR (DLC3 – SKID CONTROL ECU, DLC3 – BODY GROUND) (SEE PAGE 01–33)


NG	REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE SKID CONTROL ECU ASSY (SEE PAGE 32–54)

3	CHECK ABS WARNING LIGHT

SST 09843–18040

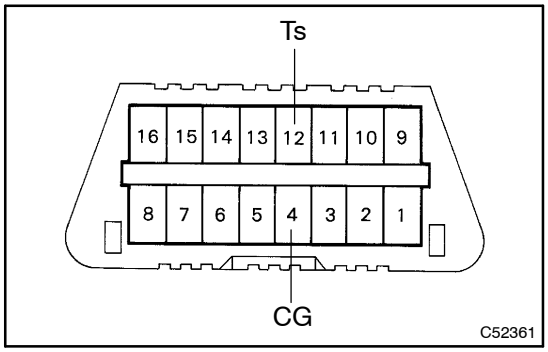

(a) Using SST, connect the terminals Ts and CG of the DLC3.
(b) Check the ABS warning light.

OK:

ABS warning light blinking

OK → **PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–130)**

NG

REPLACE SKID CONTROL ECU ASSY (SEE PAGE 32–54)