
TC TERMINAL CIRCUIT

CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

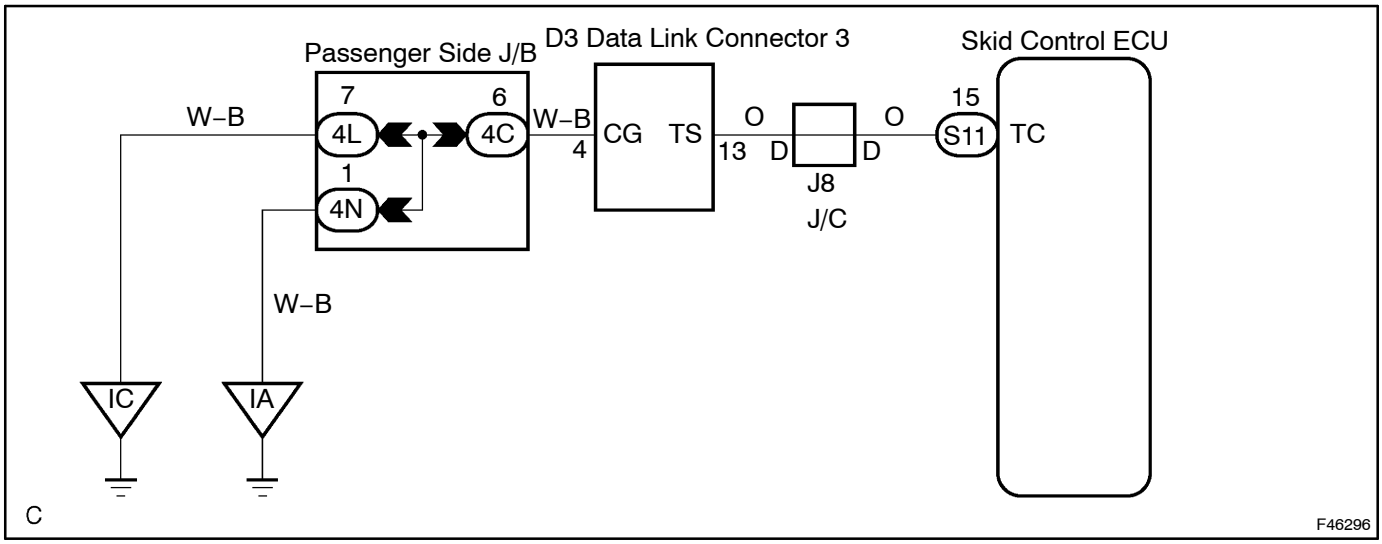

INSPECTION PROCEDURE

1	INSPECT DLC3

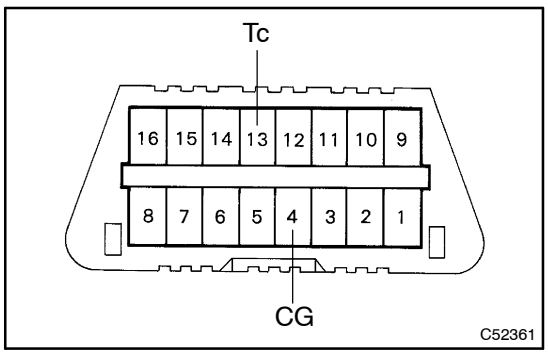

(a) Turn the ignition switch ON.
(b) Measure voltage between terminals Tc and CG of DLC3.
Standard:
10 to 14 V

NG → **Go to step 3**

OK

2	CHECK HARNESS AND CONNECTOR (DLC3 – SKID CONTROL ECU, DLC3 – BODY GROUND) (SEE PAGE 01–33)


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE SKID CONTROL ECU ASSY (SEE PAGE 32–54)

3	CHECK ABS WARNING LIGHT

SST 09843–18040

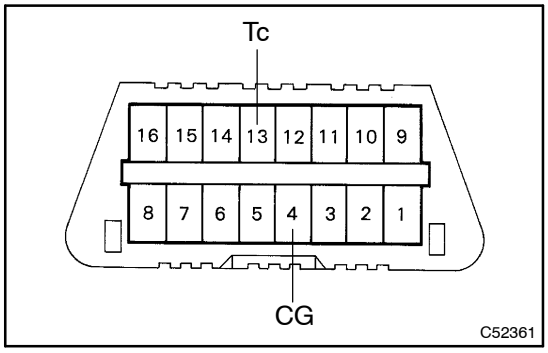

(a) Using SST, connect the terminals Tc and CG of the DLC3.
(b) Check the ABS warning light.

OK:

ABS warning light blinking

OK → PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–150)

NG

REPLACE SKID CONTROL ECU ASSY (SEE PAGE 32–54)