05JP6–01


DTC CHECK/CLEAR

1. DTC CHECK (NORMAL MODE)

NOTICE:

Hand–held tester only:

When the diagnostic system is switched from the normal mode to the check mode, all the DTCs and freeze frame data recorded in the normal mode will be erased. So before switching modes, always check the DTCs and freeze frame data, and note them down.

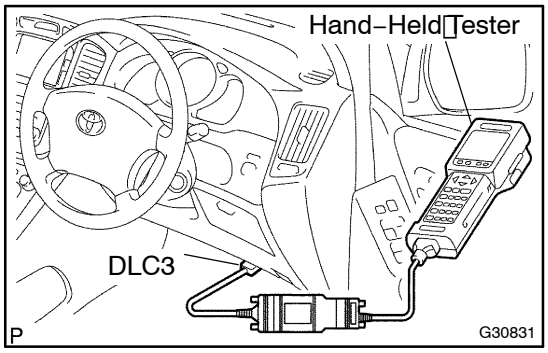

(a) Checking DTCs using the hand–held tester.

(1) Turn the ignition switch off.

(2) Connect the hand–held tester to DLC3.

(3) Turn the ignition switch to the ON position.

(4) Use the hand–held tester to check the DTCs and freeze frame data and then write them down. For the hand–held tester, select the item: DIAGNOSIS / OBD/MOBD / DTC INFO / CURRENT CODEDS.

HINT:

If you need help with the hand–held tester, refer to its instruction book.

(5) See page 05–376 to confirm the details of the DTCs.

2. DTC CLEAR

(a) When using the hand–held tester:

Clearing the DTCs.

(1) Connect the hand–held tester to the DLC3.

(2) Turn the ignition switch to the ON position. (Do not start the engine start)

(3) Use the hand–held tester to check the DTCs and freeze frame data and then write them down. For the hand–held tester, select the item: DIAGNOSIS / OBD/MOBD / DTC INFO / CLEAR CODES.

HINT:

If you need help with the hand–held tester, refer to its instruction book.

(b) When not using the hand–held tester:

Clearing the DTCs.

(1) Disconnecting the battery terminal or remove the EFI and ETCS fuses from the engine room R/B for 60 seconds or more. But if you disconnect the battery terminal, you should do the ”INITIALIZE ” procedure.