
05JPM–01

TERMINALS OF ECU

1. AIRBAG SENSOR ASSY CENTER (w/ Side and Curtain Shield Airbag)

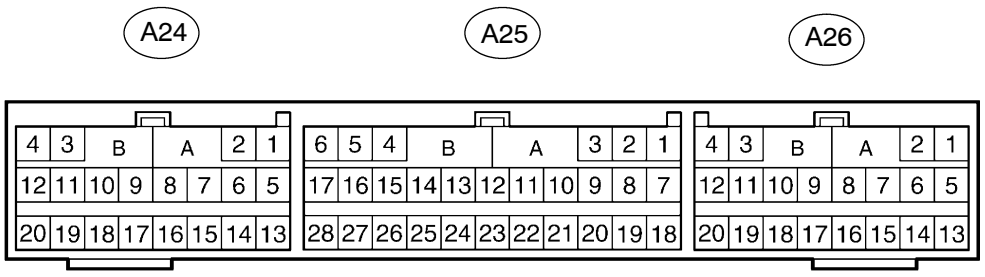


P H40533

No.	Symbol	Destination
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A24–1	CSL–	Airbag Sensor Rear LH
A24–7	PL–	Front Seat Outer Belt Assy LH (P/T Squib LH)
A24–8	PL+	Front Seat Outer Belt Assy LH (P/T Squib LH)
A24–9	ICL+	Curtain Shield Airbag Assy LH (Curtain Shield Squib LH)
A24–10	ICL–	Curtain Shield Airbag Assy LH (Curtain Shield Squib LH)
A24–11	SFL–	Front Seat Airbag Assy LH (Side Squib LH)
A24–12	SFL+	Front Seat Airbag Assy LH (Side Squib LH)
A24–13	ESCL	Airbag Sensor Rear LH
A24–14	VUCL	Airbag Sensor Rear LH
A24–15	CSL+	Airbag Sensor Rear LH
A24–16	VUPL	Side Airbag Sensor Assy LH
A24–17	SSL+	Side Airbag Sensor Assy LH
A24–18	ESL	Side Airbag Sensor Assy LH
A24–20	SSL–	Side Airbag Sensor Assy LH
A25–5	IG2	IGN Fuse
A25–7	P2–	Front Passenger Airbag Assy (P Squib, Dual stage – 2nd step)
A25–8	P2+	Front Passenger Airbag Assy (P Squib, Dual stage – 2nd step)
A25–9	+SR	Airbag Sensor Front RH
A25–10	P+	Front Passenger Airbag Assy (P Squib)
A25–11	P–	Front Passenger Airbag Assy (P Squib)
A25–12	SIL	Diagnosis
A25–13	D–	Horn Button Assy (D Squib)
A25–14	D+	Horn Button Assy (D Squib)
A25–15	+SL	Airbag Sensor Front LH
A25–16	D2+	Horn Button Assy (D Squib, Dual stage – 2nd step)
A25–17	D2–	Horn Button Assy (D Squib, Dual stage – 2nd step)
A25–20	–SR	Airbag Sensor Front RH
A25–22	MPX2	Combination Meter Assy
A25–24	MPX1	Combination Meter Assy

No.	Symbol	Destination
A25–26	–SL	Airbag Sensor Front LH
A25–27	E1	Ground
A25–28	E2	Ground
A26–1	RSP+	Seat Position Airbag Sensor
A26–2	RSP–	Seat Position Airbag Sensor
A26–3	RBE–	Front Seat Inner Belt Assy RH
A26–4	CSR–	Airbag Sensor Rear RH
A26–5	SFR+	Front Seat Airbag Assy RH (Side Squib RH)
A26–6	SFR–	Front Seat Airbag Assy RH (Side Squib RH)
A26–7	ICR–	Curtain Shield Airbag Assy RH (Curtain Shield Squib RH)
A26–8	ICR+	Curtain Shield Airbag Assy RH (Curtain Shield Squib RH)
A26–9	PR+	Front Seat Outer Belt Assy RH (P/T Squib RH)
A26–10	PR–	Front Seat Outer Belt Assy RH (P/T Squib RH)
A26–13	SSR–	Side Airbag Sensor Assy RH
A26–14	RBE+	Front Seat Inner Belt Assy RH
A26–15	ESR	Side Airbag Sensor Assy RH
A26–16	SSR+	Side Airbag Sensor Assy RH
A26–17	VUPR	Side Airbag Sensor Assy RH
A26–18	CSR+	Airbag Sensor Rear RH
A26–19	VUCR	Airbag Sensor Rear RH
A26–20	ESCR	Airbag Sensor Rear RH

2. AIRBAG SENSOR ASSY CENTER (w/o Side and Curtain Shield Airbag)

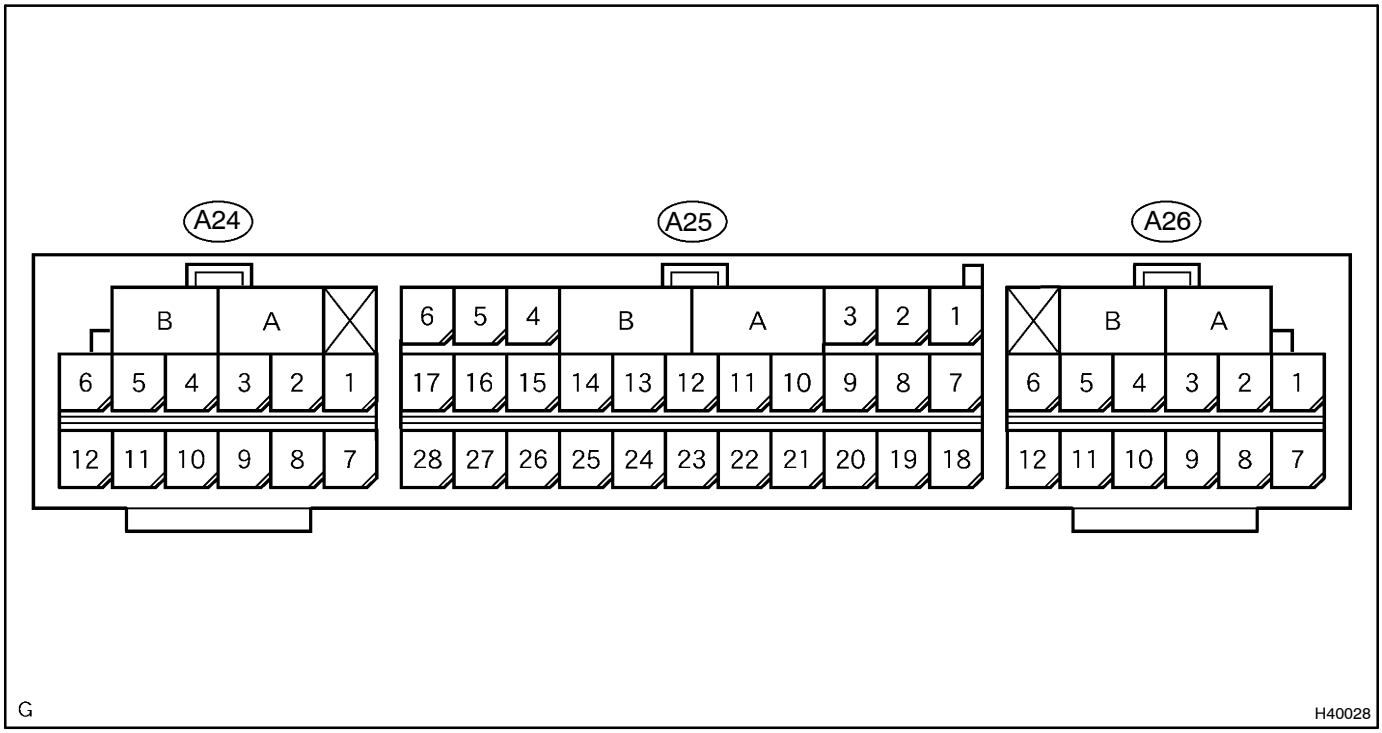

No.	Symbol	Destination
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A24–1	PL–	Front Seat Outer Belt Assy LH (P/T Squib LH)
A24–2	PL+	Front Seat Outer Belt Assy LH (P/T Squib LH)
A25–5	IG2	IGN Fuse
A25–7	P2–	Front Passenger Airbag Assy (P Squib, Dual stage – 2nd step)
A25–8	P2+	Front Passenger Airbag Assy (P Squib, Dual stage – 2nd step)
A25–9	+SR	Airbag Sensor Front RH
A25–10	P+	Front Passenger Airbag Assy (P Squib)
A25–11	P–	Front Passenger Airbag Assy (P Squib)
A25–12	SIL	Diagnosis
A25–13	D–	Horn Button Assy (D Squib)
A25–14	D+	Horn Button Assy (D Squib)
A25–15	+SL	Airbag Sensor Front LH
A25–16	D2+	Horn Button Assy (D Squib, Dual stage – 2nd step)
A25–17	D2–	Horn Button Assy (D Squib, Dual stage – 2nd step)
A25–20	–SR	Airbag Sensor Front RH
A25–22	MPX2	Combination Meter Assy
A25–24	MPX1	Combination Meter Assy
A25–26	–SL	Airbag Sensor Front LH
A25–27	E1	Ground
A25–28	E2	Ground
A26–1	RBE–	Front Seat Inner Belt Assy RH
A26–4	RSP+	Seat Position Airbag Sensor
A26–5	PR+	Front Seat Outer Belt Assy RH (P/T Squib RH)
A26–6	PR–	Front Seat Outer Belt Assy RH (P/T Squib RH)

No.	Symbol	Destination
A26–8	RBE+	Front Seat Inner Belt Assy RH
A26–11	RSP–	Seat Position Airbag Sensor