


05JRT–01

LOCATION

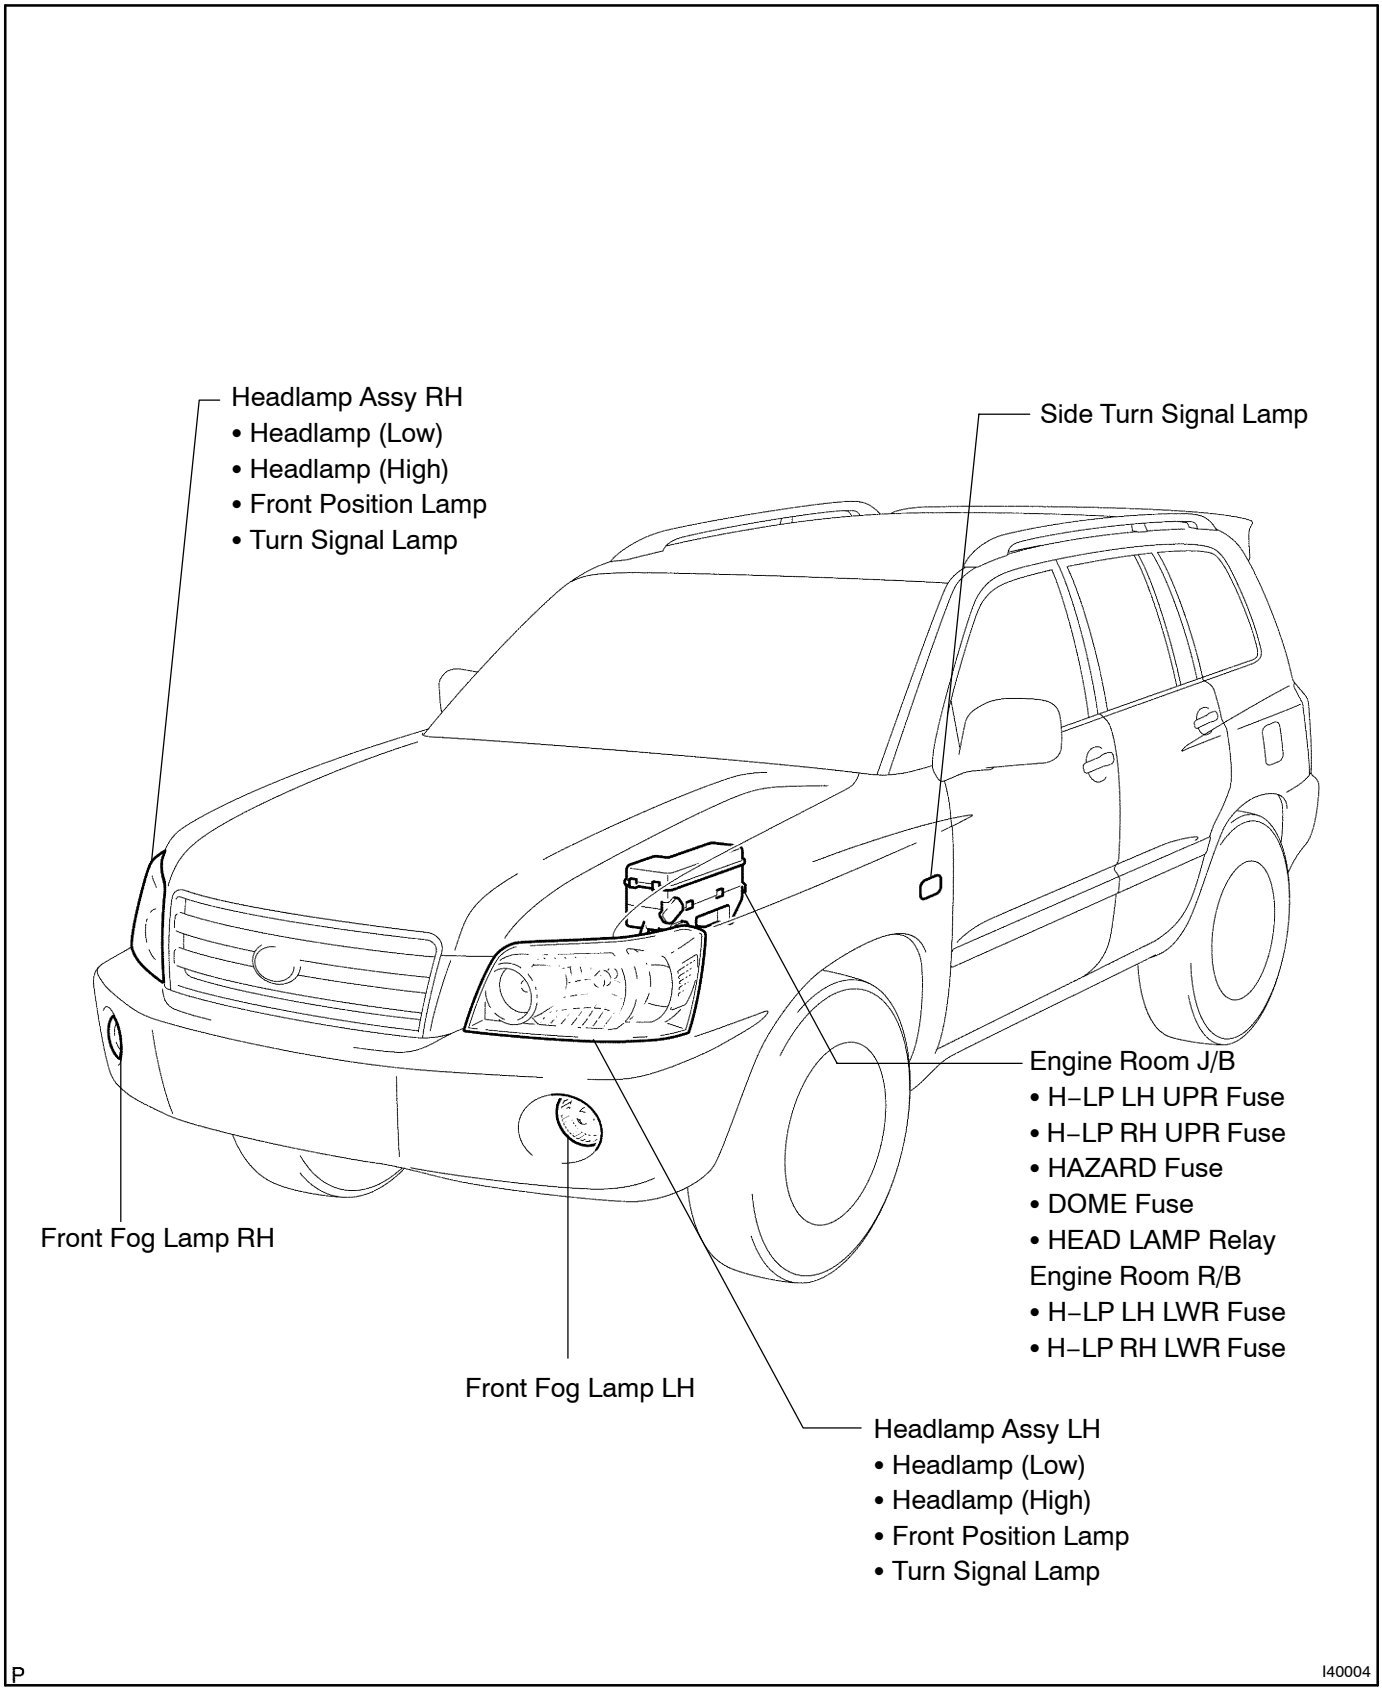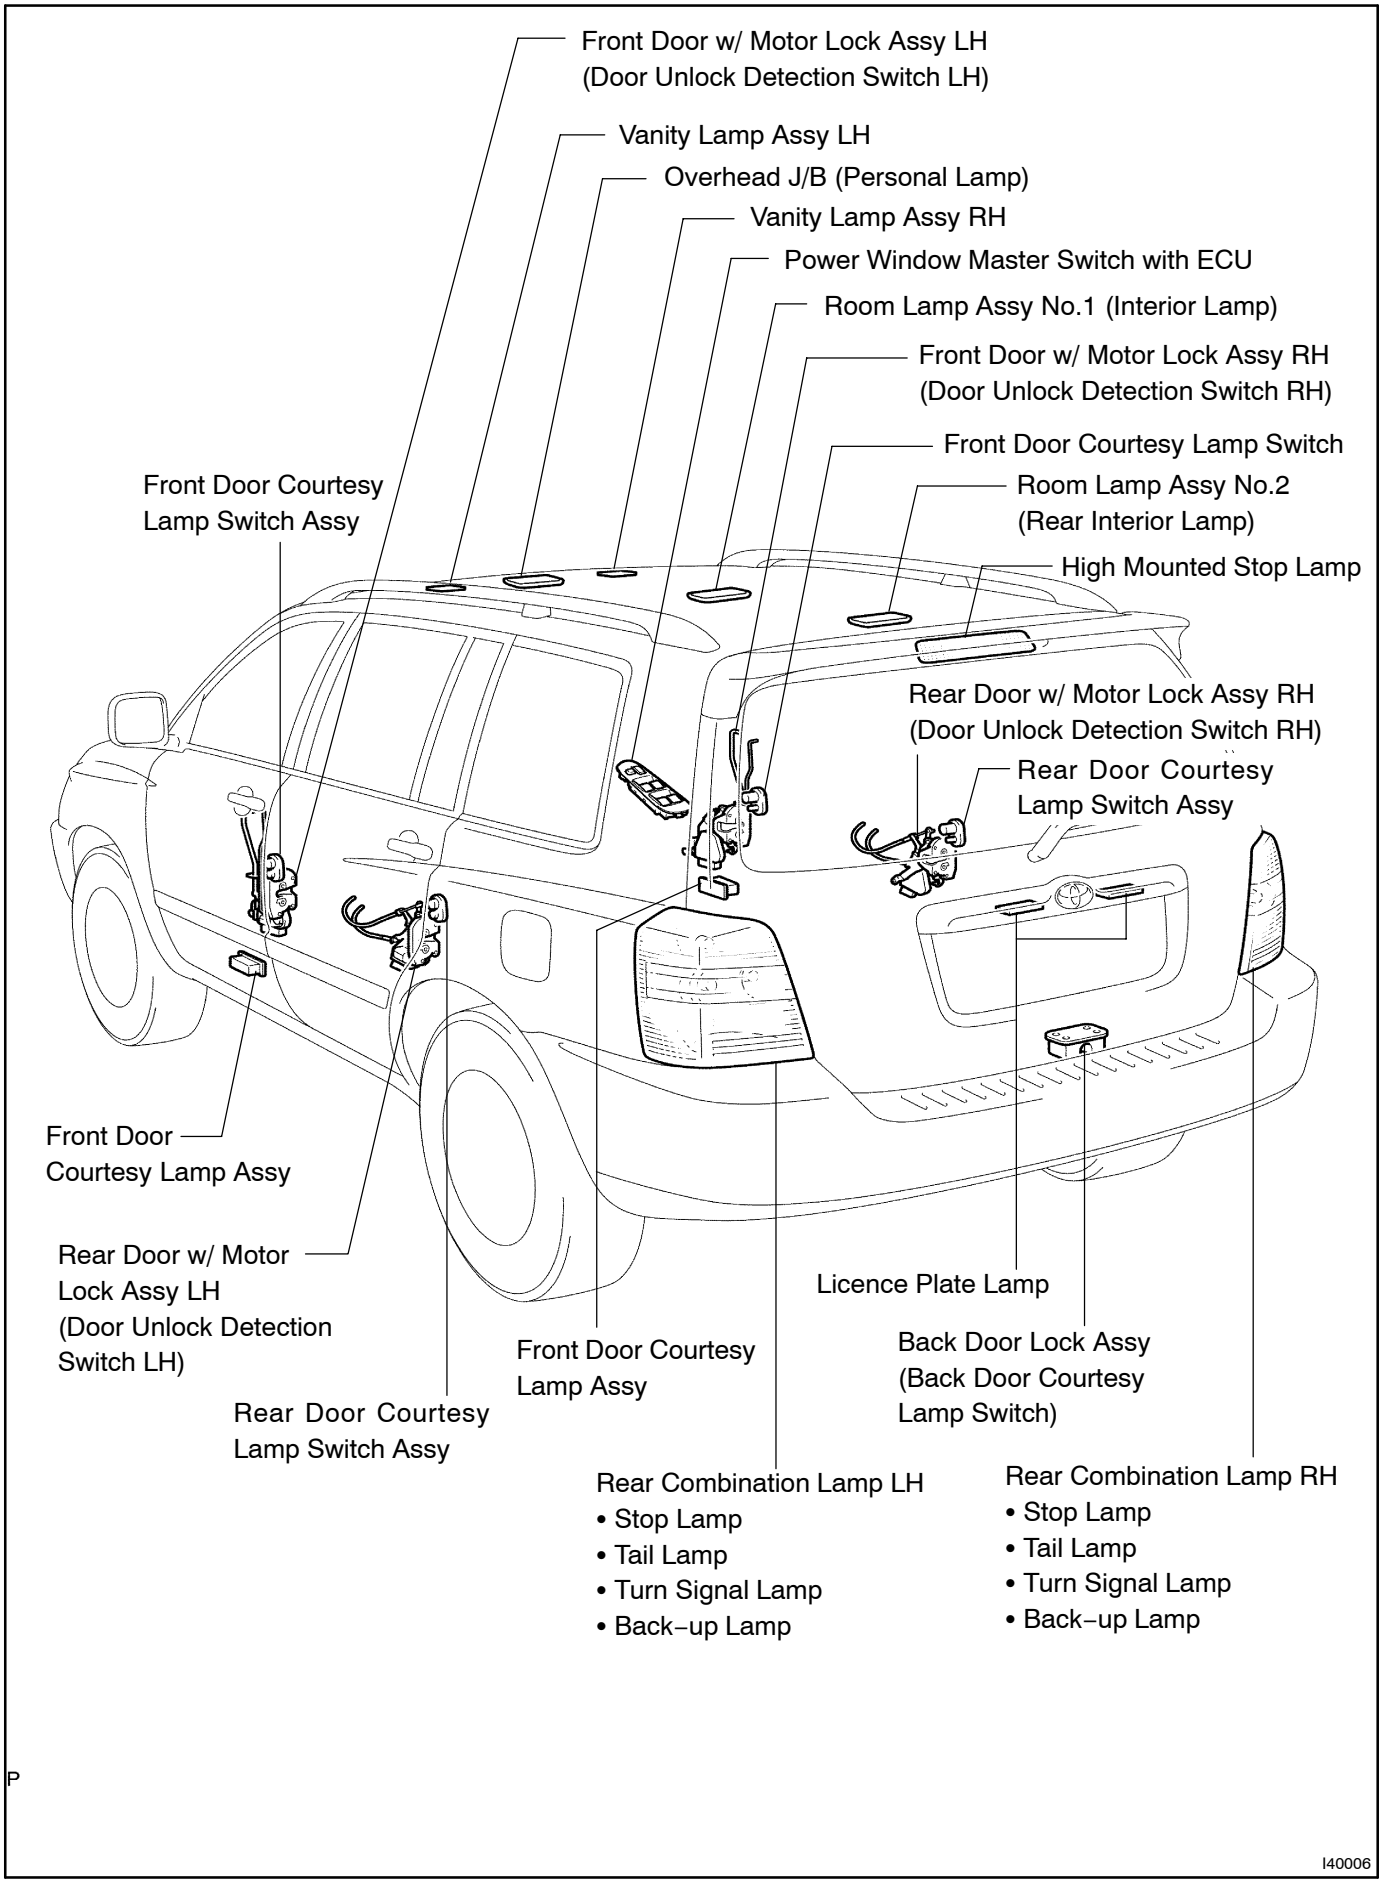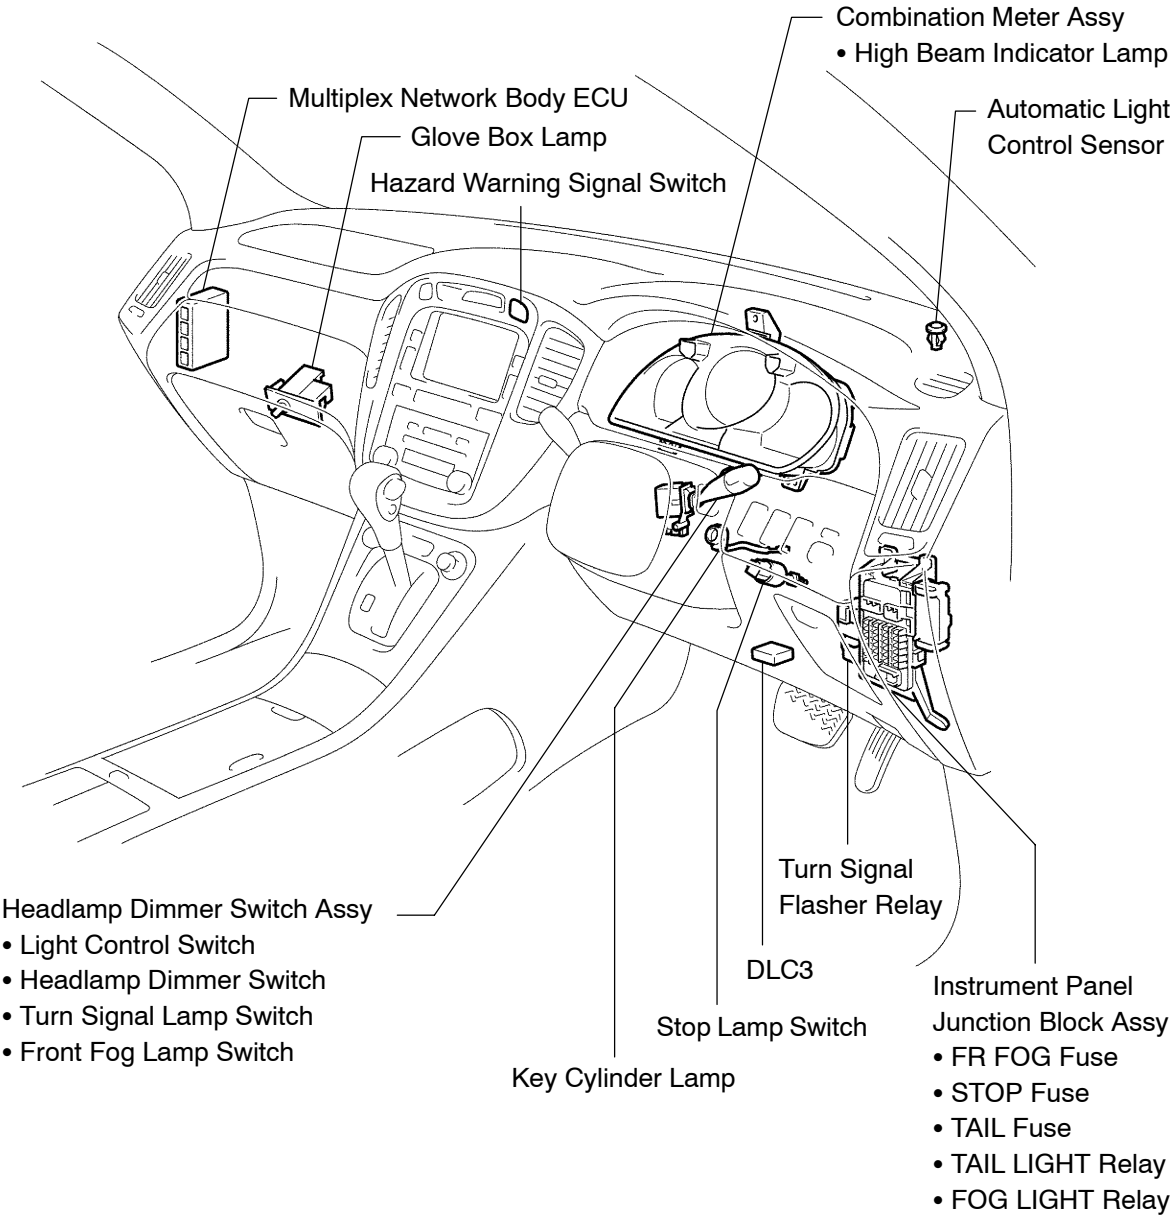


Front Door w/ Motor Lock Assy LH
(Door Unlock Detection Switch LH)
Vanity Lamp Assy LH
Overhead J/B (Personal Lamp)
Vanity Lamp Assy RH
Power Window Master Switch with ECU
Room Lamp Assy No.1 (Interior Lamp)
Front Door w/ Motor Lock Assy RH
(Door Unlock Detection Switch RH)
Front Door Courtesy Lamp Switch
Front Door Courtesy
Lamp Switch Assy
Room Lamp Assy No.2
(Rear Interior Lamp)
High Mounted Stop Lamp
Rear Door w/ Motor Lock Assy RH
(Door Unlock Detection Switch RH)
Rear Door Courtesy
Lamp Switch Assy
Front Door
Courtesy Lamp Assy
Rear Door w/ Motor
Lock Assy LH
(Door Unlock Detection
Switch LH)
Rear Door Courtesy
Lamp Switch Assy
Front Door Courtesy
Lamp Assy
Licence Plate Lamp
Back Door Lock Assy
(Back Door Courtesy
Lamp Switch)
Rear Combination Lamp LH
• Stop Lamp
• Tail Lamp
• Turn Signal Lamp
• Back–up Lamp
Rear Combination Lamp RH
• Stop Lamp
• Tail Lamp
• Turn Signal Lamp
• Back–up Lamp
P
I40006


Combination Meter Assy
• High Beam Indicator Lamp
Multiplex Network Body ECU
Glove Box Lamp
Hazard Warning Signal Switch
Automatic Light
Control Sensor
Turn Signal
Flasher Relay
Headlamp Dimmer Switch Assy
• Light Control Switch
• Headlamp Dimmer Switch
• Turn Signal Lamp Switch
• Front Fog Lamp Switch
DLC3
Stop Lamp Switch
Key Cylinder Lamp
Instrument Panel
Junction Block Assy
• FR FOG Fuse
• STOP Fuse
• TAIL Fuse
• TAIL LIGHT Relay
• FOG LIGHT Relay

P

I40008