
05JUZ–01

TERMINALS OF ECU

1. RADIO RECEIVER ASSY

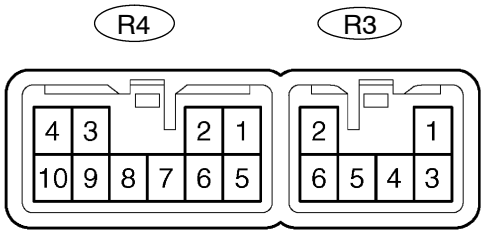

I40196

Symbols (Terminals No.)	Wiring Color	Terminal Description	Condition	Specified
RR+ (R3–1) – GND (R4–7)	R – BR	Sound signal (Rear Right)	Audio system is sounding	–
RL+ (R3–2) – GND (R4–7)	B – BR	Sound signal (Rear Left)	Audio system is sounding	–
RR– (R3–3) – GND (R4–7)	W – BR	Sound signal (Rear Right)	Audio system is sounding	–
ILL– (R3–5) – Body ground	W – Body ground	Illumination signal (rheostat)	Light control switch TAIL or HEAD	10 to 14 V
RL– (R3–6) – GND (R4–7)	Y – BR	Sound signal (Rear Left)	Audio system is sounding	–
FR+ (R4–1) – GND (R4–7)	LG – BR	Sound signal (Front Right)	Audio system is sounding	–
FL+ (R4–2) – GND (R4–7)	P – BR	Sound signal (Front Left)	Audio system is sounding	–
ACC+B (R4–3) – GND (R4–7)	GR – BR	Accessory (ON)	Ignition switch ACC or ON	10 to 14 V
BU+B (R4–4) – GND (R4–7)	L–B – BR	Battery	Always	10 to 14 V
FR– (R4–5) – GND (R4–7)	L – BR	Sound signal (Front Right)	Audio system is sounding	–
FL– (R4–6) – GND (R4–7)	V – BR	Sound signal (Front Left)	Audio system is sounding	–
GND (R4–7) – Body ground	BR – Body ground	Ground	Always	Below 1 Ω
ILL+ (R4–10) – GND (R4–7)	G – BR	Illumination signal (rheostat)	Light control switch TAIL or HEAD	10 to 14 V