
05JTO–01

# DISPLAY CHECK MODE (PANEL SWITCH CHECK)


HINT:

- This mode checks the panel switch operation response on the multi–display.
- Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.


**1. Enter diagnostic mode (see page 05–885).**

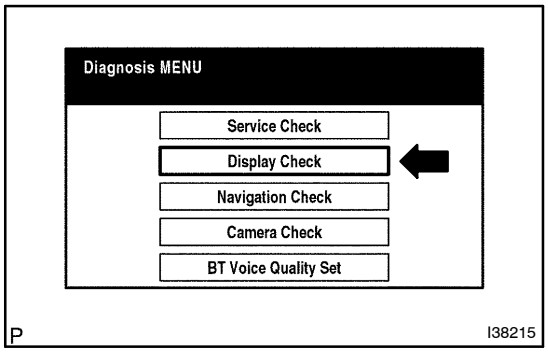


**2. Select ”Display Check” from the ”Diagnosis Menu” screen.**

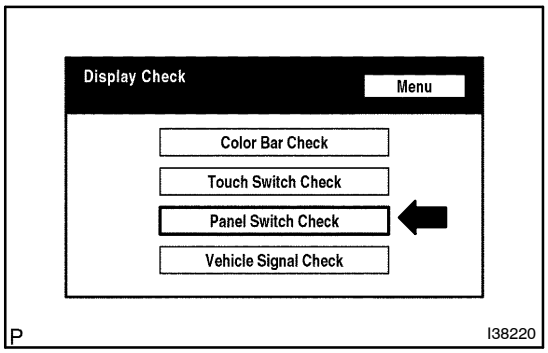


**3. Select ”Panel Switch Check” from the ”Display Check” screen.**

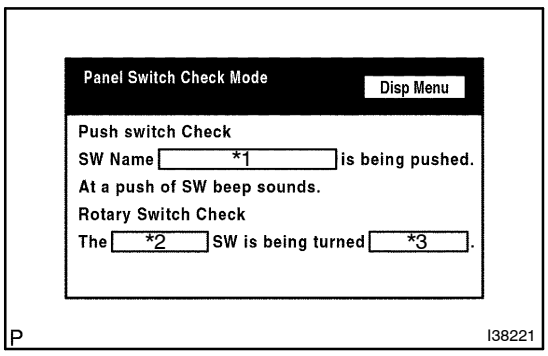


**4. Operate each switch and check that the switch name and condition are correctly displayed.**

HINT:

- Pressing the ”DISPLAY” switch for 3 seconds will exit the diagnostic mode.

| Display | Contents |
|---|---|
| Push switch name/*1 | • Name of the pressed switch is displayed.<br>• If more than one switch is pressed, ”MULTIPLE” is displayed. |
| Rotary switch name/*2 | Name of the rotary switch is displayed. |
| Rotary switch direction/*3 | Direction of the rotary switch is rotated. |