
ILLUMINATION FOR PANEL SWITCH DOES NOT COME ON WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1	DISPLAY CHECK MODE(VEHICLE SIGNAL CHECK MODE)

(a) Enter the "Display Check" mode (Vehicle Signal Check Mode) (see page 05–865).

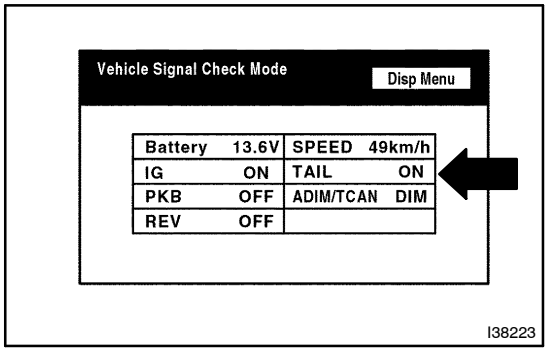

(b) Turn the light control switch to the TAIL, HEAD or OFF position.

Standard:

Light Control Switch	Display
TAIL or HEAD	ON
OFF	OFF

HINT:
This display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK	REPLACE MULTI–DISPLAY (SEE PAGE 67–7)

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–880)