
MAP DISC CANNOT BE INSERTED

INSPECTION PROCEDURE

1	CHECK MAP DISC

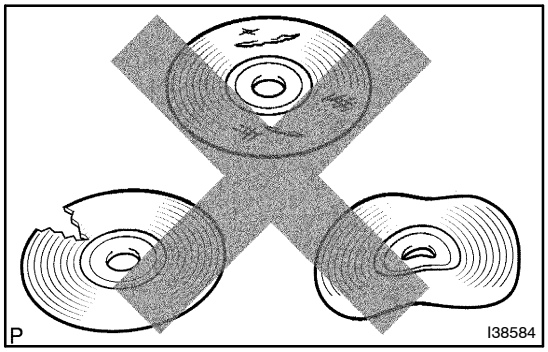

(a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG → **REPLACE THE MAP DISC**

OK

2	CHECK NAVIGATION ECU

(a) Check that the "PUSH" indicator near the disc slot comes on.
OK: It does not come on.

NG → **PRESS THE EJECT SWITCH TO EJECT THE DISC**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05–880)