
GYRO ERROR

INSPECTION PROCEDURE

1	NAVIGATION CHECK MODE(VEHICLE SENSORS)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-867).

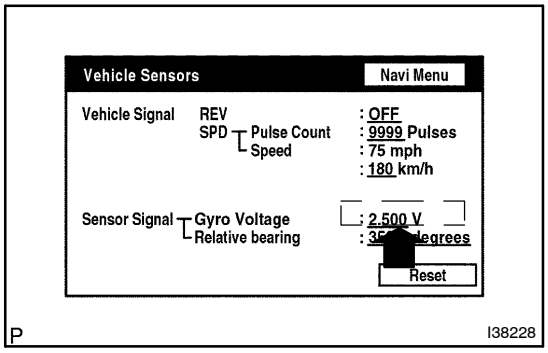

(b) Check the gyro voltage.

Standard: 0.1 to 4.5 V

NG	REPLACE NAVIGATION ECU (SEE PAGE 67-8)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-892)