
POWER SOURCE CIRCUIT (RADIO RECEIVER ASSY)

CIRCUIT DESCRIPTION


This circuit provides power to the radio receiver assy.

WIRING DIAGRAM

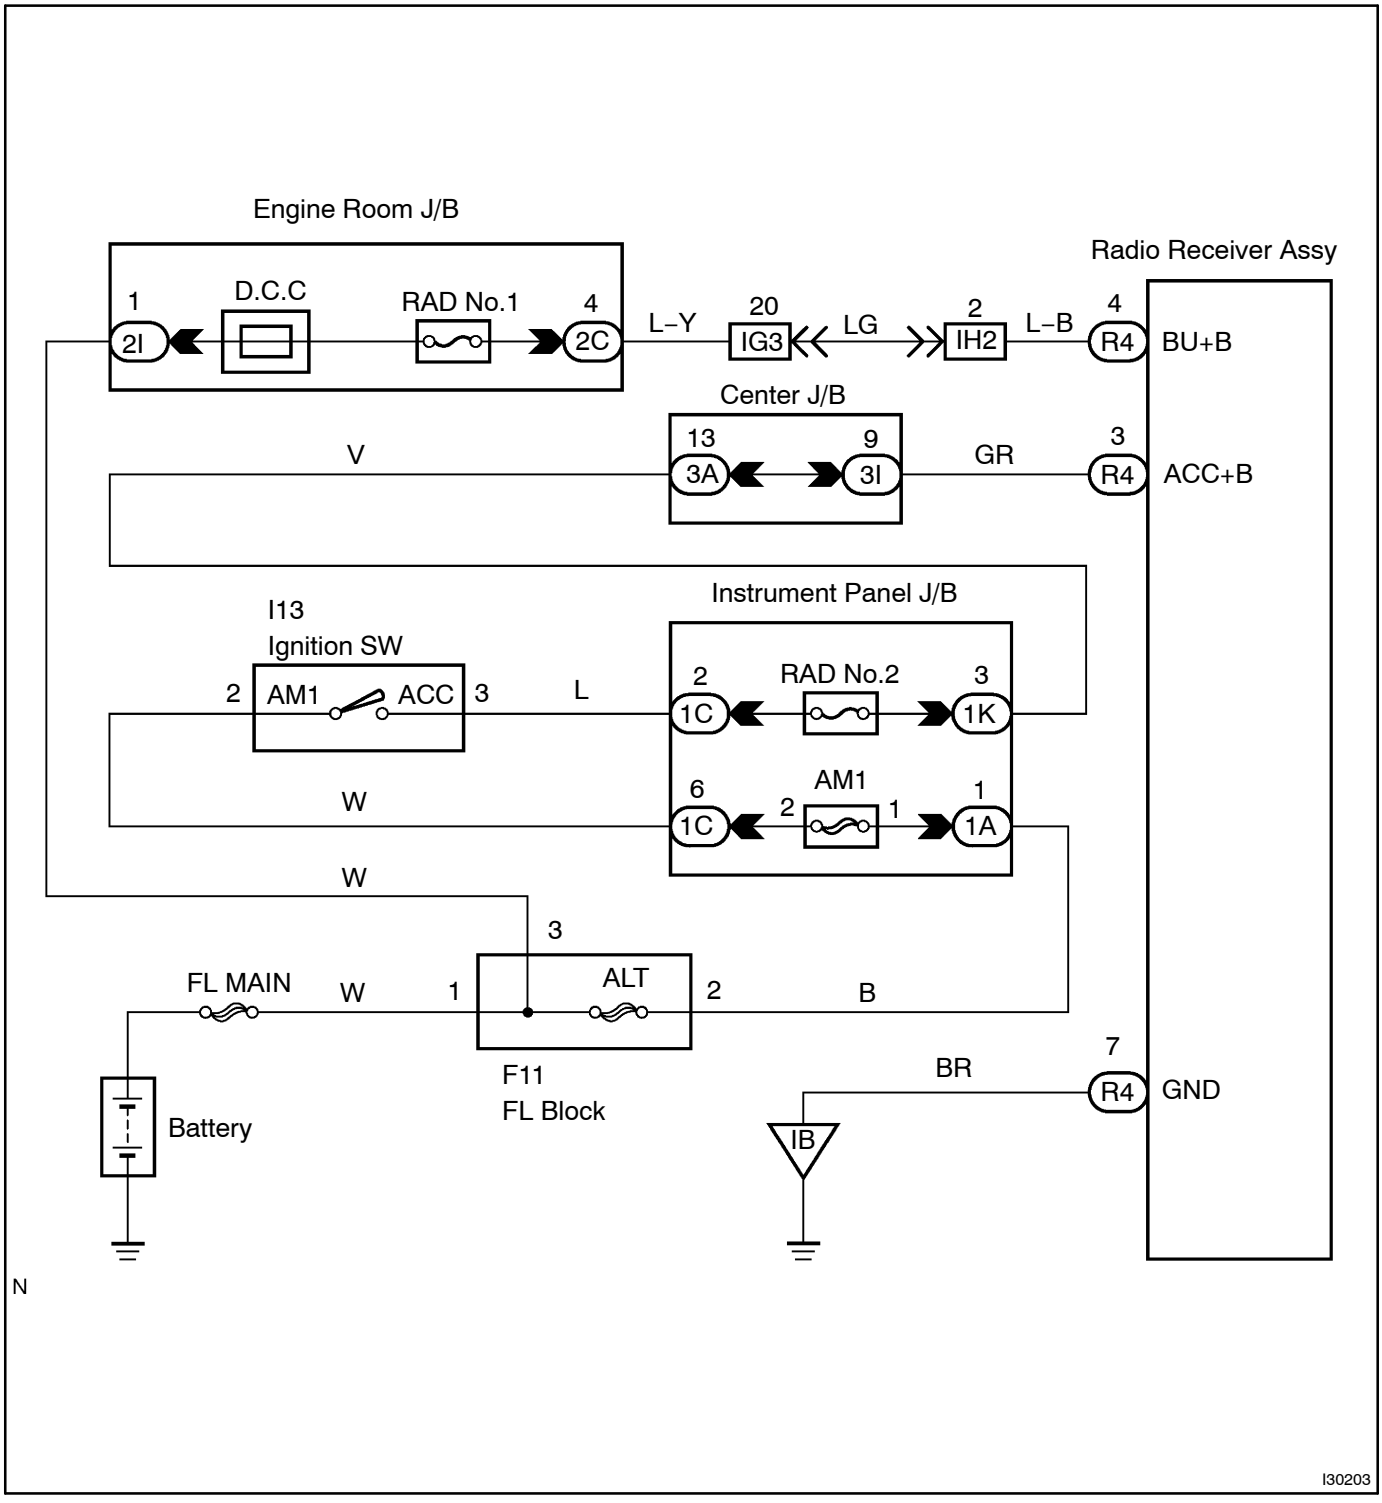

INSPECTION PROCEDURE

1	INSPECT RADIO RECEIVER ASSY (BU+B, ACC+B, GND)

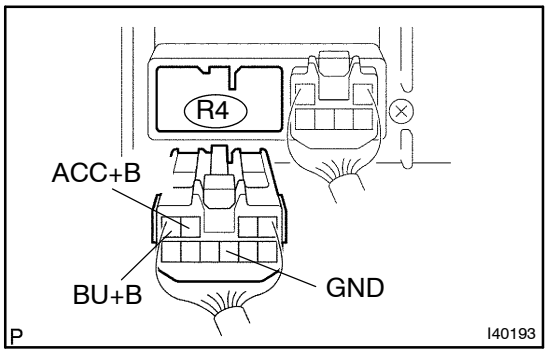

(a) Disconnect the connector from the radio receiver assy.

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND – Body ground	Always	Below 1 Ω

(c) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
BU+B – GND	Always	10 to 14 V
ACC+B – GND	Ignition SW ACC	10 to 14 V

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05–892)