

05JT7–01

# LOCATION

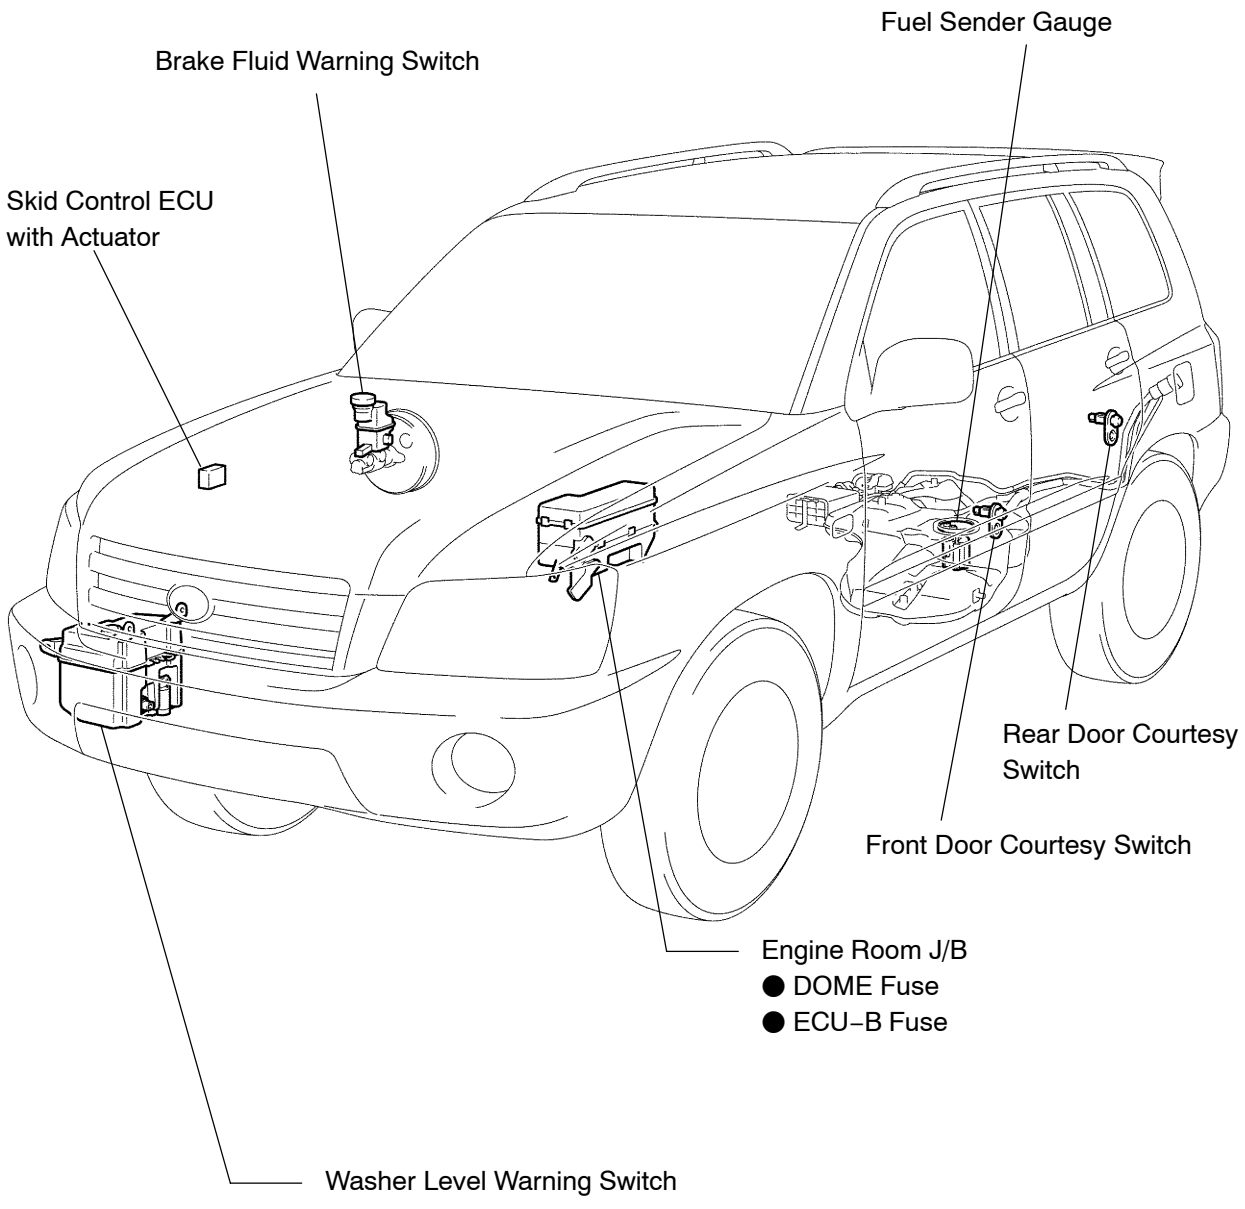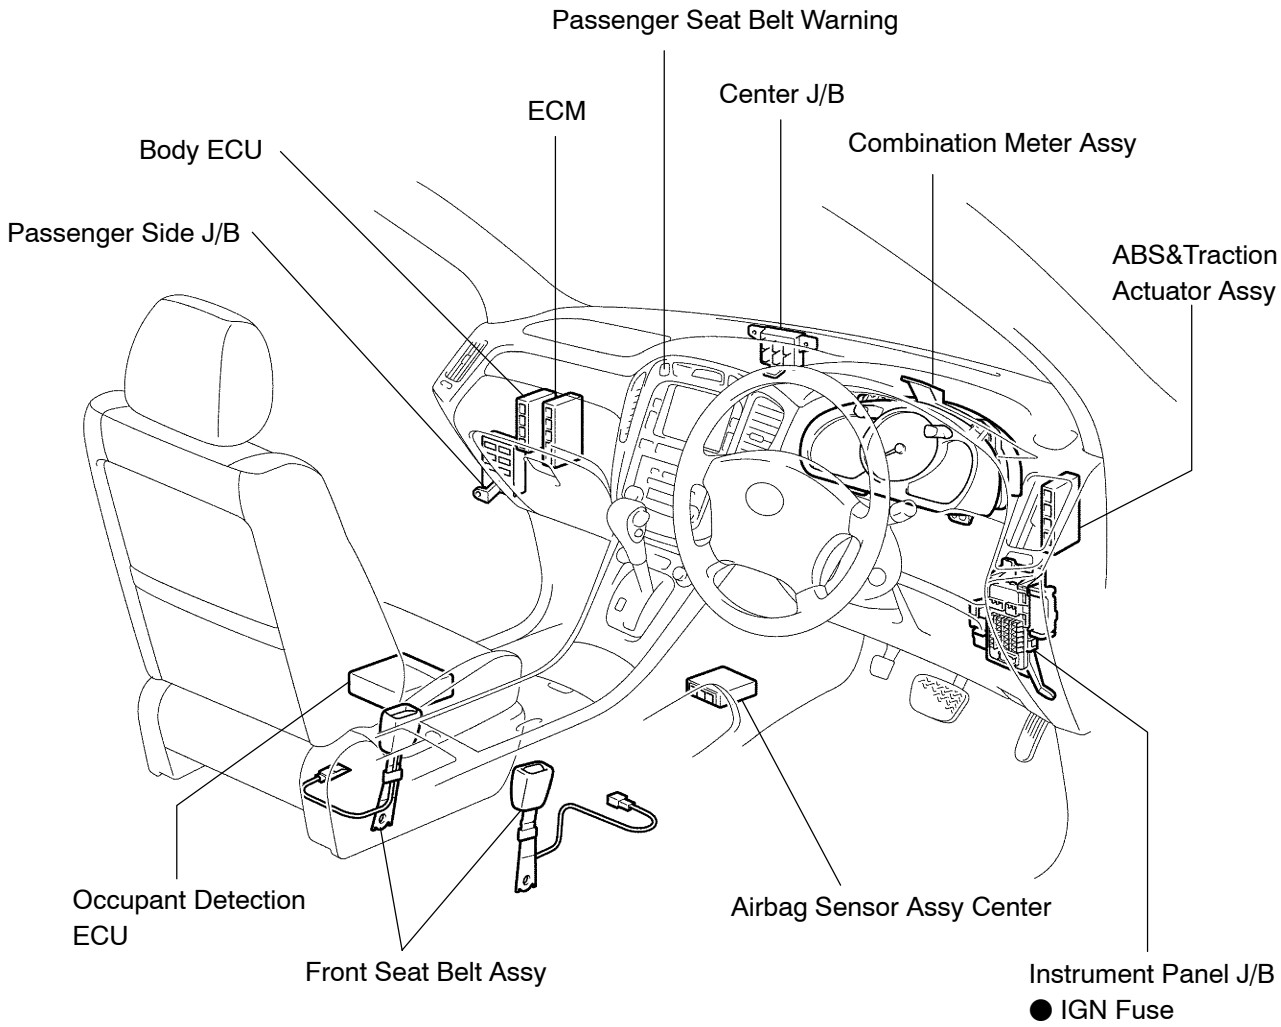


P


I40620


Passenger Seat Belt Warning
ECM
Center J/B
Body ECU
Combination Meter Assy
Passenger Side J/B
ABS&Traction
Actuator Assy
Occupant Detection
ECU
Airbag Sensor Assy Center
Front Seat Belt Assy
Instrument Panel J/B
● IGN Fuse


P

I40160

2AZ–FE Engine:

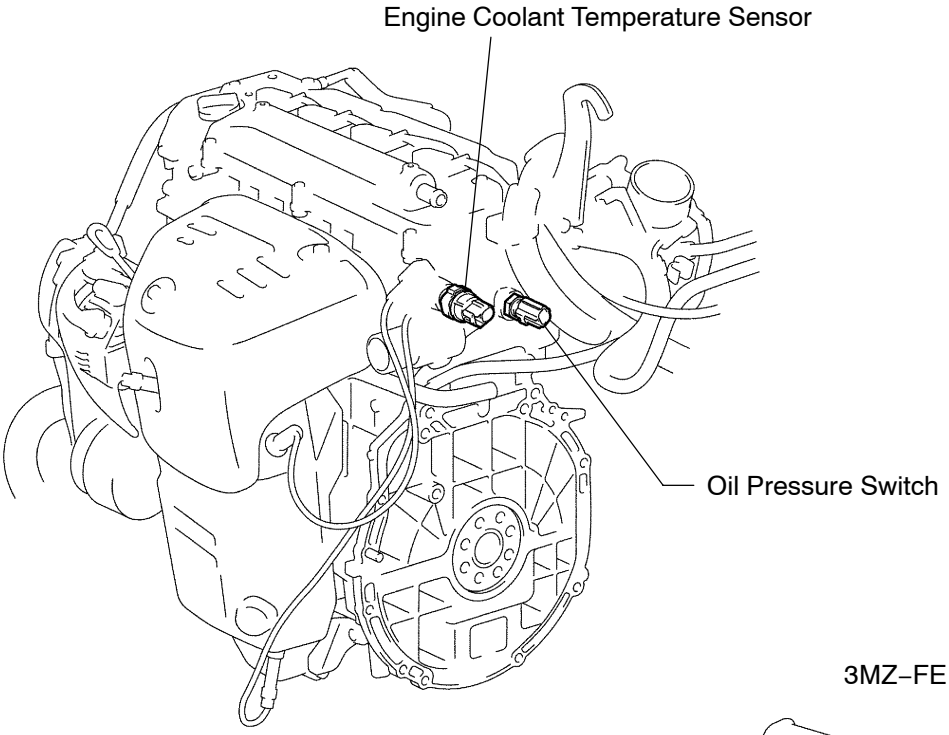




3MZ–FE Engine:

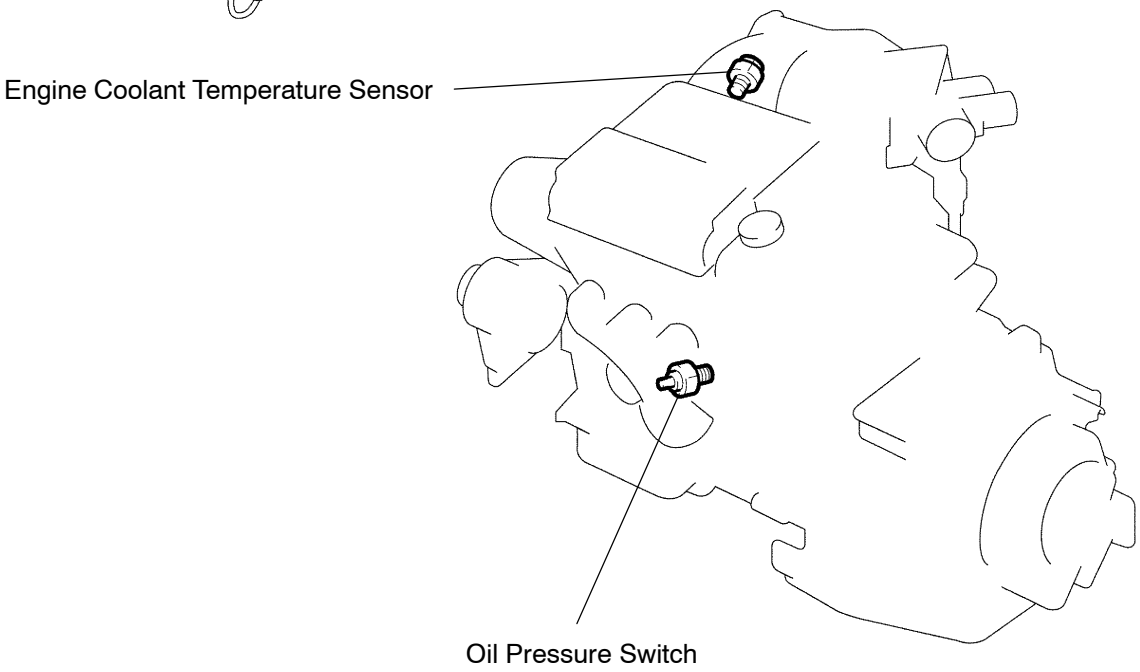



P

I30455

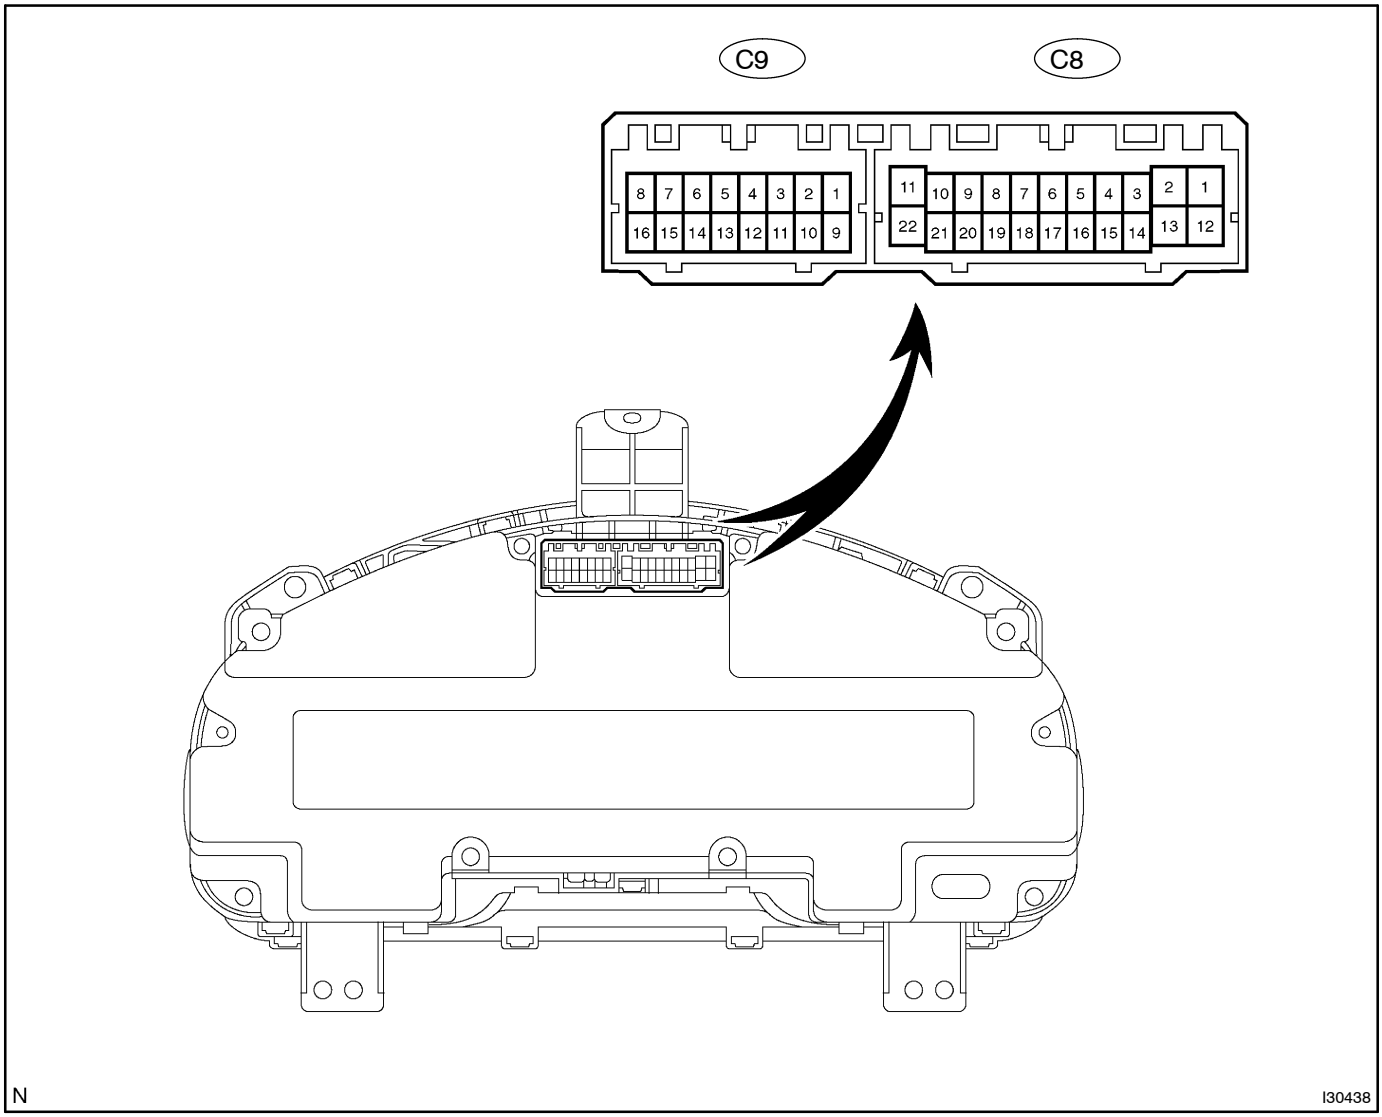
C9
C8
8 7 6 5 4 3 2 1
16 15 14 13 12 11 10 9
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
N
I30438

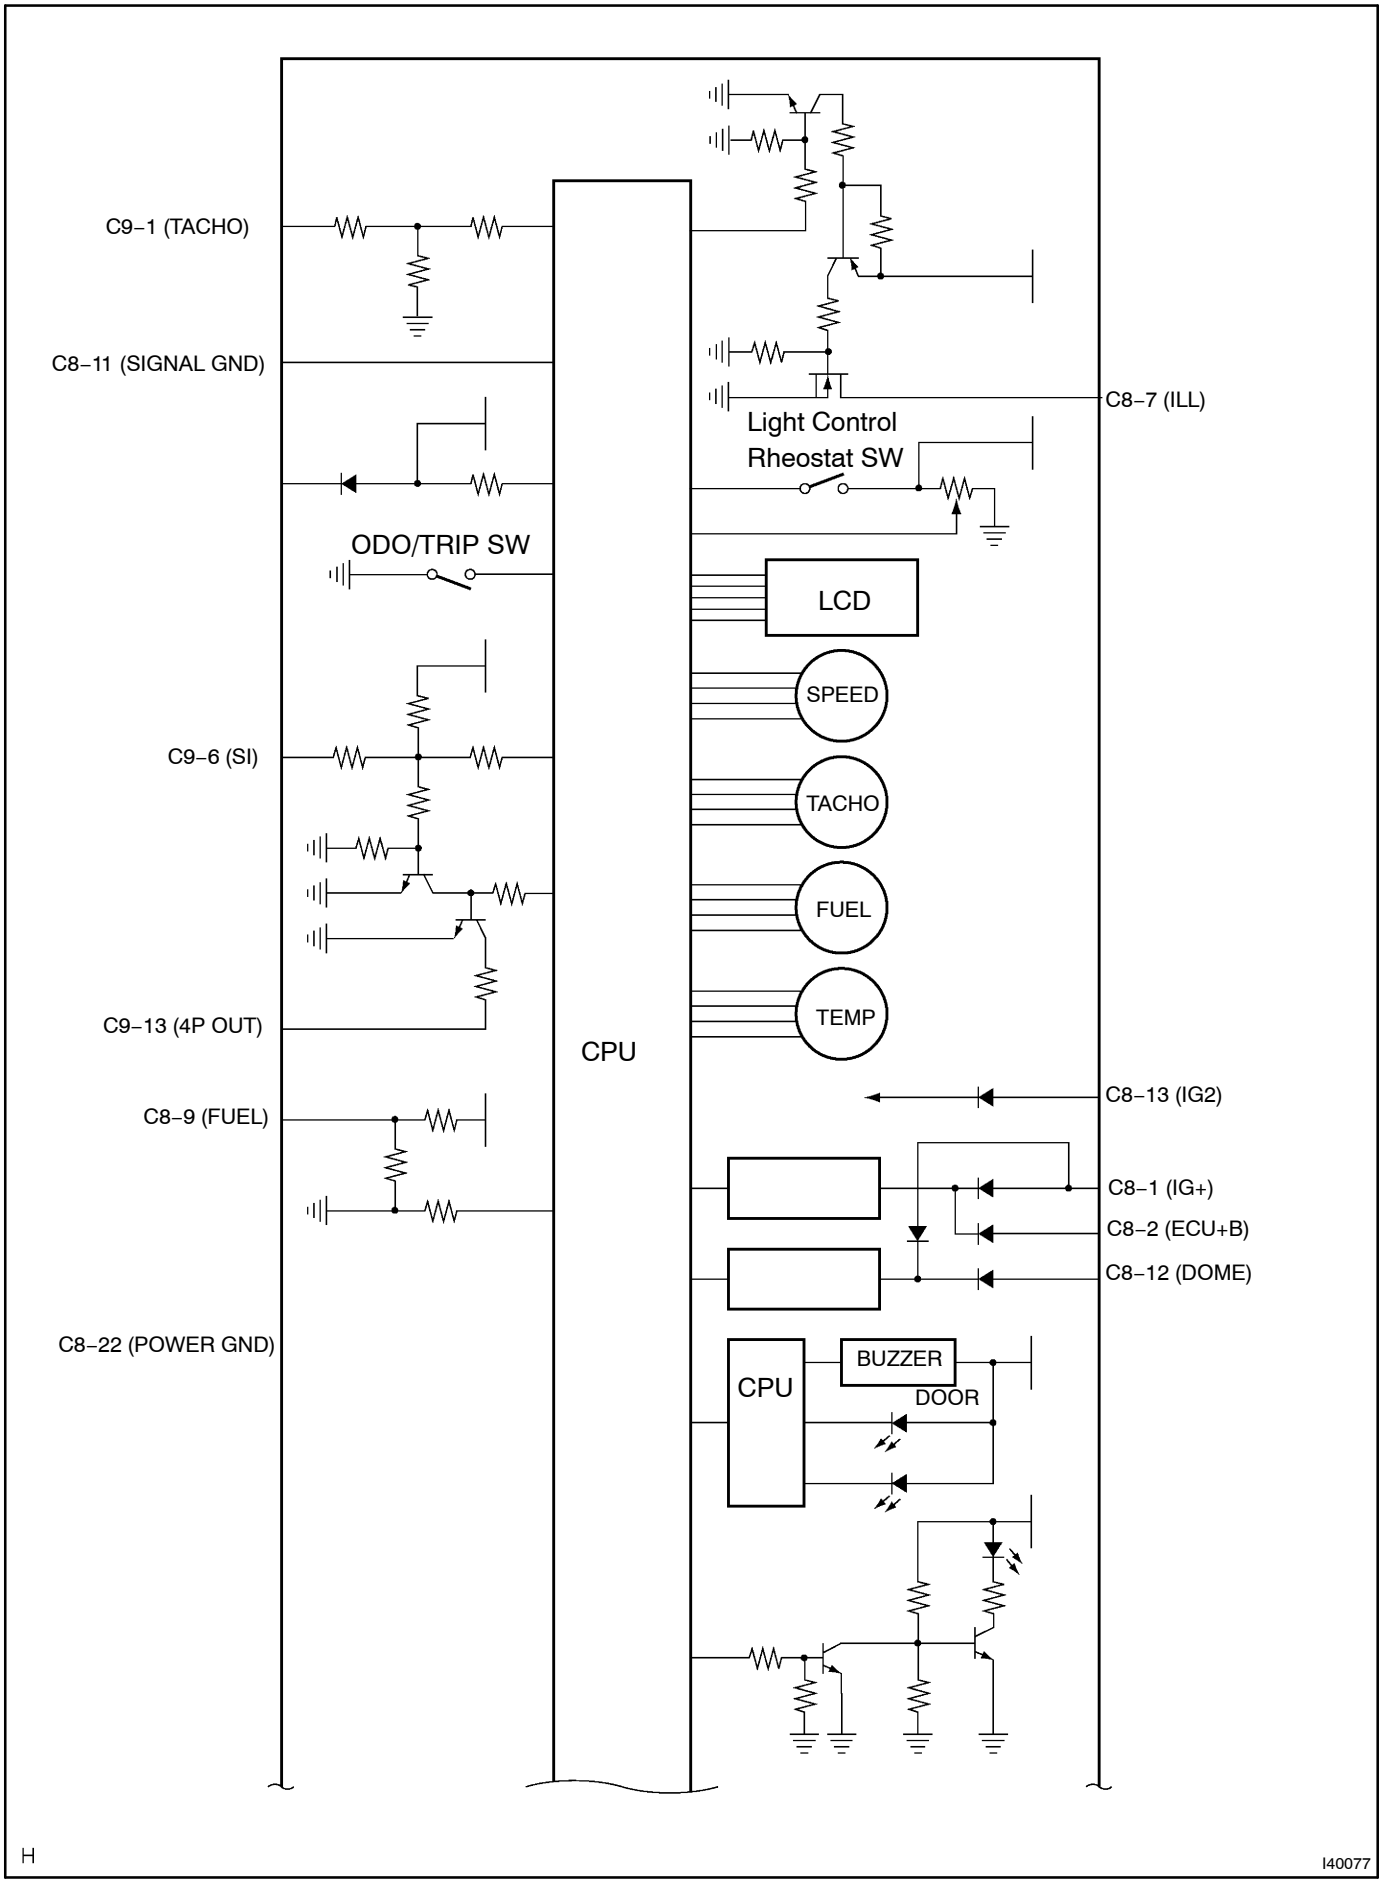
C9–1 (TACHO)
C8–11 (SIGNAL GND)
C8–7 (ILL)
Light Control
Rheostat SW
ODO/TRIP SW
LCD
SPEED
TACHO
FUEL
TEMP
C9–6 (SI)
C9–13 (4P OUT)
CPU
C8–9 (FUEL)
C8–13 (IG2)
C8–1 (IG+)
C8–2 (ECU+B)
C8–12 (DOME)
C8–22 (POWER GND)
CPU
BUZZER
DOOR
H
I40077

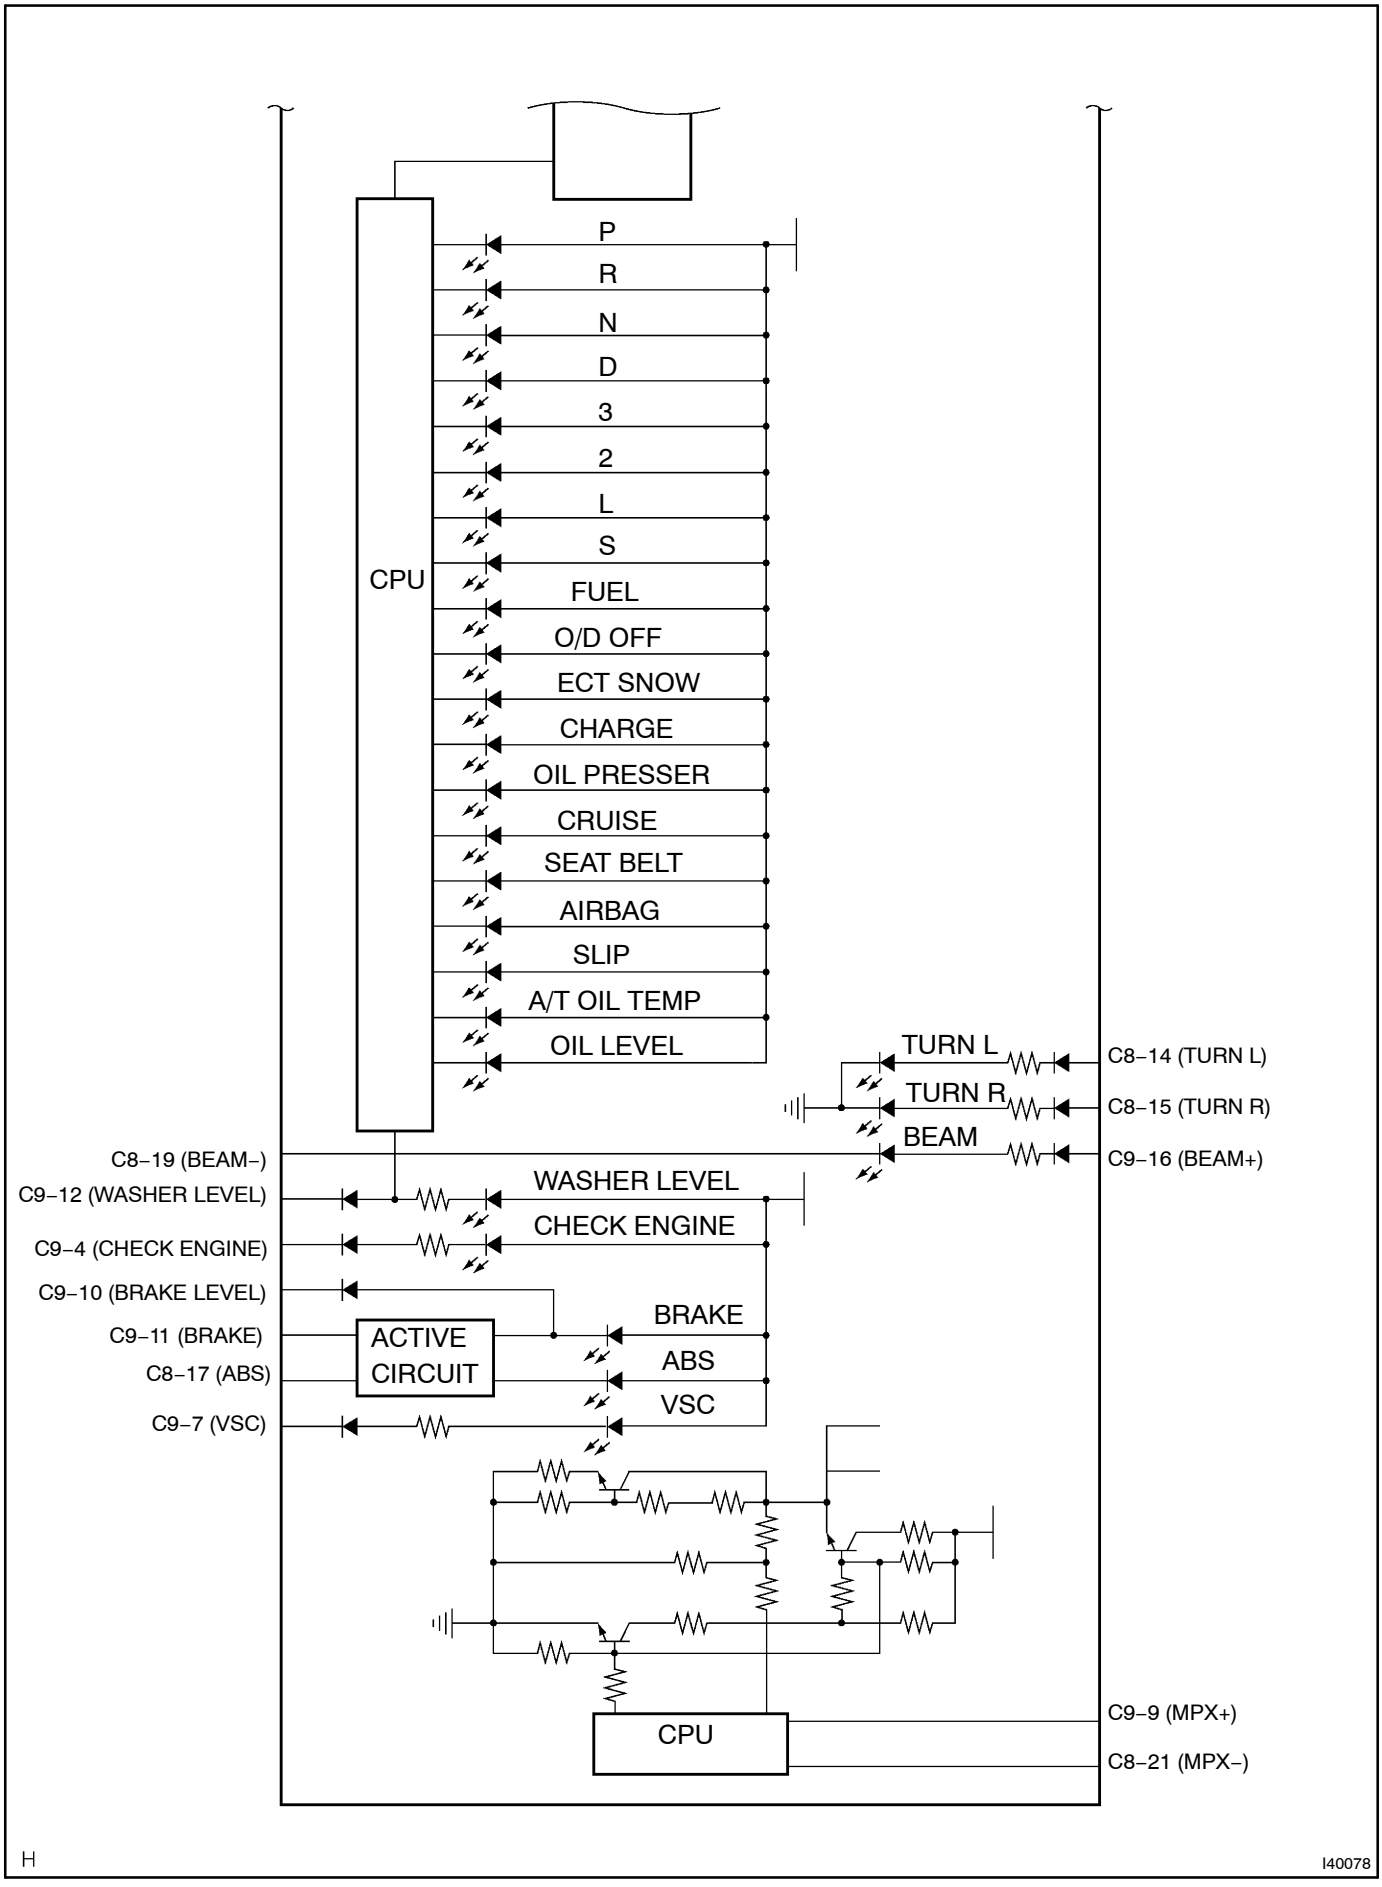
CPU
P
R
N
D
3
2
L
S
FUEL
O/D OFF
ECT SNOW
CHARGE
OIL PRESSER
CRUISE
SEAT BELT
AIRBAG
SLIP
A/T OIL TEMP
OIL LEVEL
TURN L
TURN R
BEAM
C8–14 (TURN L)
C8–15 (TURN R)
C9–16 (BEAM+)
C8–19 (BEAM–)
C9–12 (WASHER LEVEL)
WASHER LEVEL
CHECK ENGINE
C9–4 (CHECK ENGINE)
C9–10 (BRAKE LEVEL)
BRAKE
C9–11 (BRAKE)
ACTIVE CIRCUIT
ABS
C8–17 (ABS)
VSC
C9–7 (VSC)
CPU
C9–9 (MPX+)
C8–21 (MPX–)
H
I40078

| Terminal No. | | Wire Harness Side |
|---|---|---|
| C8 | 1 | HEATER Fuse |
| | 2 | ECU–B Fuse |
| | 7 | PANEL Fuse |
| | 9 | Fuel sender gauge |
| | 11 | Ground (Signal Ground) |
| | 12 | DOME Fuse |
| | 13 | IGN Fuse |
| | 14 | Turn Signal Flasher |
| | 15 | Turn Signal Flasher |
| | 17 | Skid Control ECU |
| | 19 | Headlight Dimmer Switch |
| | 21 | Multiplex Communication Line (MPX–) |
| | 22 | Ground (Power Ground) |
| C9 | 1 | ECM |
| | 4 | ECM |
| | 6 | Skid Control ECU (SI) |
| | 7 | Skid Control ECU (VSC) |
| | 9 | Multiplex Communication Line (MPX+) |
| | 10 | Brake Warning Switch |
| | 11 | Skid Control ECU |
| | 12 | Washer Level Warning Switch |
| | 13 | Speed Control Unit (4P–OUT) |
| | 16 | Headlight Relay |