
ECM (3MZ–FE)

100NX–01


REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE FRONT DOOR SCUFF PLATE LH (See page 71–9)
3. REMOVE COWL SIDE TRIM SUB–ASSY LH (See page 71–9)
4. REMOVE GLOVE COMPARTMENT DOOR ASSY (See page 71–9)
5. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (See page 71–9)

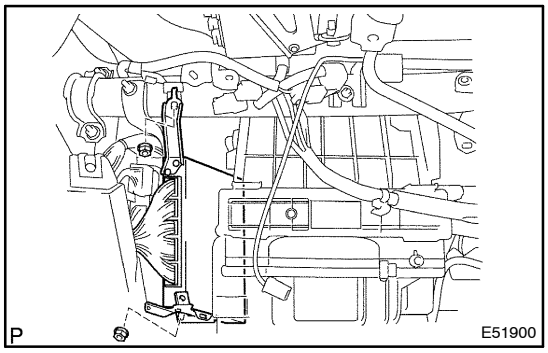


6. REMOVE ECM

(a) Remove the 2 wire harness clamps.
(b) Disconnect the 5 ECM connectors.
(c) Remove the 2 nuts and ECM.

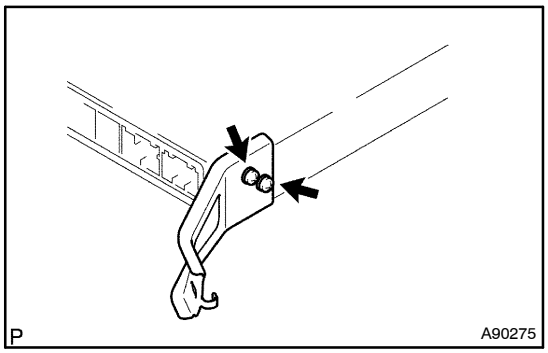

7. REMOVE ECM BRACKET NO. 1

(a) Remove the 2 screws and ECM bracket.

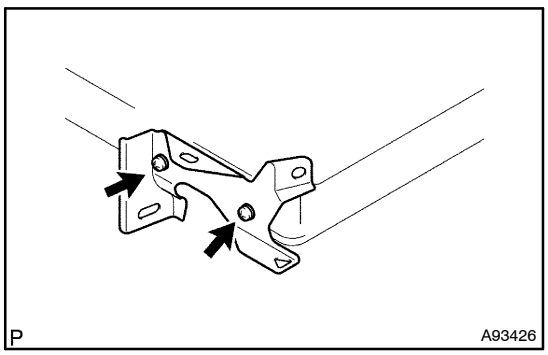


8. REMOVE ECM BRACKET NO. 2

(a) Remove the 2 screws and ECM bracket.


9. INSTALL ECM BRACKET NO. 2

(a) Install the ECM bracket with the 2 screws.

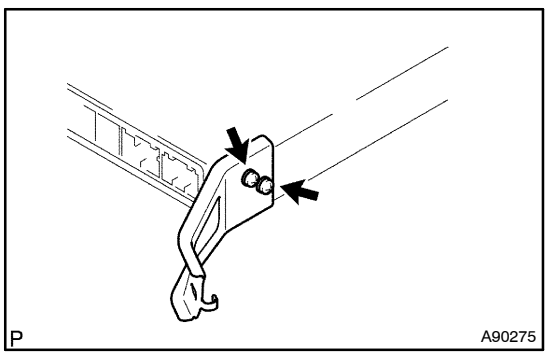

10. INSTALL ECM BRACKET NO. 1

(a) Install the ECM bracket with the 2 screws.

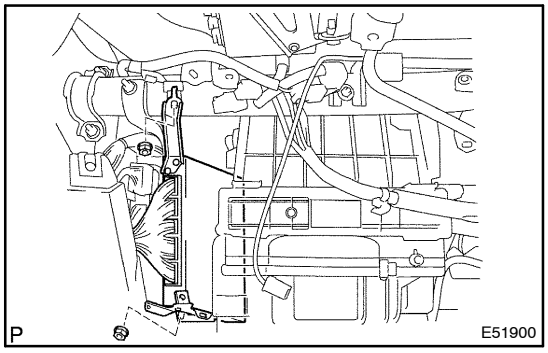

11. INSTALL ECM

(a) Install the 2 wire harness clamps.

(b) Connect the 5 ECM connectors.

(c) Install the ECM with the 2 nuts.

Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)

12. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (See page 71–9)

13. INSTALL GLOVE COMPARTMENT DOOR ASSY (See page 71–9)

14. INSTALL COWL SIDE TRIM SUB–ASSY LH (See page 71–9)

15. INSTALL FRONT DOOR SCUFF PLATE LH (See page 71–9)

16. CONNECT BATTERY NEGATIVE TERMINAL