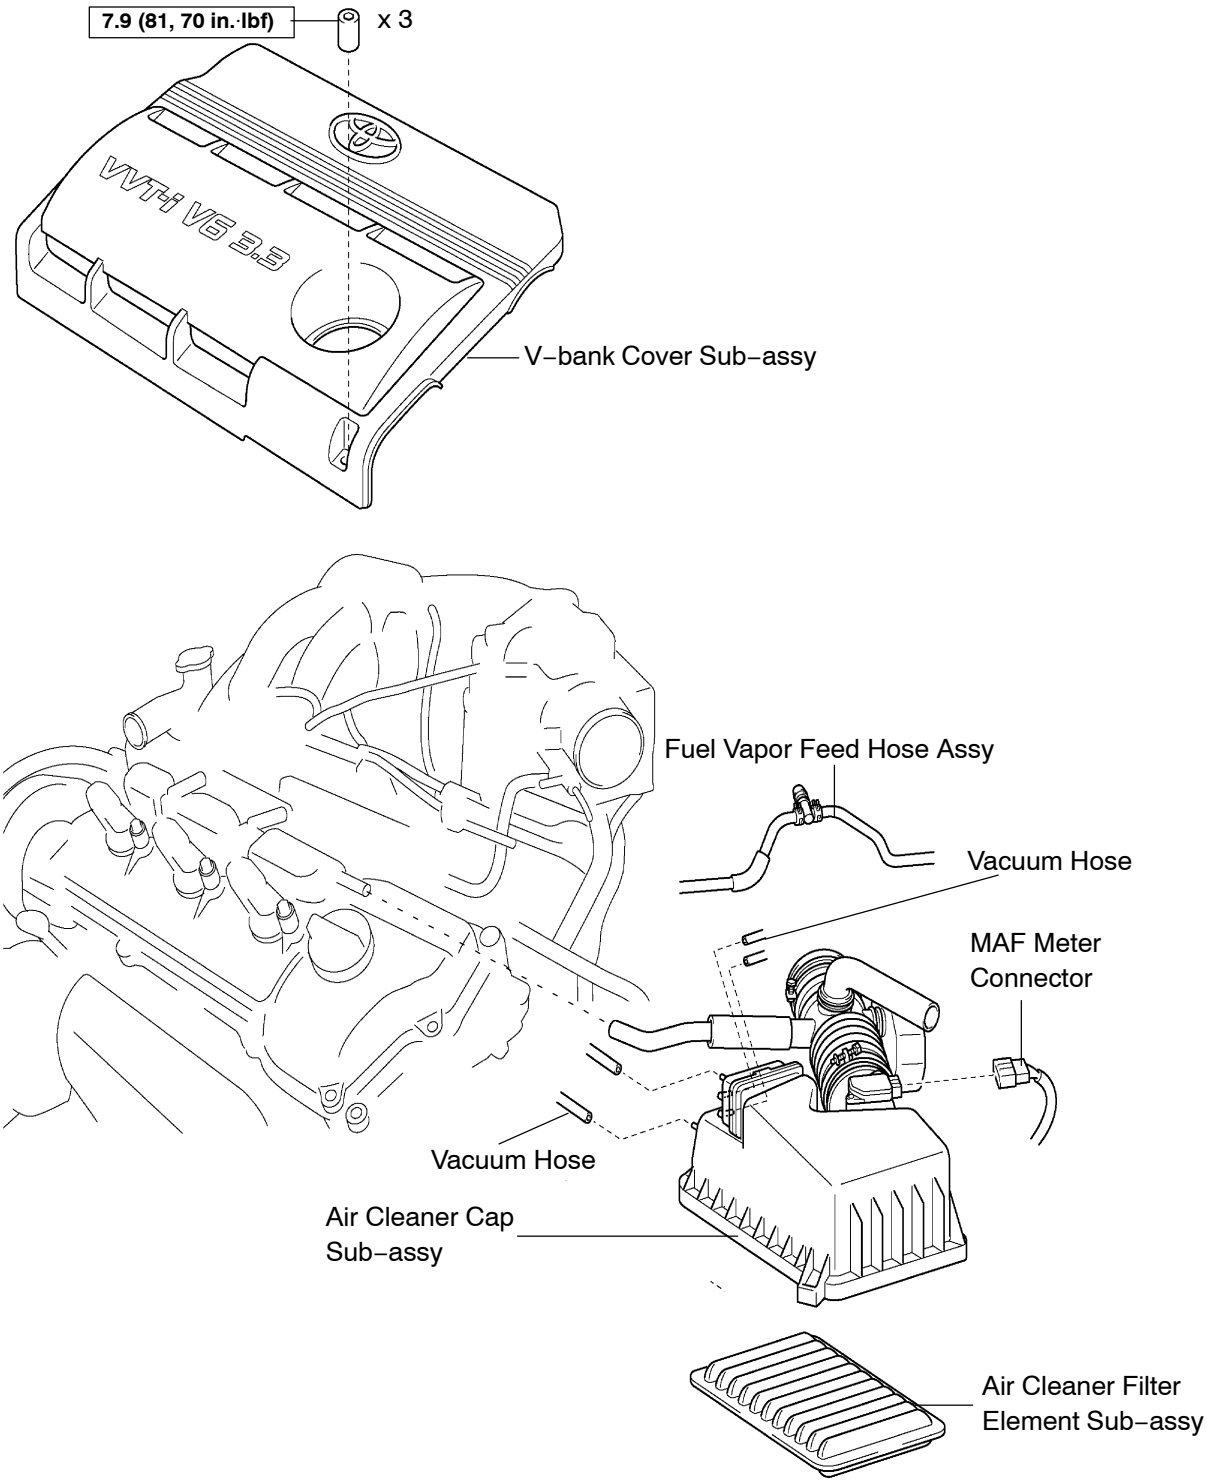
FUEL INJECTOR ASSY (3MZ–FE)

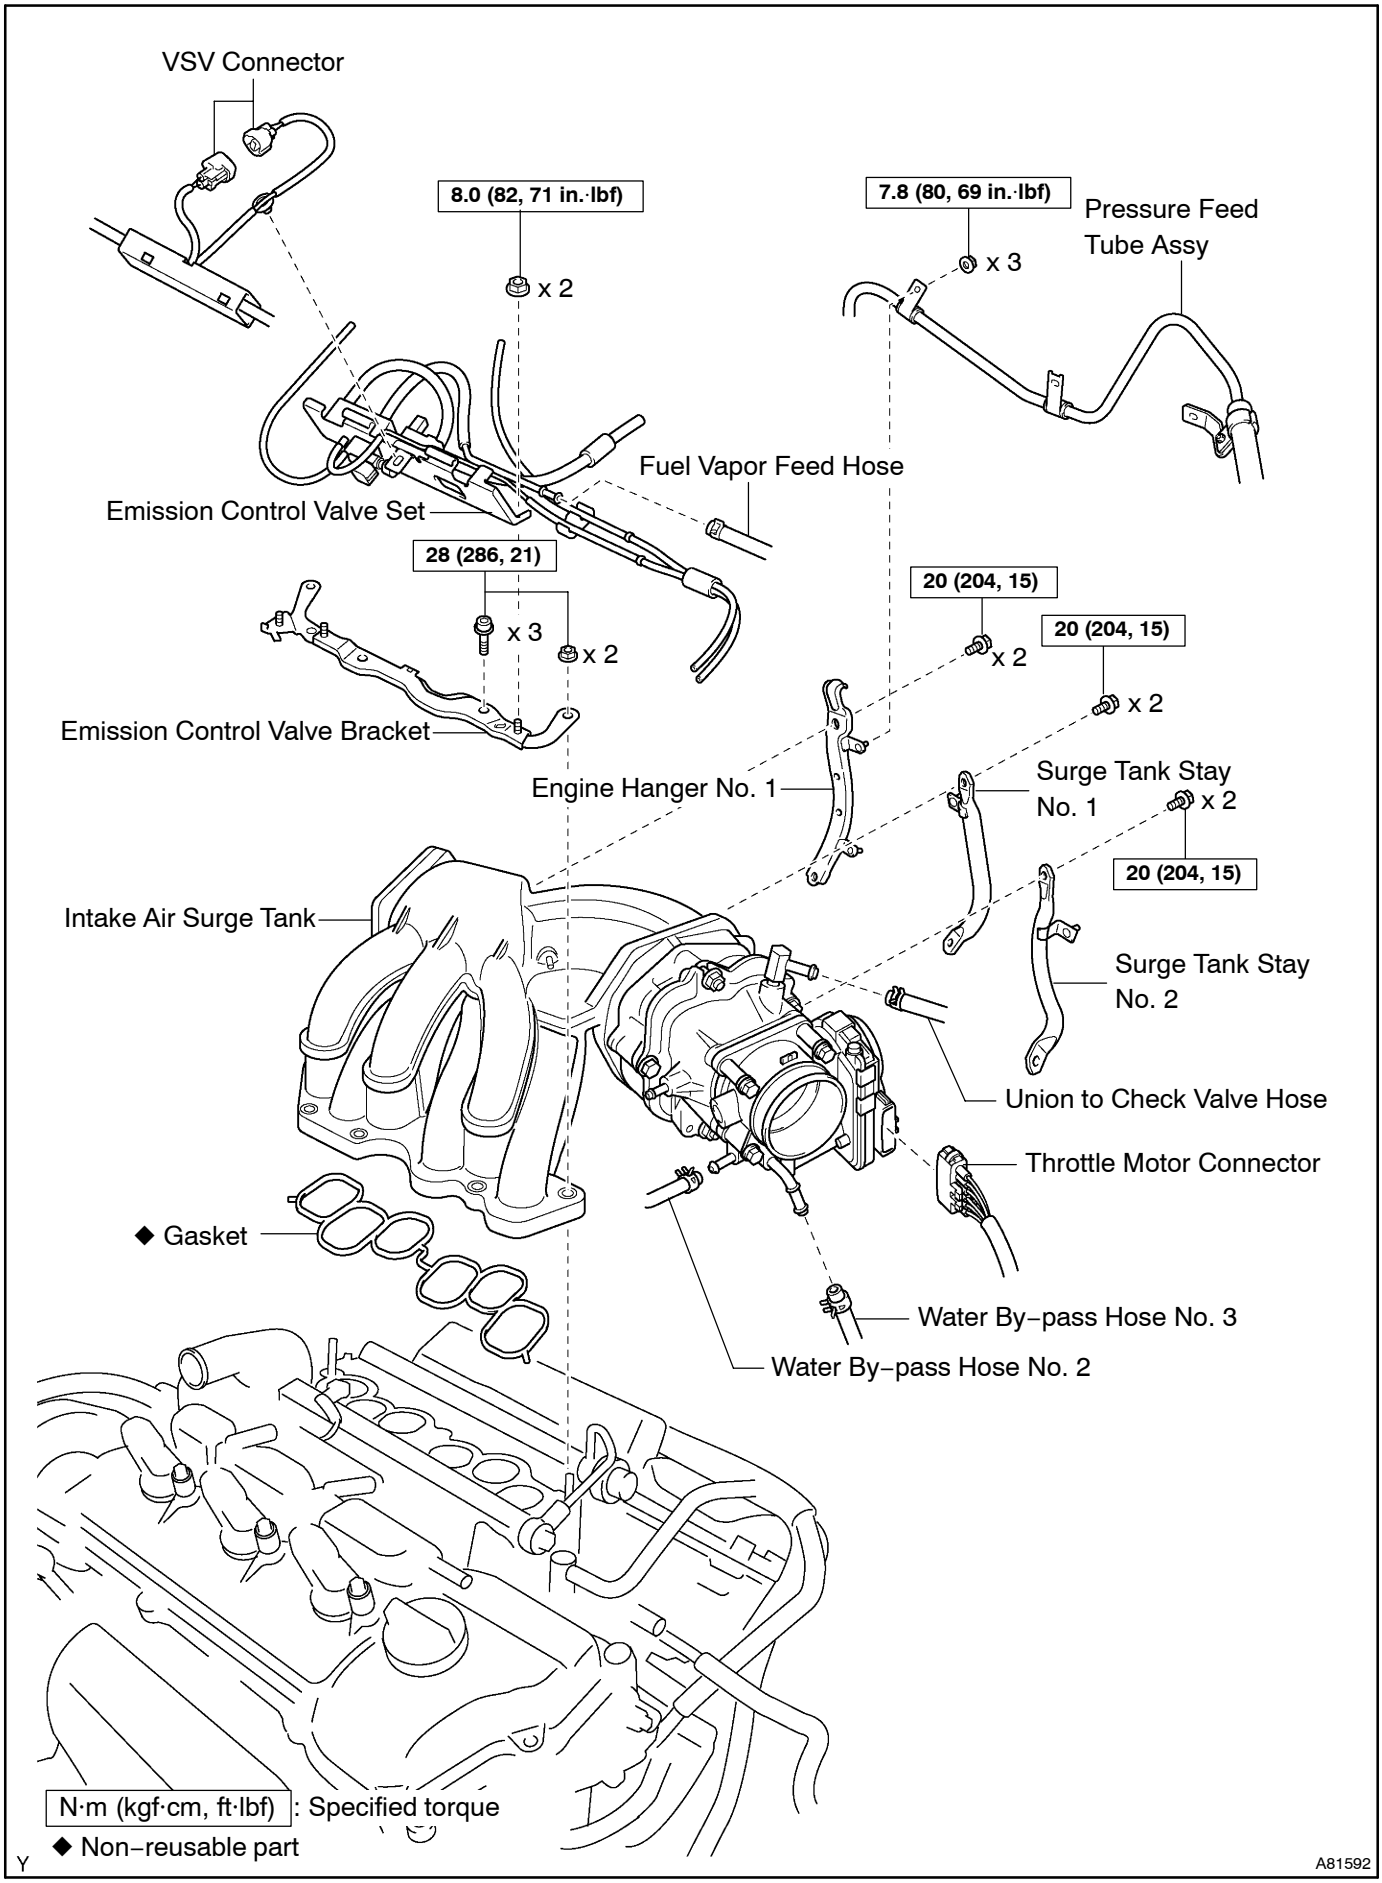
COMPONENTS

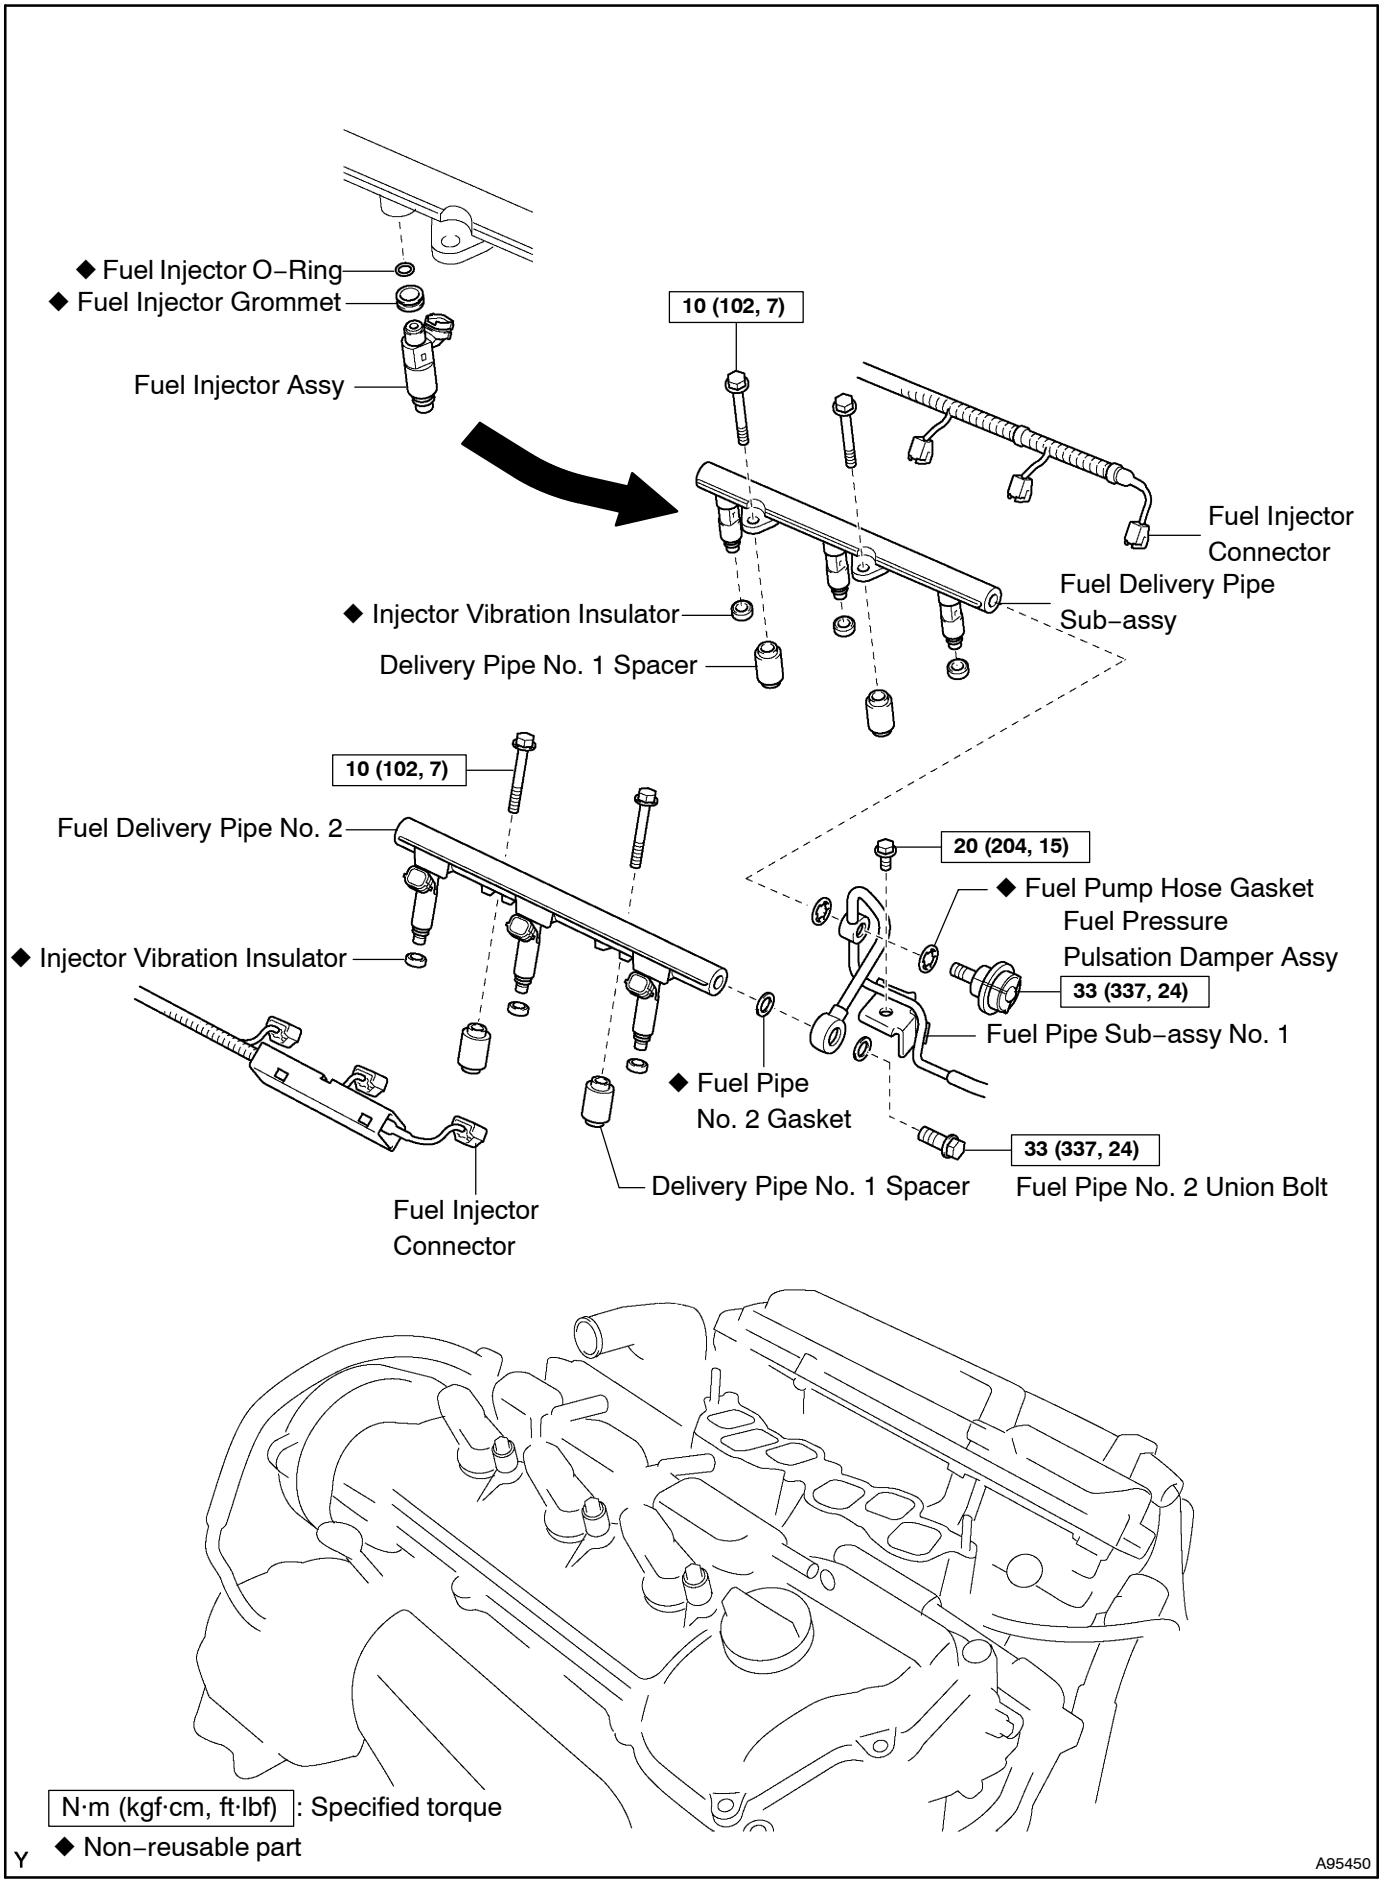
11130–01



N·m (kgf·cm, ft·lbf) : Specified torque

A94493


VSV Connector
8.0 (82, 71 in.·lbf)
x 2
7.8 (80, 69 in.·lbf)
x 3
Pressure Feed Tube Assy
Fuel Vapor Feed Hose
Emission Control Valve Set
28 (286, 21)
x 3
x 2
20 (204, 15)
x 2
20 (204, 15)
x 2
Emission Control Valve Bracket
Engine Hanger No. 1
Surge Tank Stay No. 1
x 2
20 (204, 15)
Intake Air Surge Tank
Surge Tank Stay No. 2
Union to Check Valve Hose
Throttle Motor Connector
◆ Gasket
Water By–pass Hose No. 3
Water By–pass Hose No. 2
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Y
A81592


◆ Fuel Injector O–Ring
◆ Fuel Injector Grommet
Fuel Injector Assy
10 (102, 7)
Fuel Injector Connector
Fuel Delivery Pipe Sub–assy
◆ Injector Vibration Insulator
Delivery Pipe No. 1 Spacer
10 (102, 7)
Fuel Delivery Pipe No. 2
20 (204, 15)
◆ Fuel Pump Hose Gasket
Fuel Pressure Pulsation Damper Assy
33 (337, 24)
◆ Injector Vibration Insulator
Fuel Pipe Sub–assy No. 1
◆ Fuel Pipe No. 2 Gasket
33 (337, 24)
Delivery Pipe No. 1 Spacer
Fuel Pipe No. 2 Union Bolt
Fuel Injector Connector
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Y
A95450