VENTILATION VALVE SUB–ASSY (3MZ–FE)


120ED–01

REPLACEMENT

1. REMOVE VENTILATION VALVE SUB–ASSY

(a) Disconnect the ventilation hose from the ventilation valve.

(b) Remove the ventilation valve.

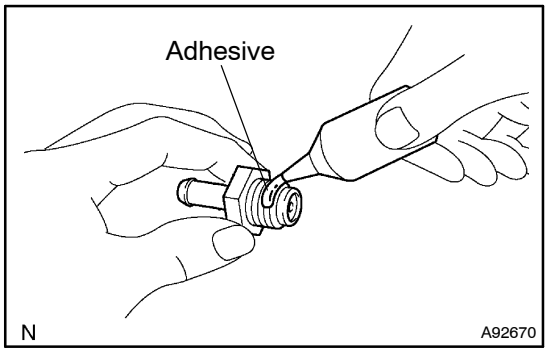

2. INSTALL VENTILATION VALVE SUB–ASSY

(a) Install the ventilation valve.

(1) Apply adhesive to 2 or 3 threads.

Adhesive:
Part No. 08833–00070, THREE BOND 1324 or equivalent

(2) Install the ventilation valve.

Torque: 19 N·m (193 kgf·cm, 14 ft·lbf)

(b) Connect the ventilation hose to the ventilation valve.