
INTAKE AIR CONTROL SYSTEM (3MZ–FE)

1308S–01

ON–VEHICLE INSPECTION

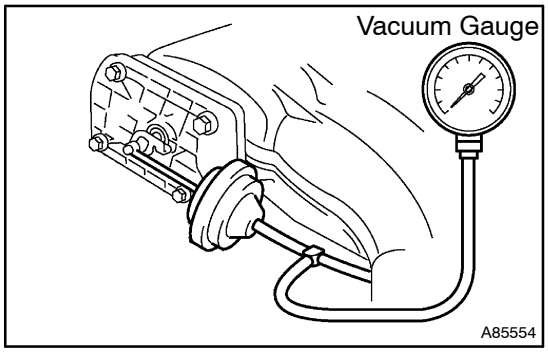

1. INSPECT INTAKE AIR CONTROL SYSTEM

(a) Using a 3–way connector, connect a vacuum gauge to the actuator hose.

(b) Connect the hand–held tester to the DLC3.

(c) Start the engine.

(d) On the hand–held tester, enter the ACTIVE TEST mode.

Standard:

Switch Condition	Vacuum
VSV ON	Approx. 27.6 kPa (200 mmHg, 7.9 in.Hg)
VSV OFF	0 kPa (0 mmHg, 0 in.Hg)

HINT:

Refer to the hand–held tester operation's manual for further detail