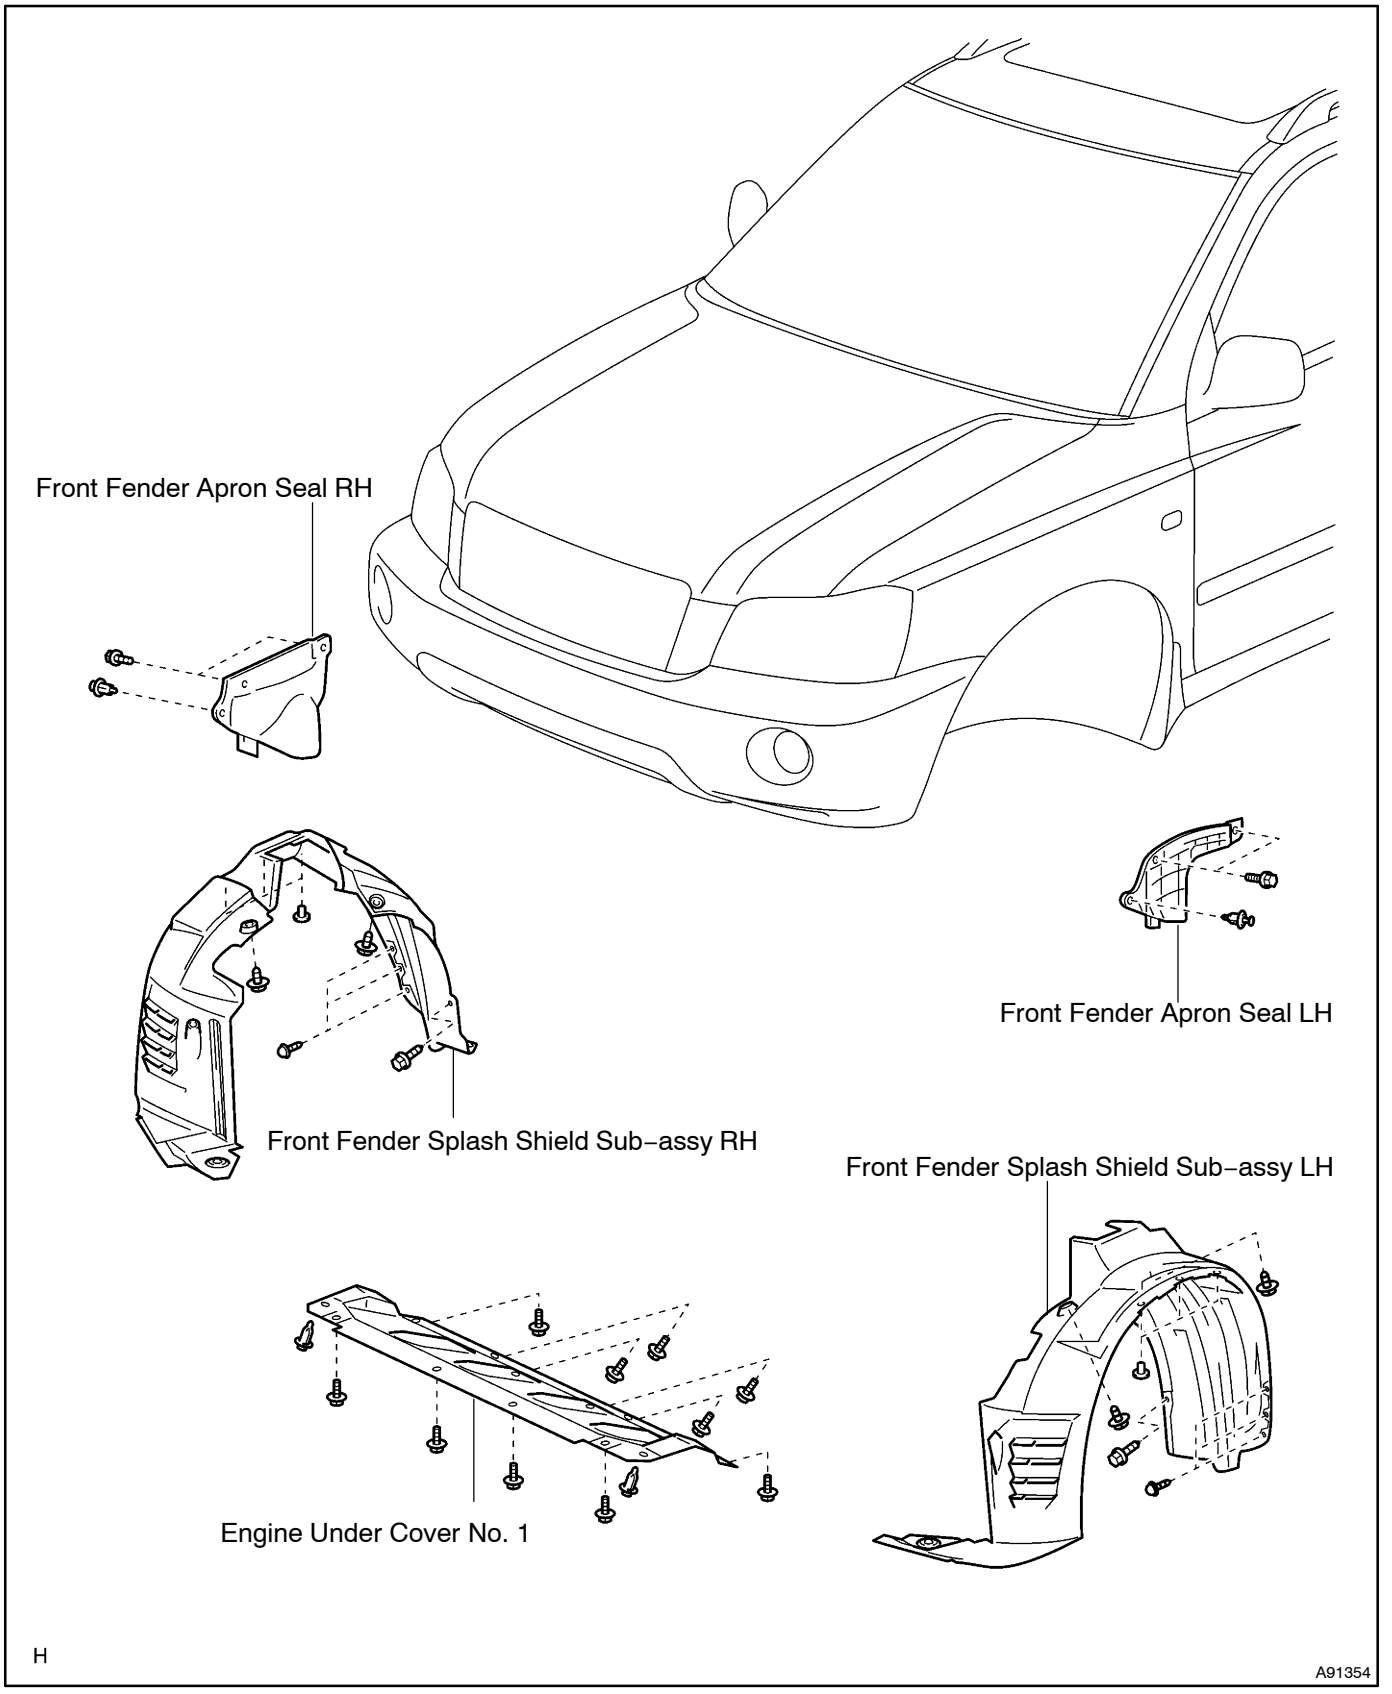
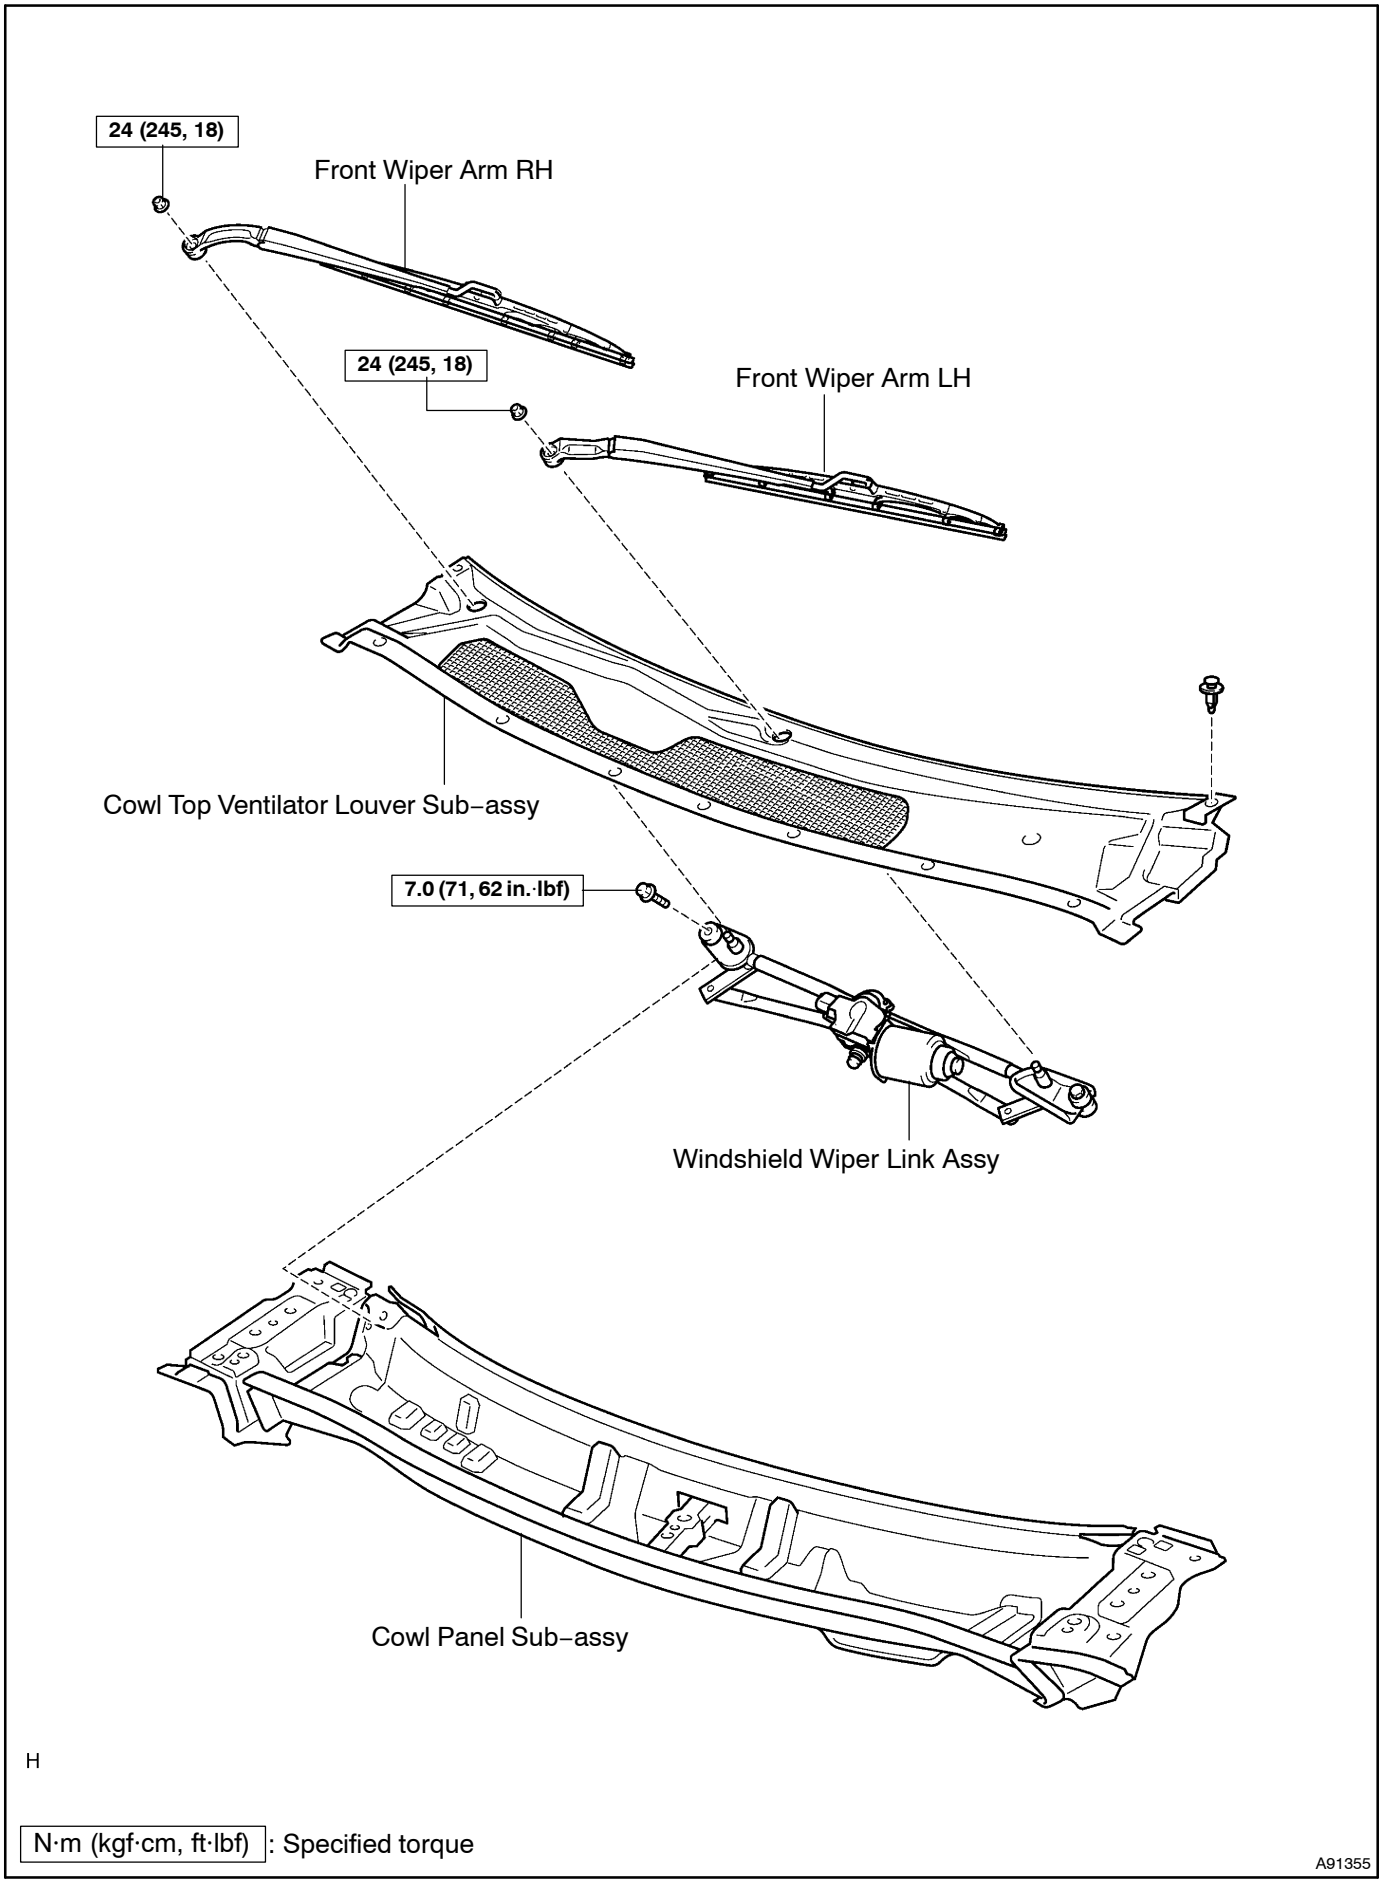
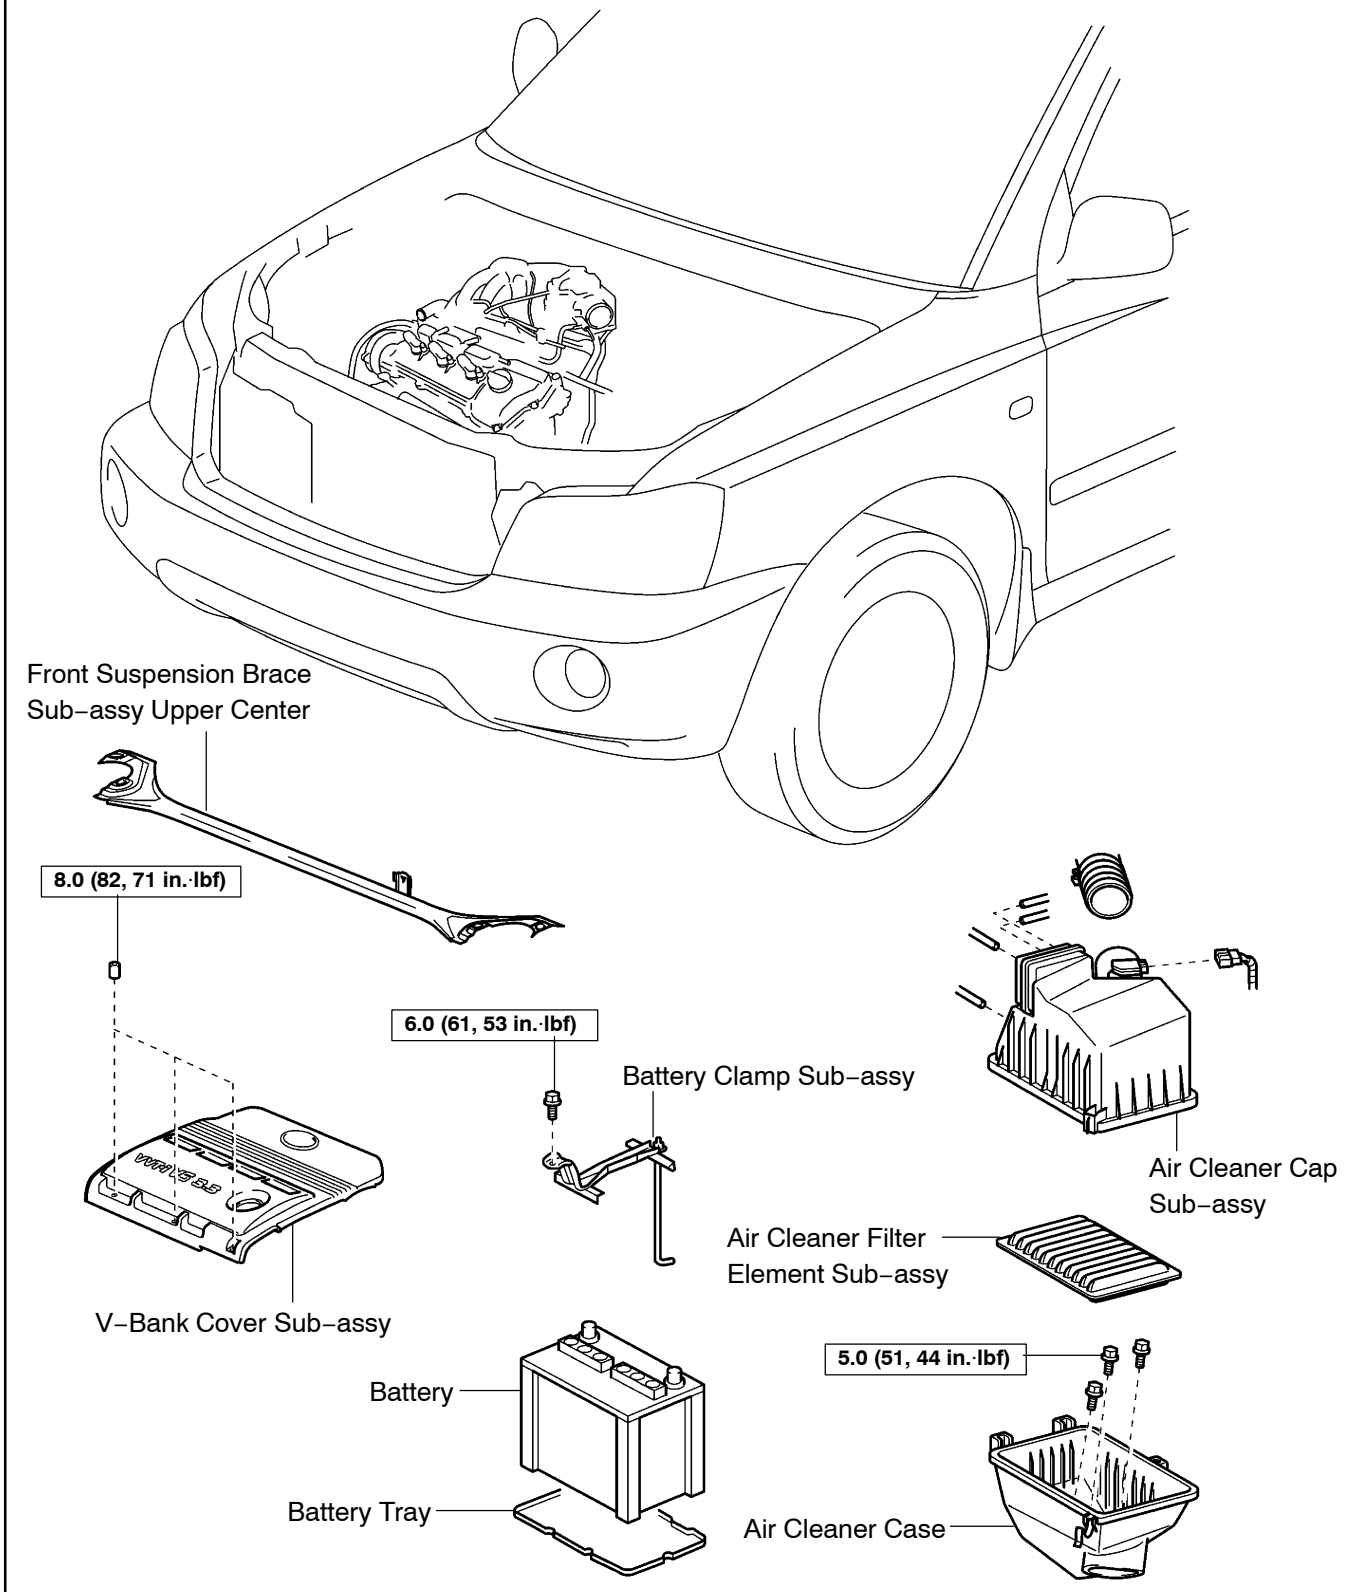
PARTIAL ENGINE ASSY (3MZ–FE)

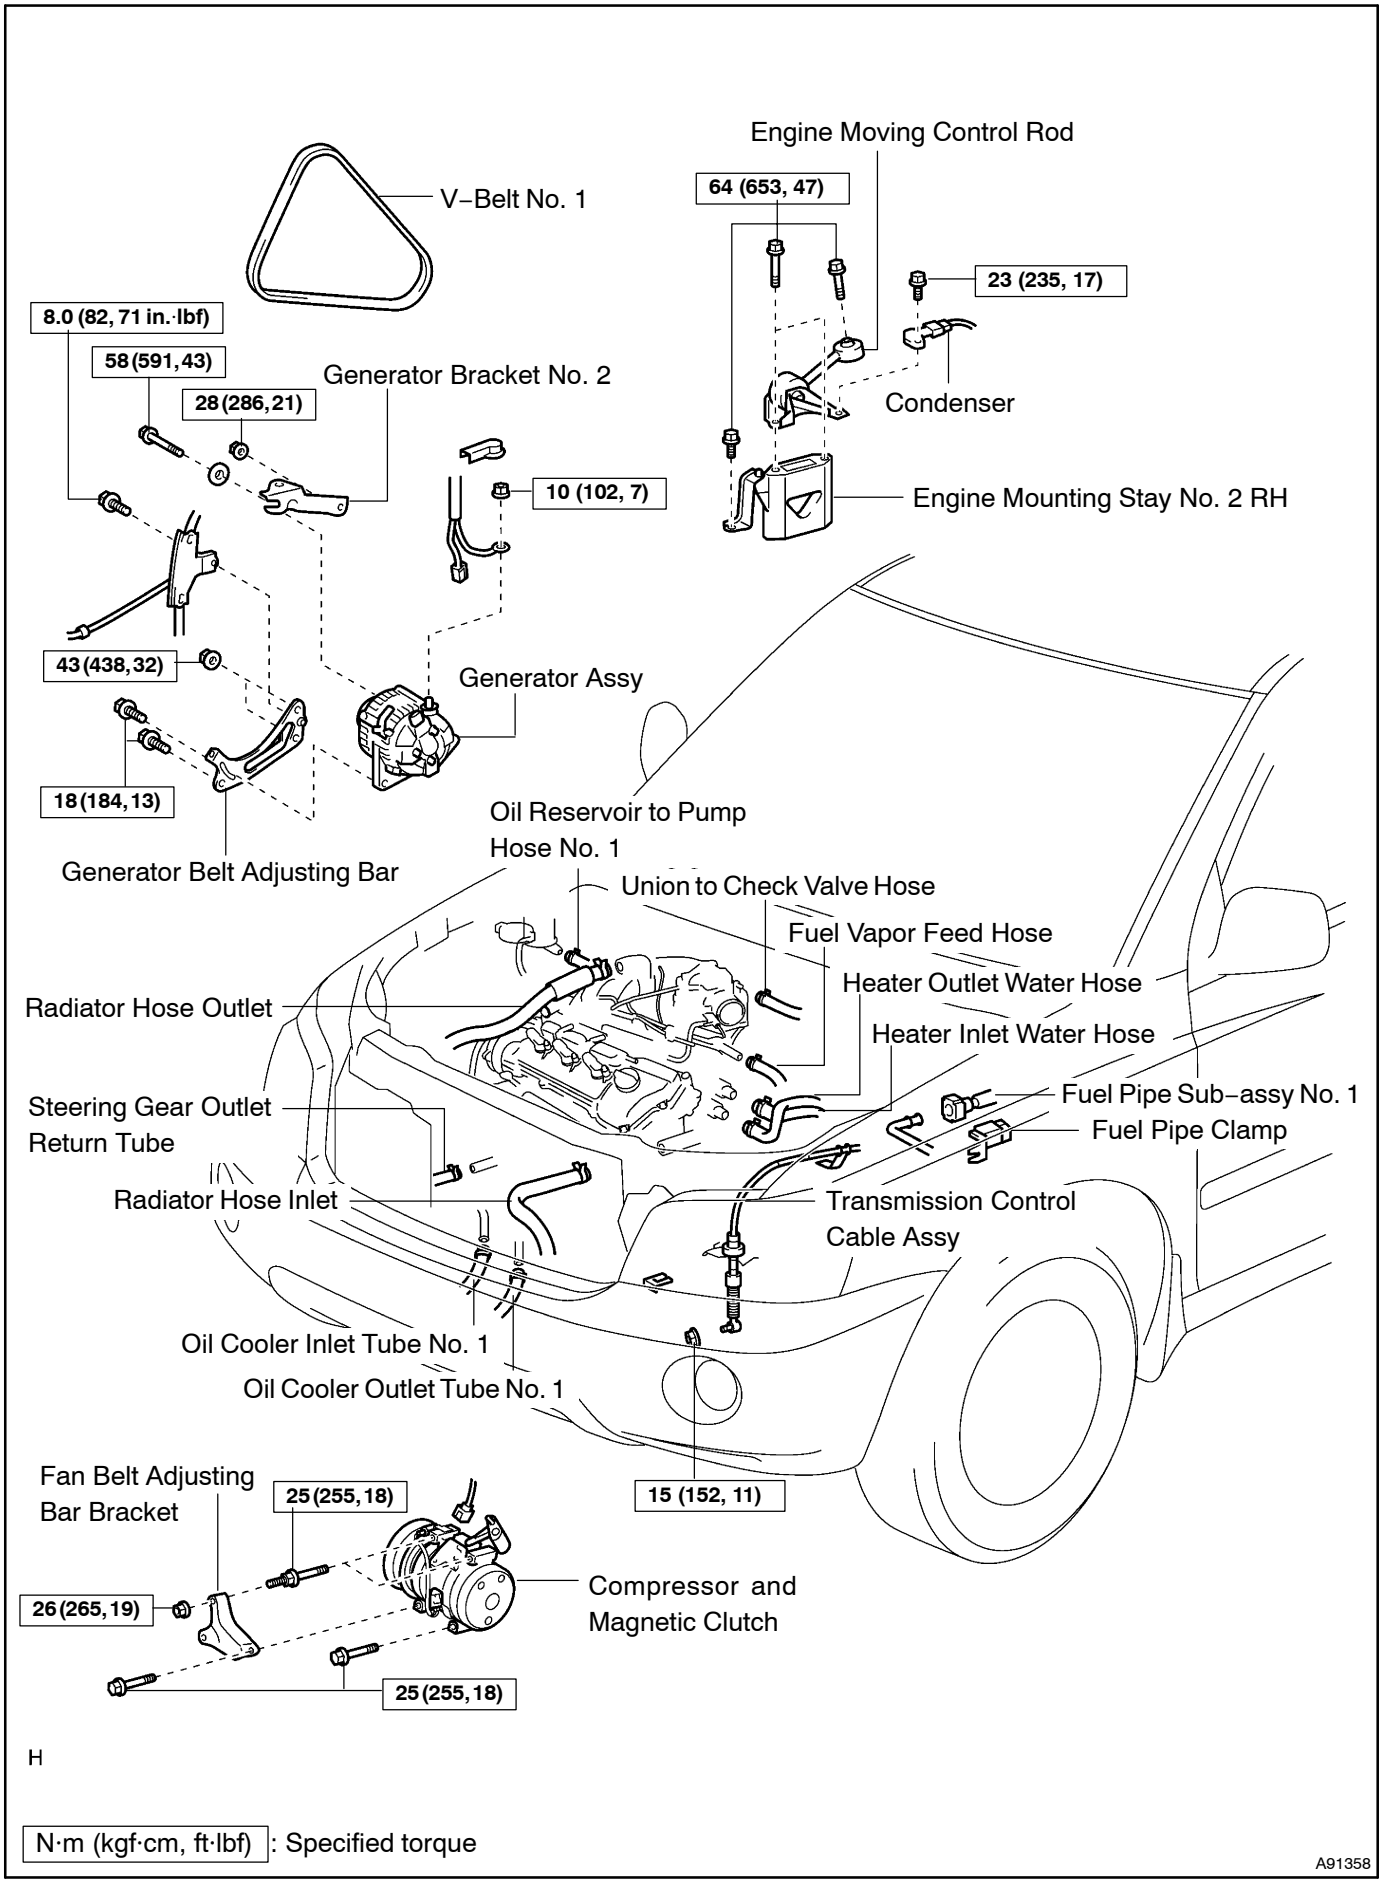
COMPONENTS

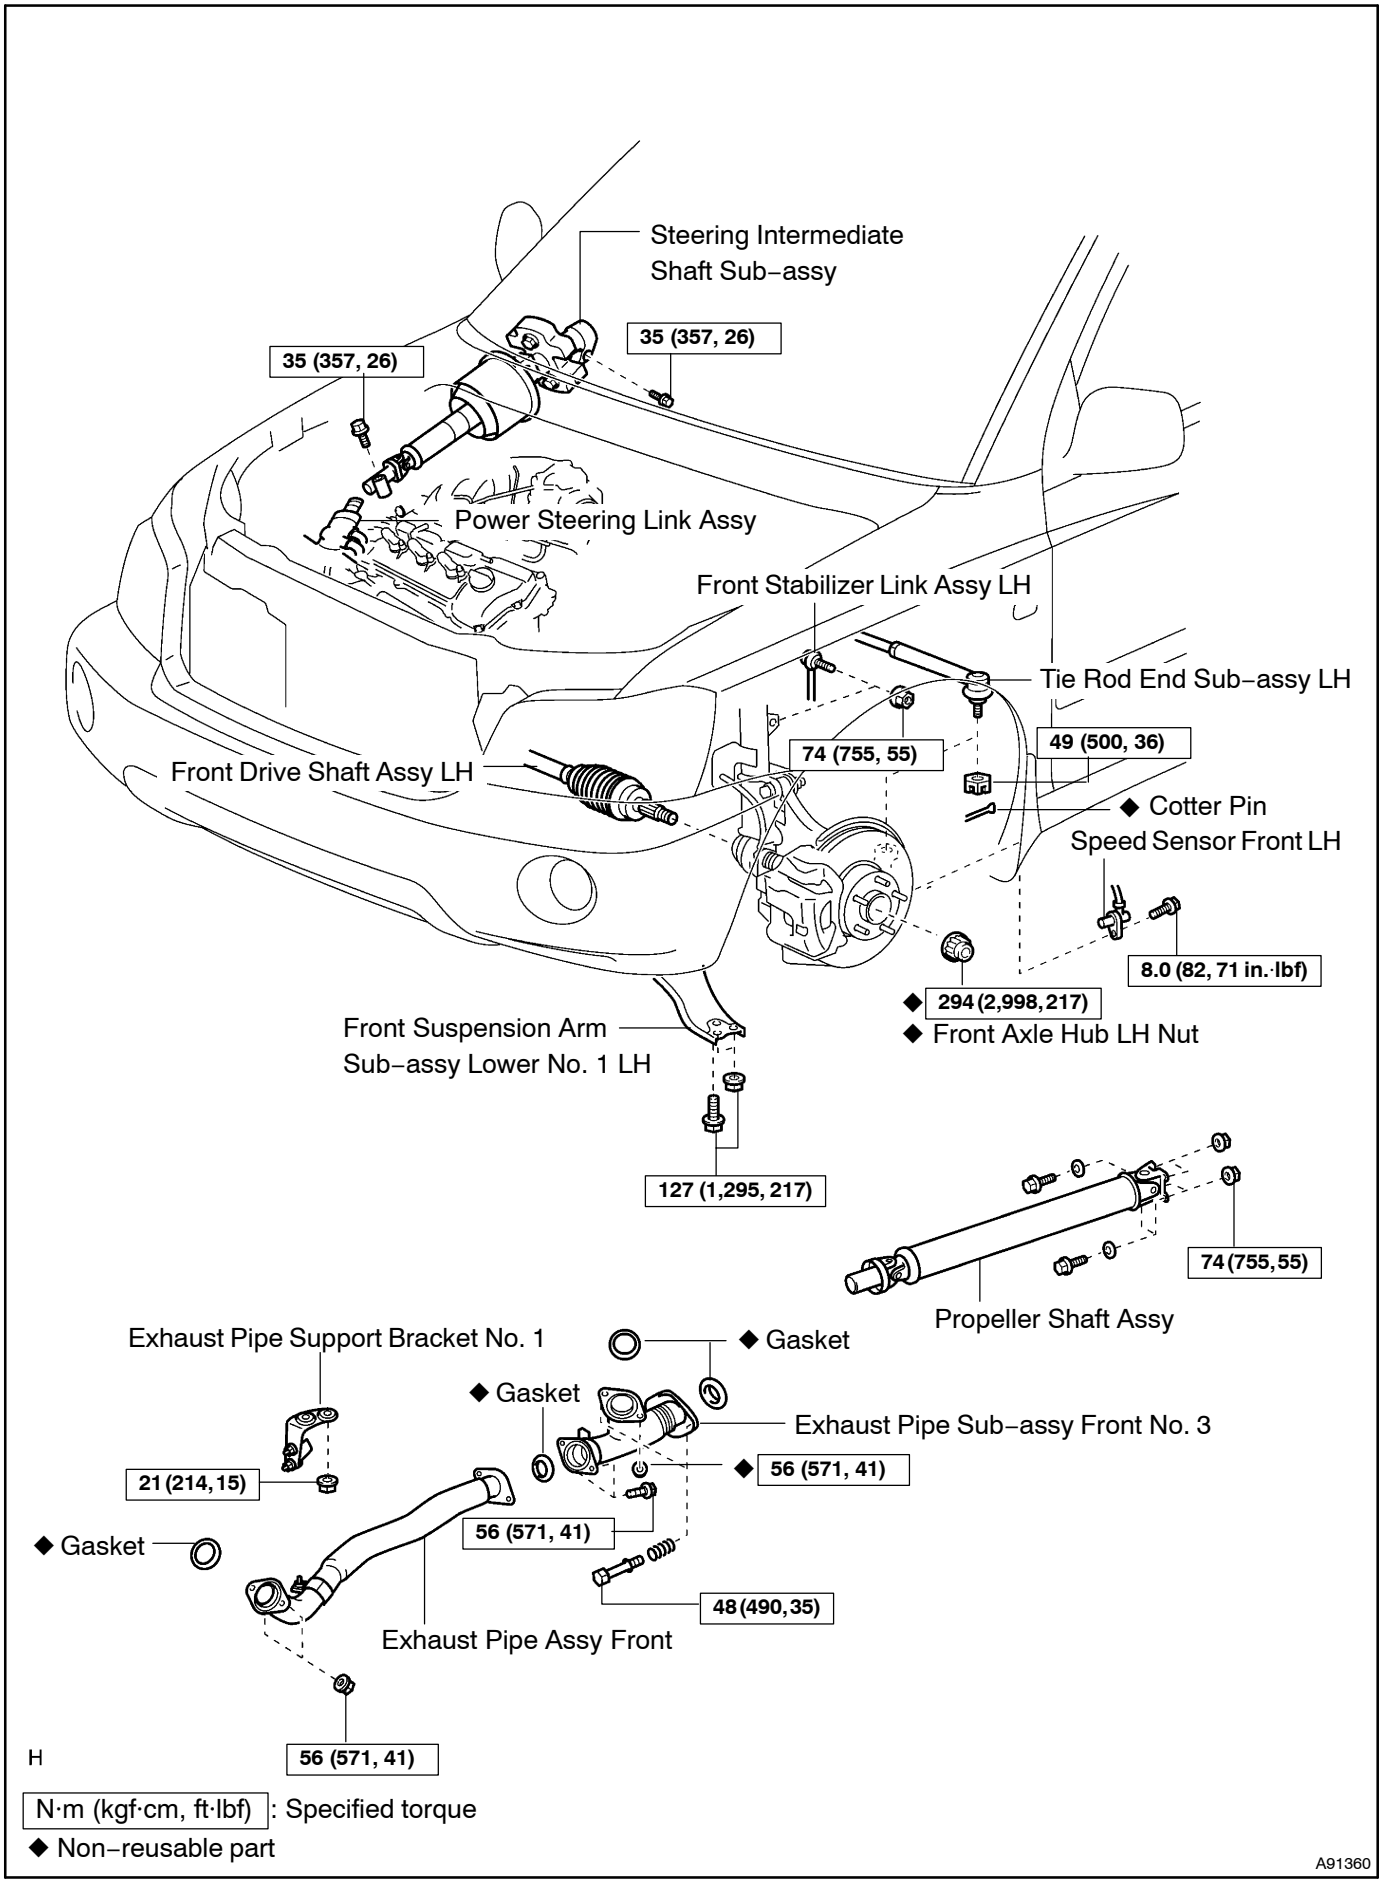
141RL–01

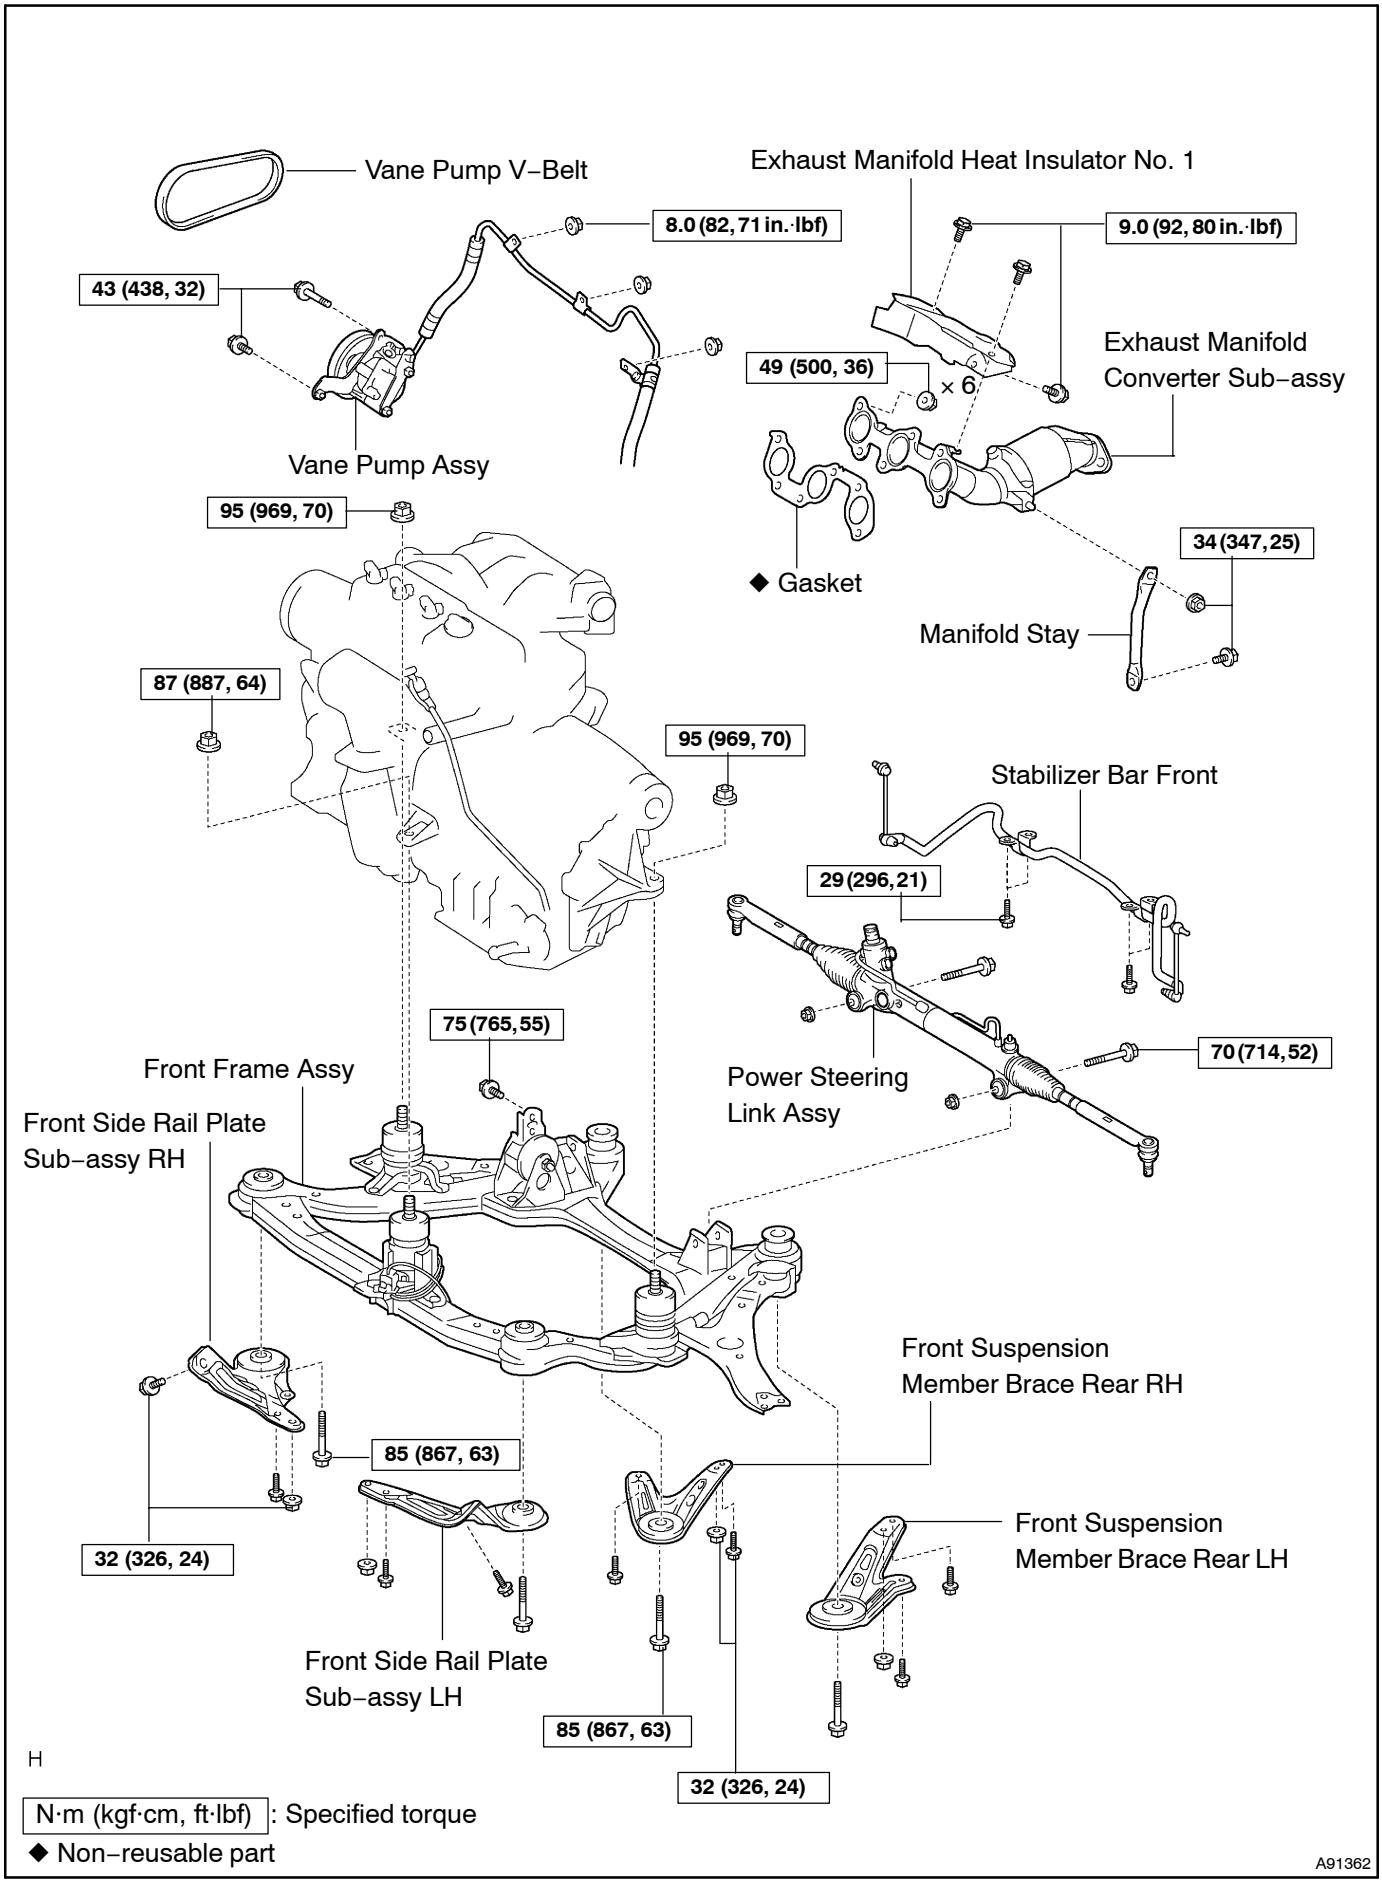


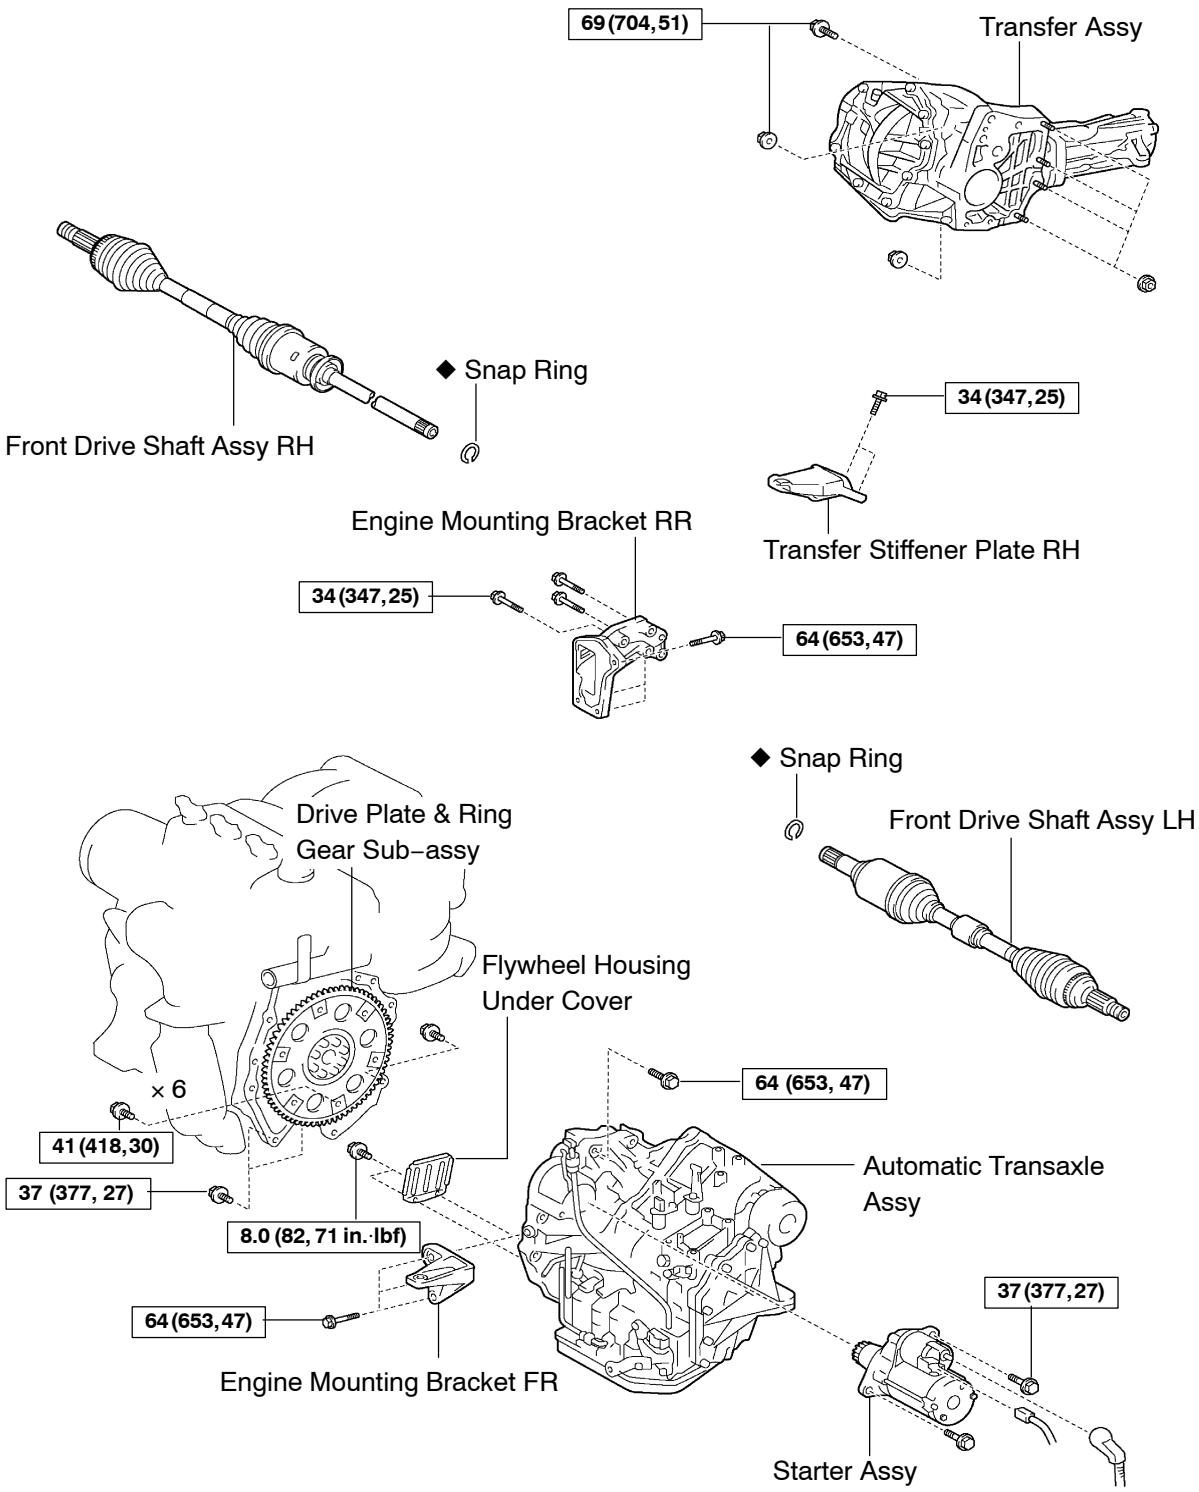

24 (245, 18)
Front Wiper Arm RH
24 (245, 18)
Front Wiper Arm LH
Cowl Top Ventilator Louver Sub–assy
7.0 (71, 62 in.·lbf)
Windshield Wiper Link Assy
Cowl Panel Sub–assy
H
N·m (kgf·cm, ft·lbf) : Specified torque
A91355


Front Suspension Brace
Sub–assy Upper Center
8.0 (82, 71 in.·lbf)
6.0 (61, 53 in.·lbf)
Battery Clamp Sub–assy
Air Cleaner Cap
Sub–assy
Air Cleaner Filter
Element Sub–assy
V–Bank Cover Sub–assy
Battery
Battery Tray
5.0 (51, 44 in.·lbf)
Air Cleaner Case
H
N·m (kgf·cm, ft·lbf) : Specified torque
A91357


Engine Moving Control Rod
V–Belt No. 1
64 (653, 47)
23 (235, 17)
8.0 (82, 71 in.·lbf)
58 (591, 43)
Generator Bracket No. 2
28 (286, 21)
Condenser
10 (102, 7)
Engine Mounting Stay No. 2 RH
43 (438, 32)
Generator Assy
18 (184, 13)
Oil Reservoir to Pump Hose No. 1
Generator Belt Adjusting Bar
Union to Check Valve Hose
Fuel Vapor Feed Hose
Heater Outlet Water Hose
Radiator Hose Outlet
Heater Inlet Water Hose
Fuel Pipe Sub–assy No. 1
Steering Gear Outlet Return Tube
Fuel Pipe Clamp
Radiator Hose Inlet
Transmission Control Cable Assy
Oil Cooler Inlet Tube No. 1
Oil Cooler Outlet Tube No. 1
15 (152, 11)
Fan Belt Adjusting Bar Bracket
25 (255, 18)
26 (265, 19)
Compressor and Magnetic Clutch
25 (255, 18)
H
N·m (kgf·cm, ft·lbf) : Specified torque
A91358


Steering Intermediate Shaft Sub–assy
35 (357, 26)
35 (357, 26)
Power Steering Link Assy
Front Stabilizer Link Assy LH
Tie Rod End Sub–assy LH
74 (755, 55)
49 (500, 36)
Front Drive Shaft Assy LH
◆ Cotter Pin
Speed Sensor Front LH
8.0 (82, 71 in.·lbf)
◆ 294 (2,998, 217)
◆ Front Axle Hub LH Nut
Front Suspension Arm Sub–assy Lower No. 1 LH
127 (1,295, 217)
74 (755, 55)
Propeller Shaft Assy
Exhaust Pipe Support Bracket No. 1
◆ Gasket
◆ Gasket
Exhaust Pipe Sub–assy Front No. 3
21 (214, 15)
◆ 56 (571, 41)
56 (571, 41)
◆ Gasket
48 (490, 35)
Exhaust Pipe Assy Front
H
56 (571, 41)
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
A91360

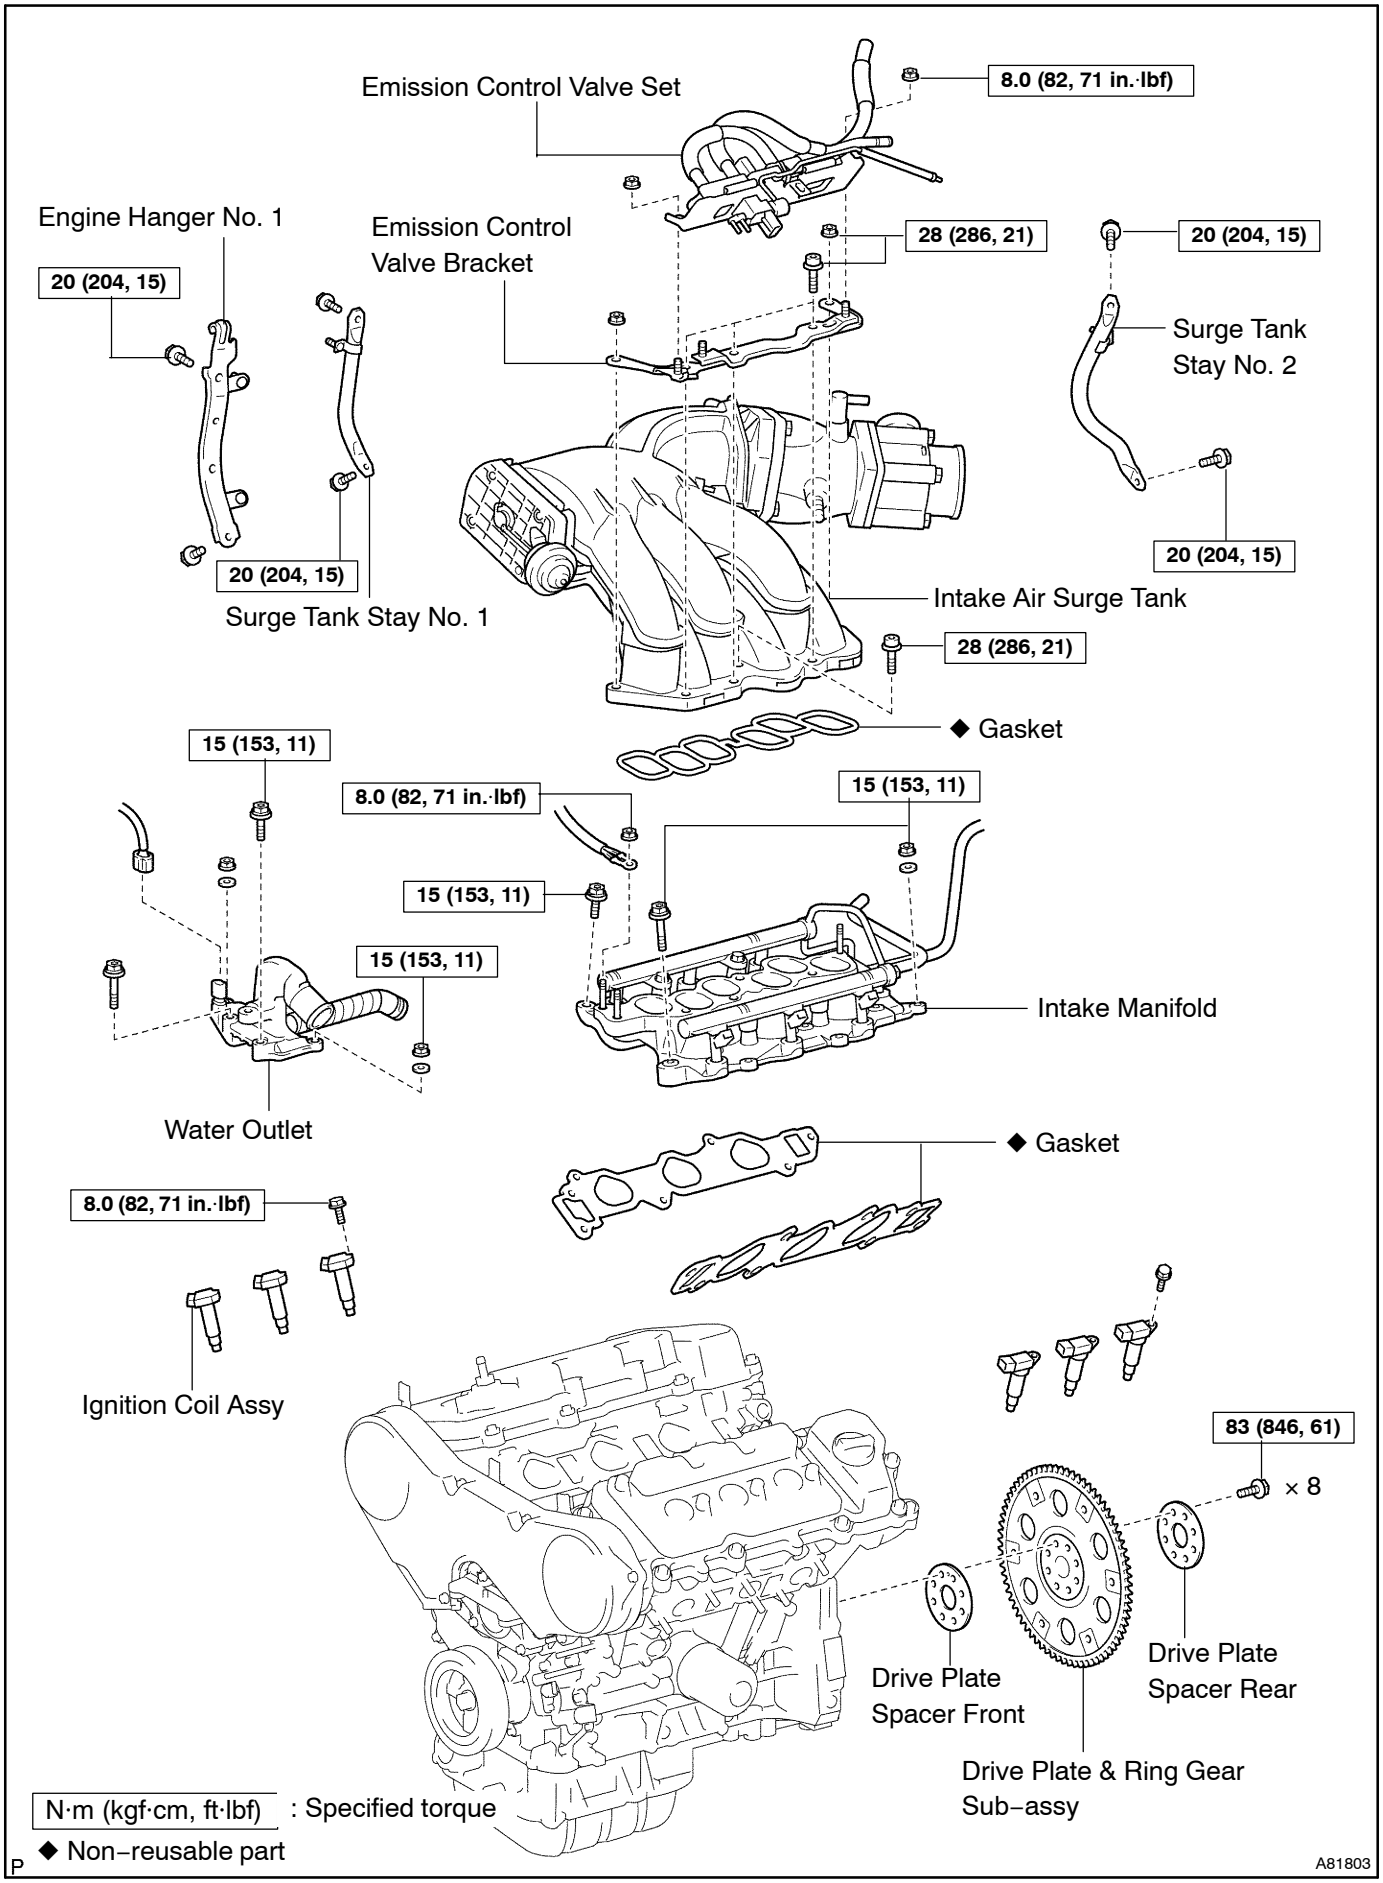

Vane Pump V–Belt
8.0 (82, 71 in.·lbf)
43 (438, 32)
Vane Pump Assy
Exhaust Manifold Heat Insulator No. 1
9.0 (92, 80 in.·lbf)
49 (500, 36)
× 6
Exhaust Manifold
Converter Sub–assy
◆ Gasket
34 (347, 25)
Manifold Stay
95 (969, 70)
87 (887, 64)
95 (969, 70)
Stabilizer Bar Front
29 (296, 21)
75 (765, 55)
Front Frame Assy
Front Side Rail Plate
Sub–assy RH
Power Steering
Link Assy
70 (714, 52)
Front Suspension
Member Brace Rear RH
85 (867, 63)
32 (326, 24)
Front Suspension
Member Brace Rear LH
Front Side Rail Plate
Sub–assy LH
85 (867, 63)
32 (326, 24)
H
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A91362

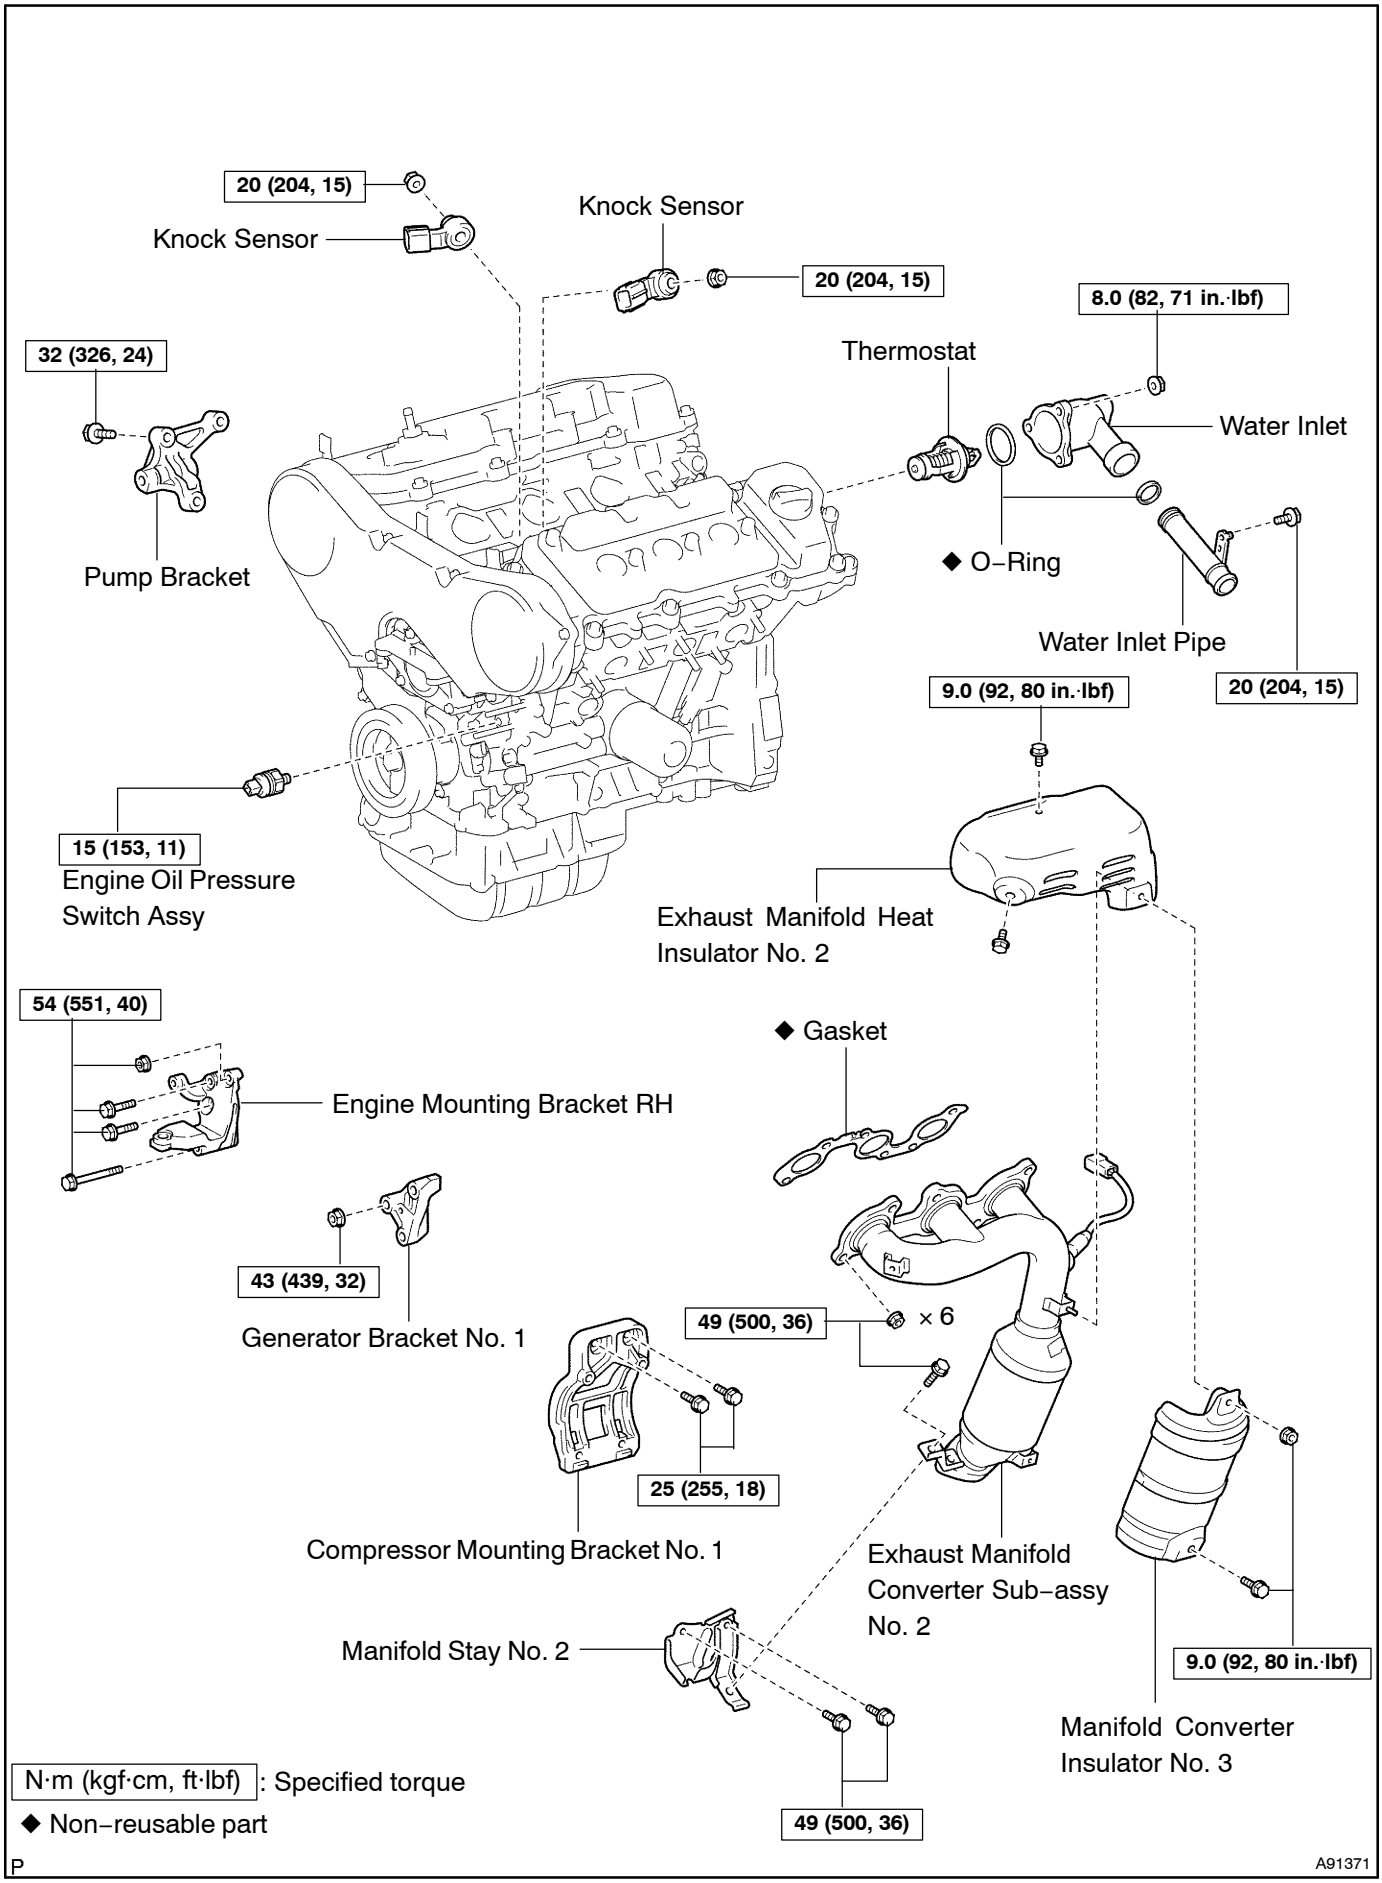


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

A92770


Emission Control Valve Set
8.0 (82, 71 in.·lbf)
Engine Hanger No. 1
Emission Control Valve Bracket
28 (286, 21)
20 (204, 15)
20 (204, 15)
Surge Tank Stay No. 2
20 (204, 15)
20 (204, 15)
Surge Tank Stay No. 1
Intake Air Surge Tank
28 (286, 21)
◆ Gasket
15 (153, 11)
8.0 (82, 71 in.·lbf)
15 (153, 11)
15 (153, 11)
15 (153, 11)
Intake Manifold
Water Outlet
◆ Gasket
8.0 (82, 71 in.·lbf)
Ignition Coil Assy
83 (846, 61)
× 8
Drive Plate Spacer Front
Drive Plate Spacer Rear
Drive Plate & Ring Gear Sub–assy
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
A81803


20 (204, 15)
Knock Sensor
Knock Sensor
20 (204, 15)
8.0 (82, 71 in.·lbf)
32 (326, 24)
Thermostat
Water Inlet
Pump Bracket
◆ O–Ring
Water Inlet Pipe
20 (204, 15)
9.0 (92, 80 in.·lbf)
15 (153, 11)
Engine Oil Pressure Switch Assy
Exhaust Manifold Heat Insulator No. 2
54 (551, 40)
◆ Gasket
Engine Mounting Bracket RH
43 (439, 32)
Generator Bracket No. 1
49 (500, 36)
× 6
25 (255, 18)
Compressor Mounting Bracket No. 1
Exhaust Manifold Converter Sub–assy No. 2
Manifold Stay No. 2
9.0 (92, 80 in.·lbf)
Manifold Converter Insulator No. 3
49 (500, 36)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
A91371