VVT SENSOR (3MZ–FE)


REPLACEMENT

180C0–01

HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page 03–2).

1. REMOVE AIR CLEANER ASSY

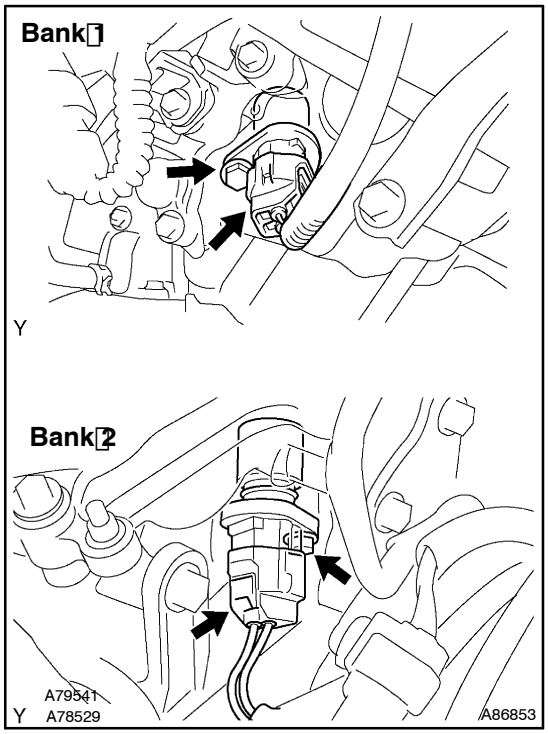

2. REMOVE VVT SENSOR

(a) Disconnect the sensor connector.

(b) Remove the bolt and sensor.

3. INSTALL VVT SENSOR

(a) Apply a light coat of engine oil to a new O–ring. Install the O–ring onto the sensor.

(b) Install the sensor with the bolt.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

(c) Connect the sensor connector.

4. INSTALL AIR CLEANER ASSY (See page 14–24)