IGNITION OR STARTER SWITCH ASSY (3MZ–FE)


190W4–01

REPLACEMENT

The installation procedures are the removal procedures in reverse order.

1. DISCONNECT BATTERY NEGATIVE TERMINAL

2. REMOVE STEERING COLUMN COVER LWR (See page 50–6)

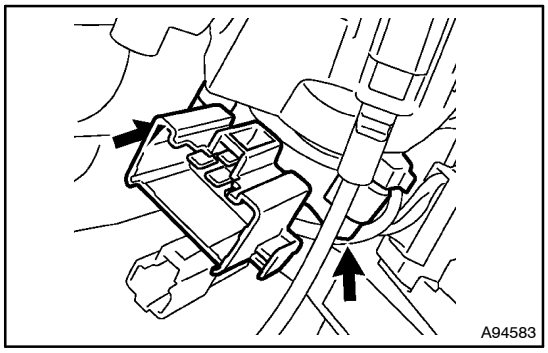

3. REMOVE IGNITION OR STARTER SWITCH ASSY

(a) Disconnect the ignition switch connector and unlock warning switch connectors.

(b) Remove the clamp.

(c) Remove the 2 screws and ignition switch.