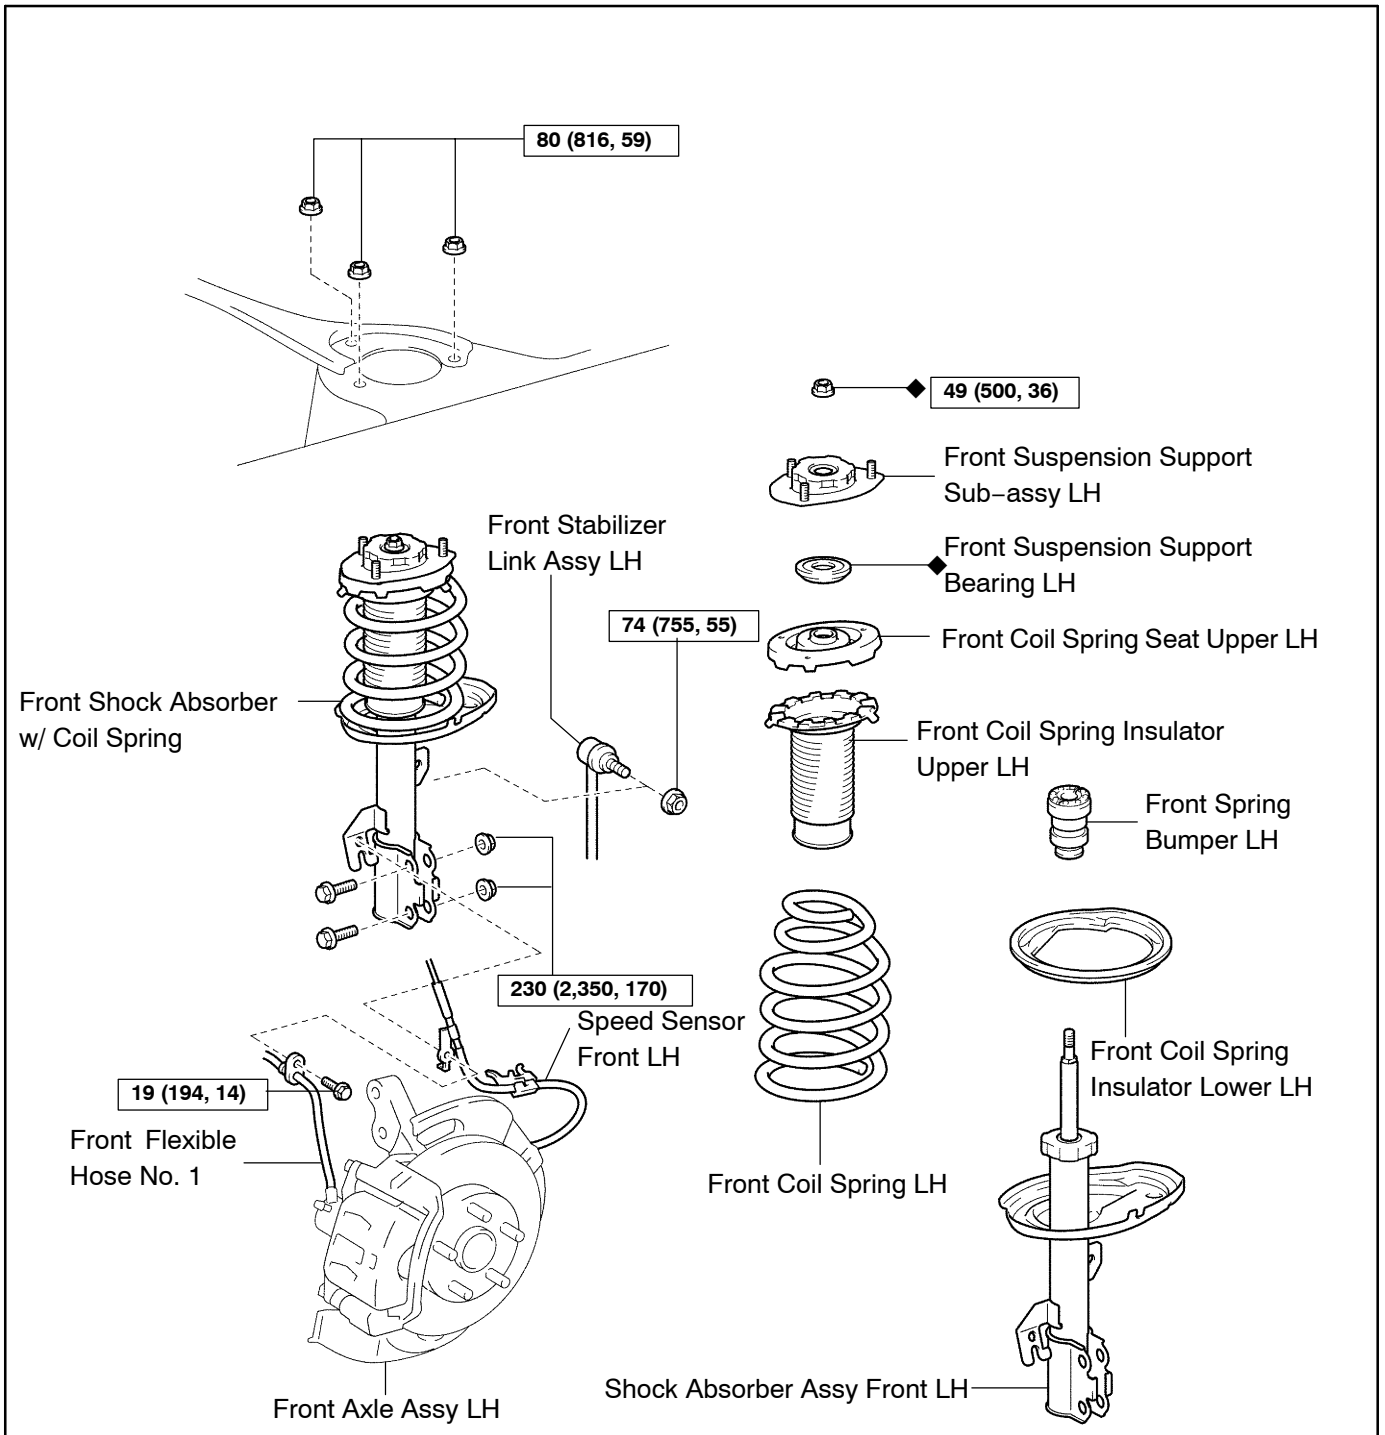
FRONT SUSPENSION

COMPONENTS

260IO–01

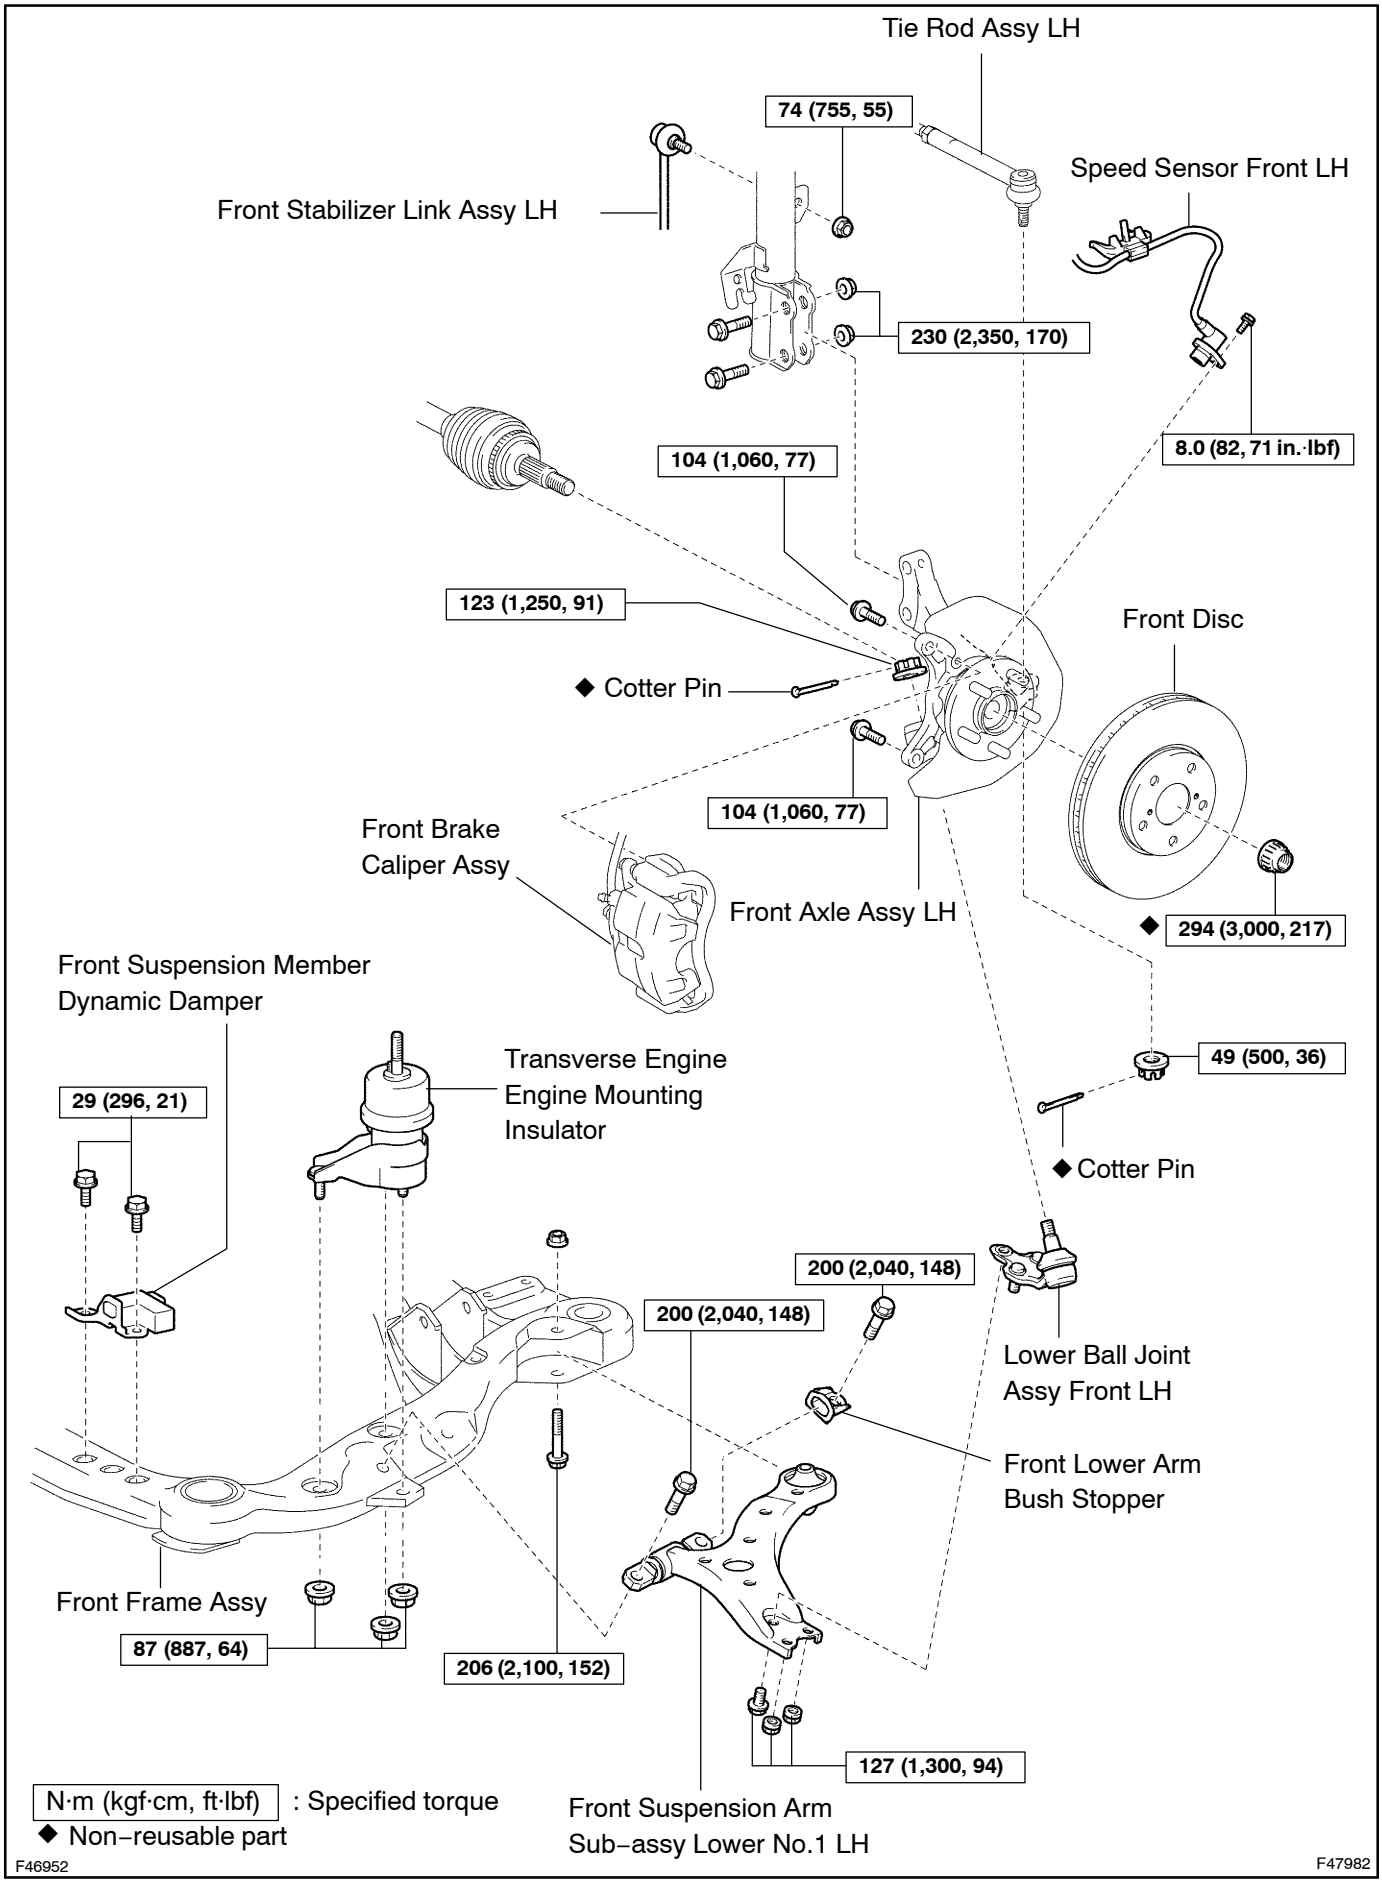


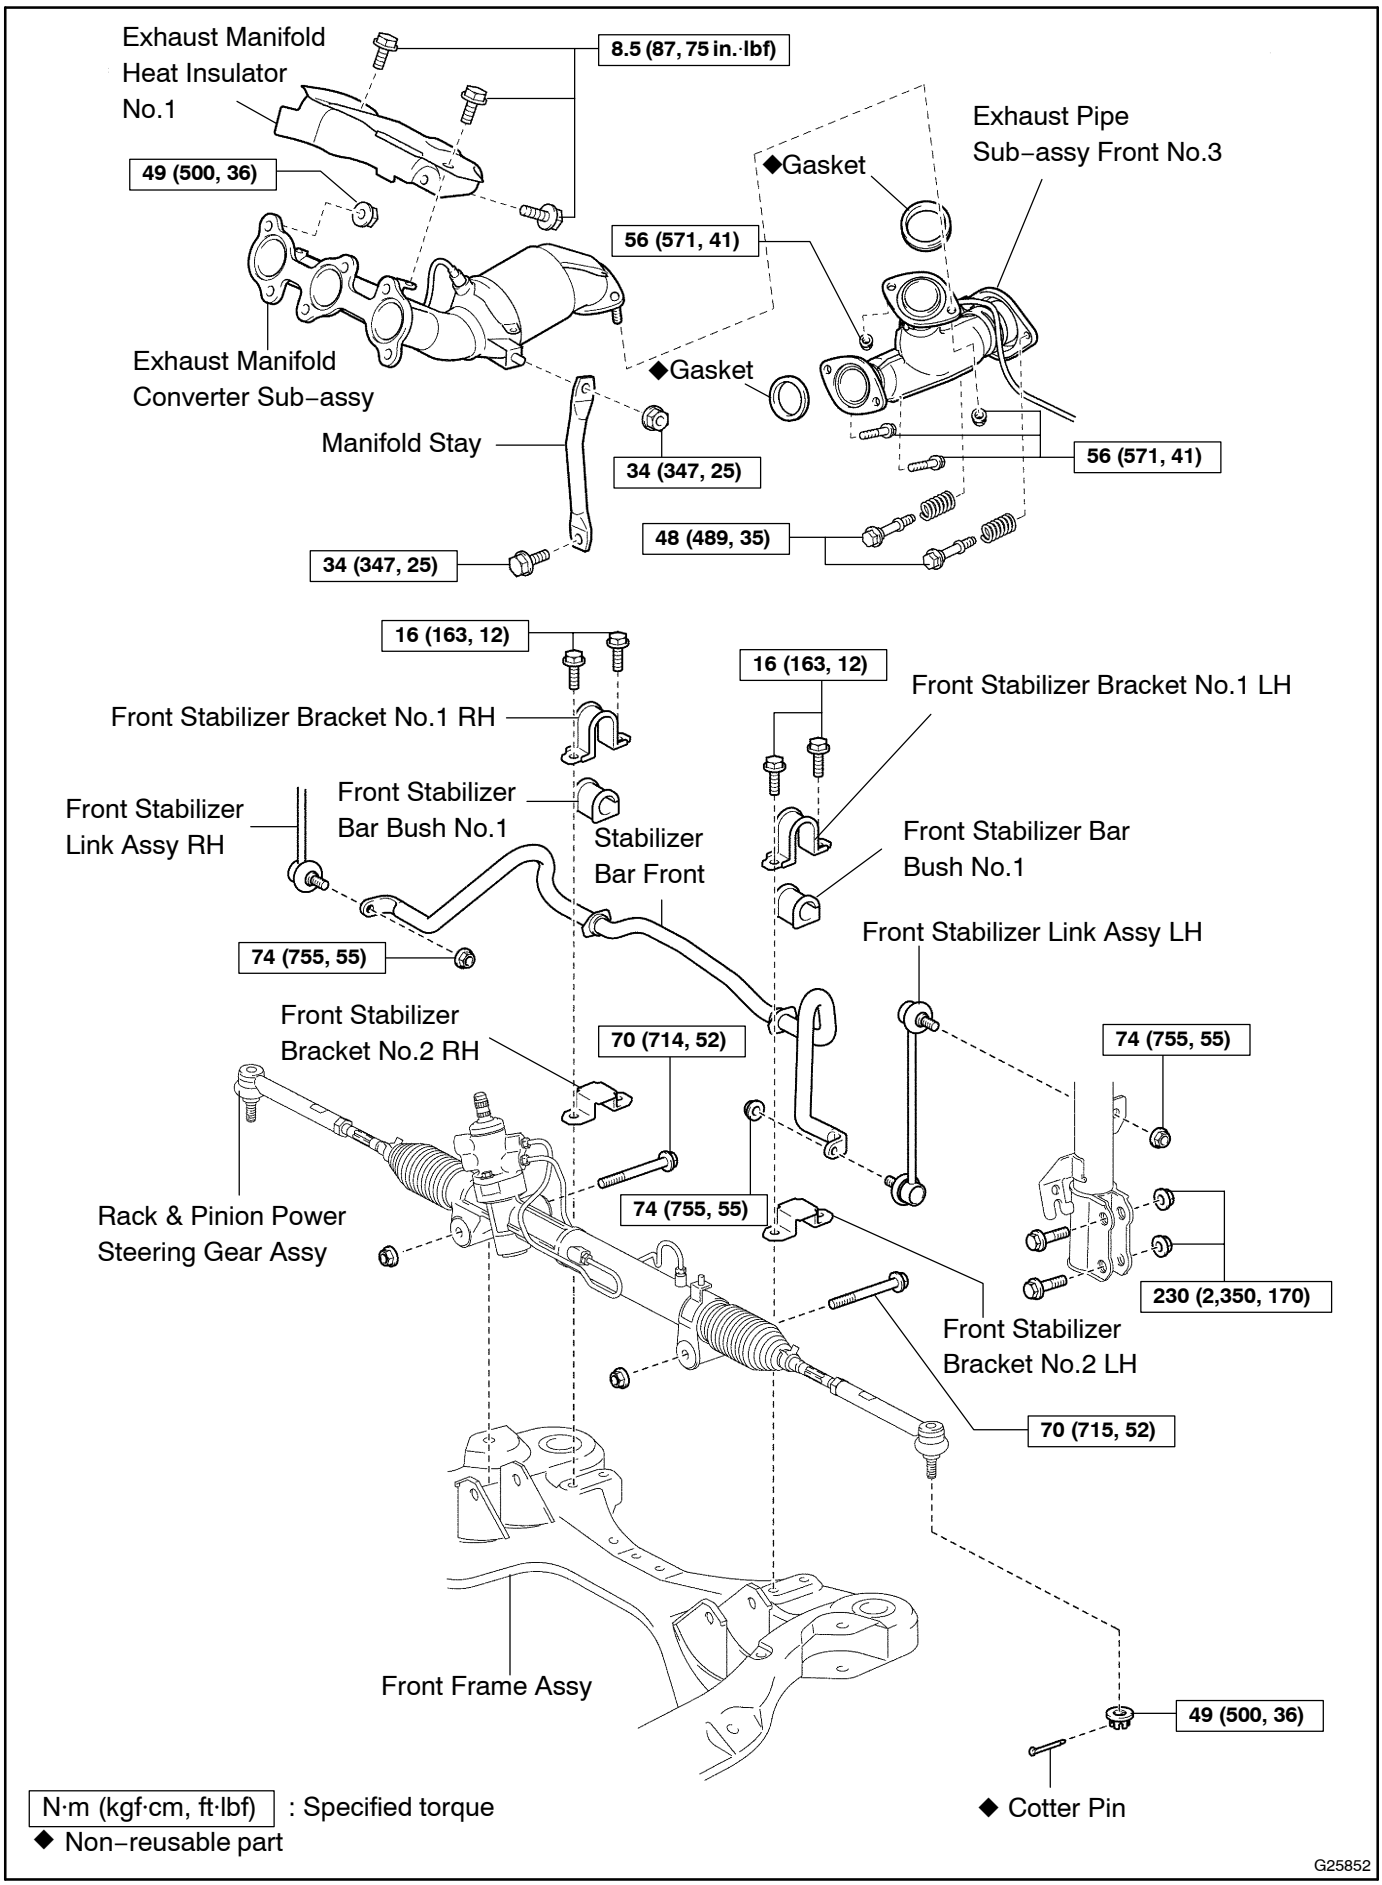
N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

P

G29262


Tie Rod Assy LH
74 (755, 55)
Front Stabilizer Link Assy LH
Speed Sensor Front LH
230 (2,350, 170)
8.0 (82, 71 in.·lbf)
104 (1,060, 77)
123 (1,250, 91)
Front Disc
◆ Cotter Pin
104 (1,060, 77)
Front Brake
Caliper Assy
Front Axle Assy LH
◆ 294 (3,000, 217)
Front Suspension Member
Dynamic Damper
49 (500, 36)
29 (296, 21)
Transverse Engine
Engine Mounting
Insulator
◆ Cotter Pin
200 (2,040, 148)
200 (2,040, 148)
Lower Ball Joint
Assy Front LH
Front Lower Arm
Bush Stopper
Front Frame Assy
87 (887, 64)
206 (2,100, 152)
127 (1,300, 94)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Front Suspension Arm
Sub–assy Lower No.1 LH
F46952
F47982


Exhaust Manifold Heat Insulator No.1
8.5 (87, 75 in.·lbf)
49 (500, 36)
◆Gasket
Exhaust Pipe Sub–assy Front No.3
56 (571, 41)
Exhaust Manifold Converter Sub–assy
◆Gasket
Manifold Stay
34 (347, 25)
56 (571, 41)
48 (489, 35)
34 (347, 25)
16 (163, 12)
16 (163, 12)
Front Stabilizer Bracket No.1 LH
Front Stabilizer Bracket No.1 RH
Front Stabilizer Bar Bush No.1
Front Stabilizer Link Assy RH
Stabilizer Bar Front
Front Stabilizer Bar Bush No.1
74 (755, 55)
Front Stabilizer Link Assy LH
Front Stabilizer Bracket No.2 RH
70 (714, 52)
74 (755, 55)
74 (755, 55)
Rack & Pinion Power Steering Gear Assy
230 (2,350, 170)
Front Stabilizer Bracket No.2 LH
70 (715, 52)
Front Frame Assy
49 (500, 36)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
◆ Cotter Pin
G25852