FRONT AXLE LH HUB BOLT

300PA–01

REPLACEMENT

HINT:


COMPONENTS: SEE PAGE 30–4

Replace the RH side by the same procedures as for the LH side.

1. REMOVE FRONT WHEEL

2. SEPARATE FRONT DISC BRAKE CALIPER ASSY LH


3. REMOVE FRONT DISC (SEE PAGE 32–26)

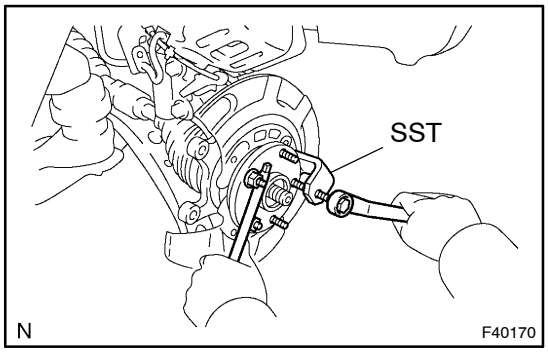

4. REMOVE FRONT AXLE LH HUB BOLT

(a) Using SST and a screwdriver or an equivalent to hold, remove the hub bolt.

SST 09628–10011

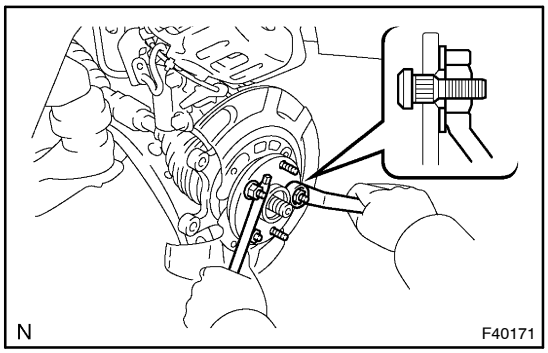

5. INSTALL FRONT AXLE LH HUB BOLT

(a) Install a washer and nut to a new hub bolt as shown in the illustration.

(b) Using a screwdriver to hold, install the hub bolt by tightening the nut.

6. INSTALL FRONT DISC (SEE PAGE 32–26)

7. INSTALL FRONT DISC BRAKE CALIPER ASSY LH

8. INSTALL FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)