REAR AXLE LH HUB BOLT

300PE–01

REPLACEMENT

HINT:

COMPONENTS: SEE PAGE 30–4

Replace the RH side by the same procedures as for the LH side.


1. REMOVE REAR WHEEL

2. SEPARATE REAR DISC BRAKE CALIPER ASSY LH

(a) Remove the 2 bolts and brake caliper.

(b) Support the brake caliper securely.


3. REMOVE REAR DISC (SEE PAGE 32–32)

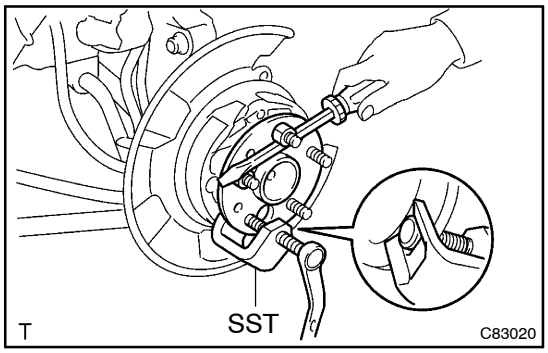

4. REMOVE REAR AXLE LH HUB BOLT

(a) Using SST and a screwdriver or an equivalent to hold, remove the hub bolt.

SST 09628–10011

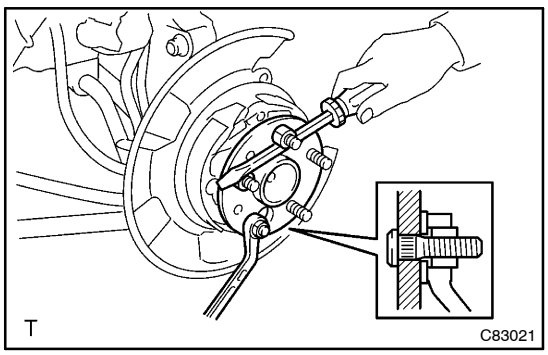

5. INSTALL REAR AXLE LH HUB BOLT

(a) Install a washer and nut to a new hub bolt as shown in the illustration.

(b) Using a screwdriver to hold, install the hub bolt by tightening the nut.

6. INSTALL REAR DISC (SEE PAGE 32–32)

7. INSTALL REAR DISC BRAKE CALIPER ASSY LH

(a) Install the brake caliper with the 2 bolts.

Torque: 58 N·m (592 kgf·cm, 43 ft·lbf)

8. INSTALL REAR WHEEL