
TRANSFER CASE OIL SEAL (4WD)

3104N–02

REPLACEMENT


HINT:
ENGINE COMPONENTS: See page 14–15
AUTOMATIC TRANSMISSION COMPONENTS: See page 40–10
TRANSFER COMPONENTS: See page 31–3

1. **REMOVE ENGINE ASSEMBLY WITH TRANSAXLE (SEE PAGE 14–24)**
2. **REMOVE AUTOMATIC TRANSMISSION W/TRANSFER (SEE PAGE 40–11)**
3. **REMOVE TRANSFER ASSY (SEE PAGE 31–9)**
4. **REMOVE CTR DIFFERENTIAL LOCK SLEEVE (SEE PAGE 31–9)**
   SST 09308–00010

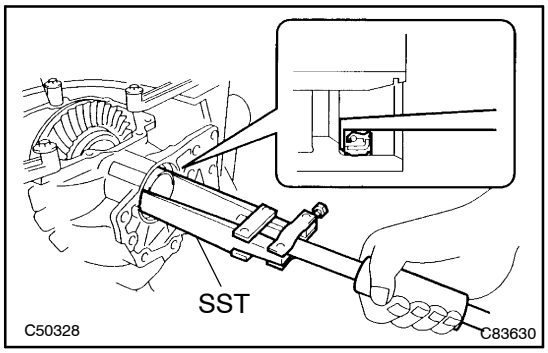

5. **REMOVE TRANSFER CASE OIL SEAL**
(a) Using SST, remove the transfer case oil seal from the transfer case.
SST 09308–00010

NOTICE:
Do not damage the oil–seal–fitted surface of the case.

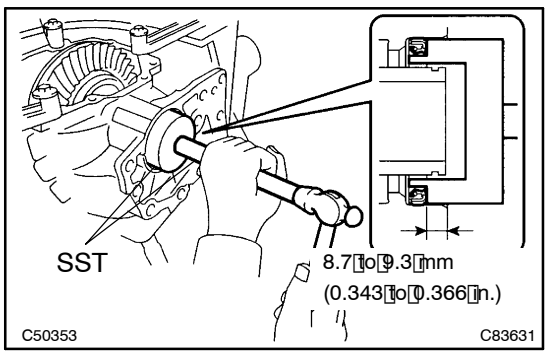

6. **INSTALL TRANSFER CASE OIL SEAL**
(a) Using SST, install a new transfer case oil seal to the transfer case as shown in the illustration.
SST 09387–00010, 09950–70010 (09951–07150)

NOTICE:
Ensure it is installed straight.
(b) Apply small amount of MP grease to the oil seal lip.

7. **INSTALL CTR DIFFERENTIAL LOCK SLEEVE (SEE PAGE 31–9)**
   SST 09950–60010 (09951–00610), 09950–70010 (09951–07150)
8. **INSTALL TRANSFER ASSY (SEE PAGE 31–9)**
9. **INSTALL AUTOMATIC TRANSMISSION W/TRANSFER (SEE PAGE 40–11)**
10. **INSTALL ENGINE ASSEMBLY WITH TRANSAXLE (SEE PAGE 14–24)**