
BRAKE MASTER W/PLATE CYLINDER SUB–ASSY

320WX–02

REPLACEMENT

HINT:

COMPONENTS: See page 32–18.

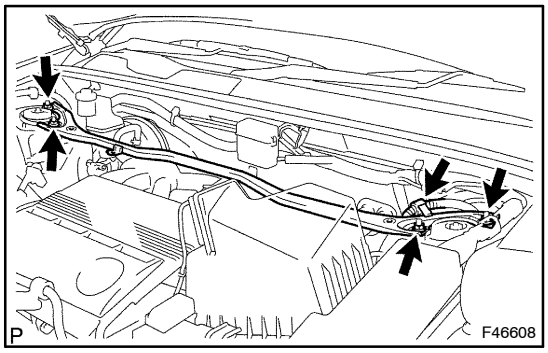

1. REMOVE FRONT SUSPENSION BRACE SUB–ASSY UPPER CENTER

(a) Remove the 4 nuts and wire harness clamp.


(b) Remove the front suspension brace sub–assy upper center.

2. DRAIN BRAKE FLUID

NOTICE:


Wash brake fluid off immediately if it adheres to any painted surface.

3. REMOVE BRAKE MASTER W/PLATE CYLINDER SUB–ASSY

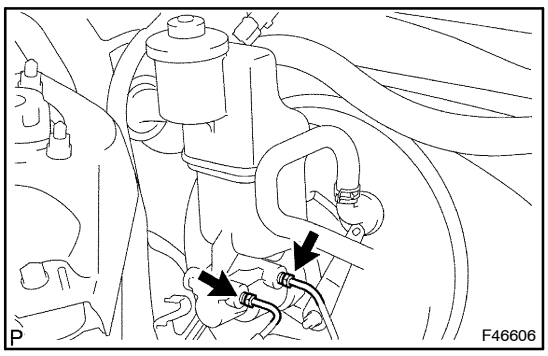

(a) Using SST, disconnect the 2 brake tubes from the brake master w/ plate cylinder sub–assy.
SST 09023–00100

(b) Disconnect the level warning switch connector from the brake master cylinder reservoir assy.

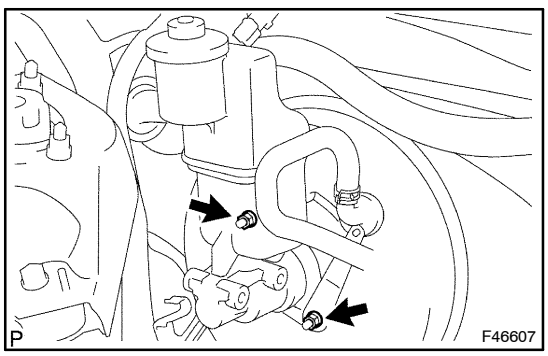

(c) Remove the 2 nuts, then pull out the check valve bracket and the brake master w/ plate cylinder assy.

4. INSPECT AND ADJUST BRAKE BOOSTER PUSH ROD

NOTICE:

Make an adjustment with the brake booster assy having no vacuum. (Depress the brake pedal several times with the engine stopped.)


HINT:

Adjustment of the brake booster push rod is performed when the brake master cylinder sub–assy is replaced with a new one. The adjustment is not necessary when the brake master cylinder sub–assy is reinstalled and the brake booster assy is replaced with a new one.

(a) Apply the chalk to the tip of an accessory tool.

HINT:

An accessory tool is enclosed with a new brake master cylinder sub–assy.

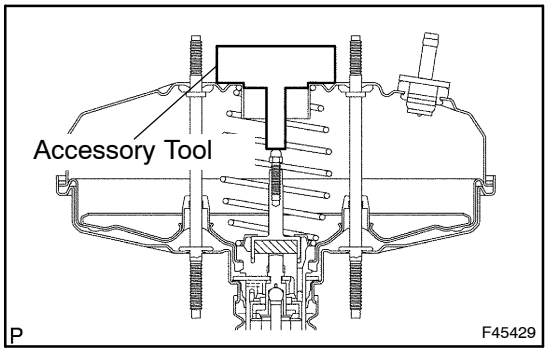

(b) Place the accessory tool to the brake booster assy.


(c) Measure the clearance between the brake booster push rod and accessory tool.

Clearance: 0 mm (0 in.)

HINT:

Adjust the clearance in following cases:

- If there is a clearance between the accessory tool and the shell of the brake booster (floating accessory tool), the clearance is too small.
- If the chalk does not stick on the tip of the brake booster push rod, the clearance is large.

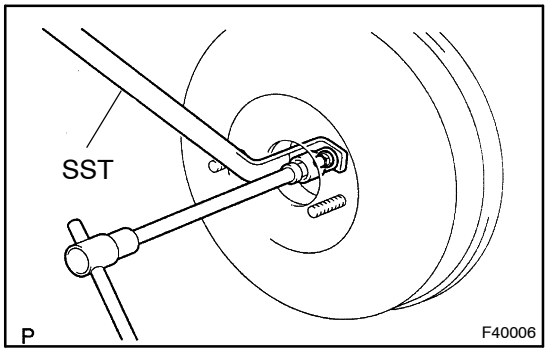


(d) If clearance is outside the specified range, fix the push rod using SST and adjust the length of the protruding adjusting bolt.

SST 09737–00020


HINT:

When adjusting the push rod, depress the brake pedal sufficiently so that the push rod sticks out.

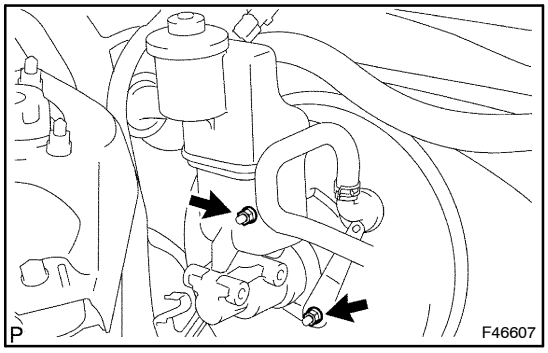

5. INSTALL BRAKE MASTER W/PLATE CYLINDER SUB–ASSY


(a) Install the brake master w/ plate cylinder assy and the check valve bracket with the 2 nuts.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

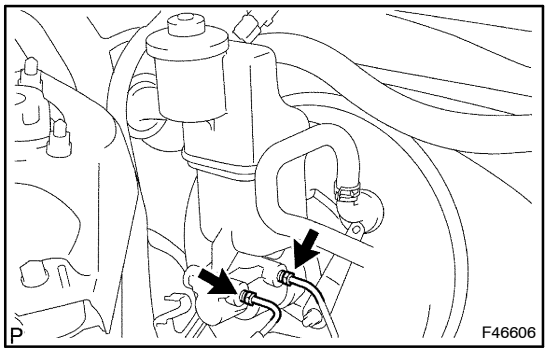

(b) Using SST, connect the 2 brake tubes to the brake master w/ plate cylinder assy.
SST 09023–00100
Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

(c) Connect the level warning switch connector to the brake master cylinder reservoir assy.

6. FILL RESERVOIR WITH BRAKE FLUID (SEE PAGE 32–4)
7. BLEED MASTER CYLINDER (SEE PAGE 32–4)
SST 09023–00100
8. BLEED BRAKE LINE (SEE PAGE 32–4)
9. BLEED BRAKE ACTUATOR ASSY (W/ VSC) (SEE PAGE 32–4)
10. CHECK FLUID LEVEL IN RESERVOIR (SEE PAGE 32–4)

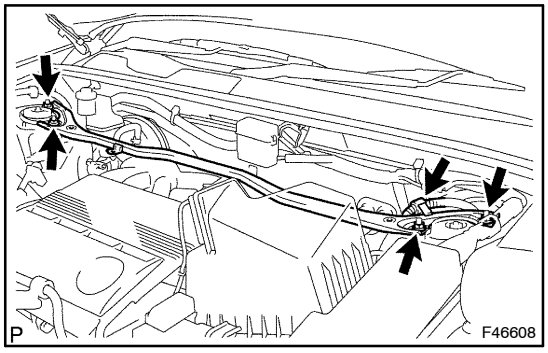

11. INSTALL FRONT SUSPENSION BRACE SUB–ASSY UPPER CENTER

(a) Install the front suspension brace sub–assy upper center with the 4 nuts and wire harness clamp.
Torque: 80 N·m (816 kgf·cm, 59 ft·lbf)

12. CHECK BRAKE FLUID LEAKAGE
13. CHECK FLUID LEVEL IN RESERVOIR (SEE PAGE 32–4)