SPEED SENSOR REAR LH


REPLACEMENT

320X1-02

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. **REMOVE DECK TRIM SIDE PANEL ASSY LH (SEE PAGE 76-23)**
2. **REMOVE REAR WHEEL**

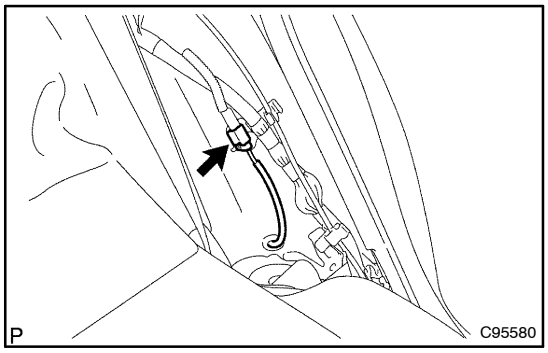


3. **REMOVE SPEED SENSOR REAR LH**

(a) Disconnect the speed sensor connector.

NOTICE:

Be careful not to damage the wire harness.

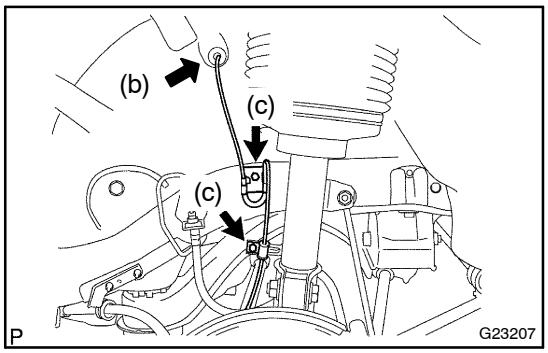


(b) Pull out the sensor wire harness with the grommet.

NOTICE:

Do not pull sensor wire.


(c) Remove the 2 bolts holding the sensor harness from the body and the shock absorber assy.

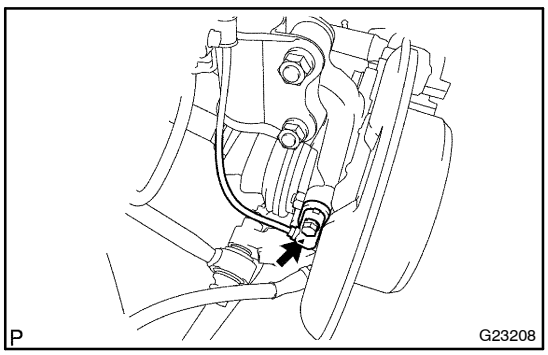

(d) Remove the bolt and the speed sensor rear.

NOTICE:

Prevent foreign matter from attaching to the sensor tip.

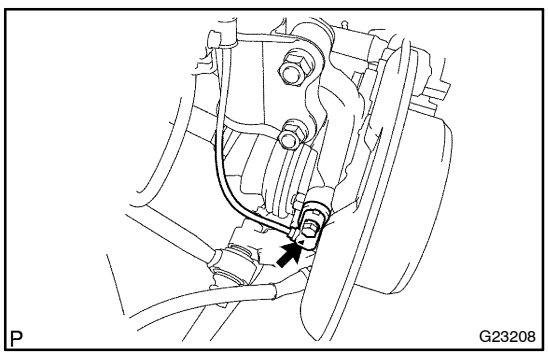


4. **INSTALL SPEED SENSOR REAR LH**

(a) Install the speed sensor rear with the bolt.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

NOTICE:

Prevent foreign matter from attaching to the sensor tip.

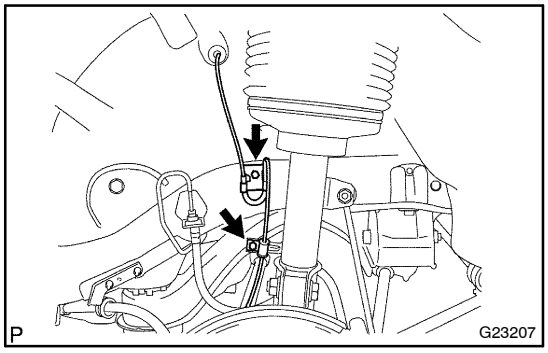


(b) Install the sensor harness clamps with the 2 bolts onto the body and the shock absorber assy.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

NOTICE:
Do not twist the sensor wire when installing the sensor.

(c) Push in the sensor wire harness with grommet.

NOTICE:
When grommet is set to body, pull the grommet. Do not pull sensor wire.

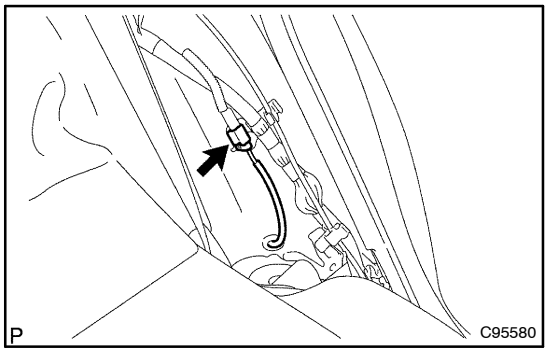

(d) Connect the speed sensor connector.

5. **INSTALL REAR WHEEL**
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
6. **INSTALL DECK TRIM SIDE PANEL ASSY LH (SEE PAGE 76–23)**
7. **CHECK ABS SPEED SENSOR SIGNAL (SEE PAGE 05–156 or 05–234)**