DECELERATION SENSOR


REPLACEMENT

32164–02

NOTICE:


- **Don't use the deceleration sensor if it is dropped or damaged.**
- **Prevent foreign matter from attaching between the deceleration sensor bracket and body.**
- **Confirm the sensor direction is correct.**

1. **REMOVE FRONT SEAT ASSEMBLY RH (SEE PAGE 72–10, 72–17)**
2. **REMOVE FRONT DOOR SCUFF PLATE RH (SEE PAGE 76–23)**
3. **REMOVE REAR DOOR SCUFF PLATE RH (SEE PAGE 76–23)**
4. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76–23)**
5. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76–23)**
6. **REMOVE CENTER PILLAR GARNISH LOWER RH (SEE PAGE 76–23)**

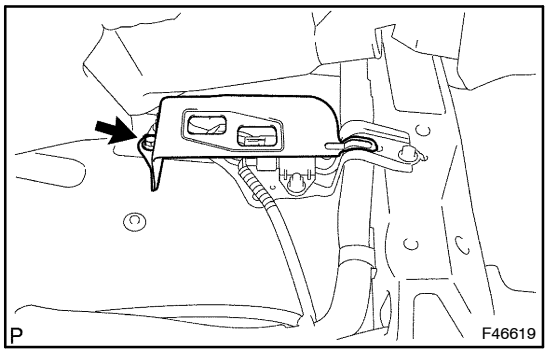

7. REMOVE YAWRATE SENSOR PROTECTOR

(a) Remove the bolt and the sensor protector.

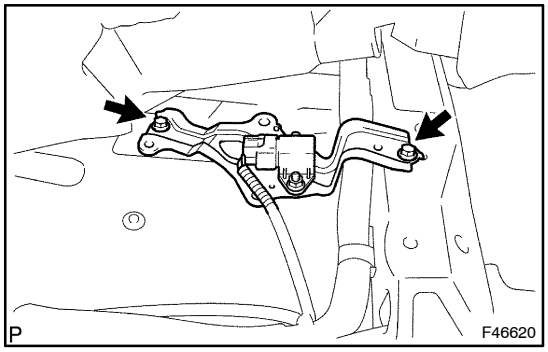


8. REMOVE DECELERATION SENSOR

(a) Disconnect the connector.

(b) Remove the 2 bolts and the deceleration sensor.

NOTICE:

Do not remove the deceleration sensor from the deceleration sensor bracket.

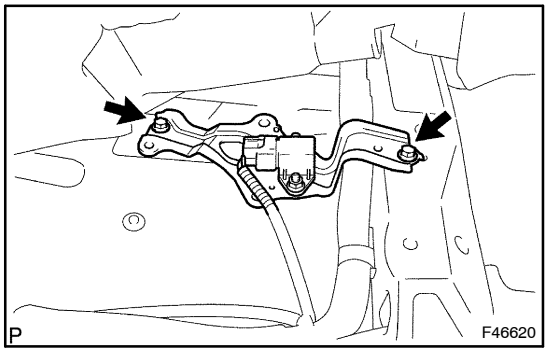


9. INSTALL DECELERATION SENSOR

(a) Install the deceleration sensor with the 2 bolts.

Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)

(b) Connect the connector.

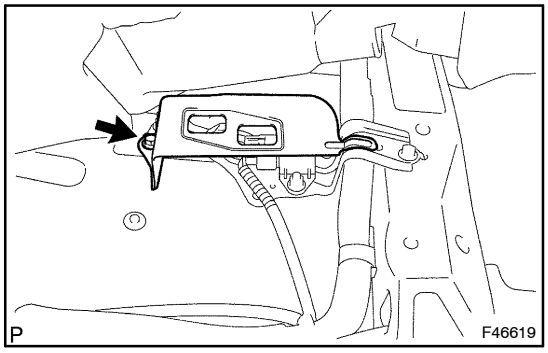

10. INSTALL YAWRATE SENSOR PROTECTOR

(a) Install the sensor protector with the bolt.

Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)

11. INSTALL CENTER PILLAR GARNISH LOWER RH (SEE PAGE 76–23)

12. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76–23)

13. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76–23)

14. INSTALL REAR DOOR SCUFF PLATE RH (SEE PAGE 76–23)

15. INSTALL FRONT DOOR SCUFF PLATE RH (SEE PAGE 76–23)

16. INSTALL FRONT SEAT ASSEMBLY RH (SEE PAGE 72–10, 72–17)

17. PERFORM DECELERATION SENSOR ZERO POINT CALIBRATION (SEE PAGE 05–234)

18. CHECK IN THE TEST MODE (SEE PAGE 05–156)