YAWRATE SENSOR


320X2-03

REPLACEMENT

NOTICE:


- **Don't use the yawrate sensor if it is dropped or damaged.**
- **Prevent foreign matter from attaching between yawrate sensor bracket and body.**
- **Confirm the sensor direction is correct.**

1. **REMOVE FRONT SEAT ASSEMBLY RH (SEE PAGE 72-10, 72-17)**
2. **REMOVE FRONT DOOR SCUFF PLATE RH (SEE PAGE 76-23)**
3. **REMOVE REAR DOOR SCUFF PLATE RH (SEE PAGE 76-23)**
4. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76-23)**
5. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76-23)**
6. **REMOVE CENTER PILLAR GARNISH LOWER RH (SEE PAGE 76-23)**

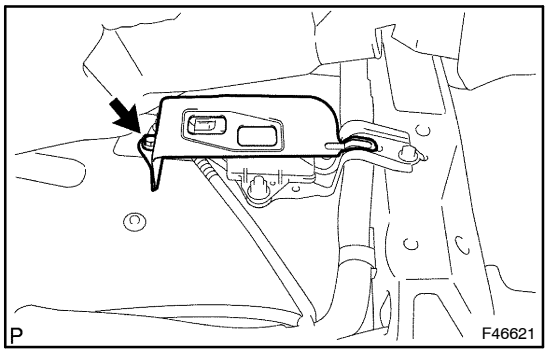

7. REMOVE YAWRATE SENSOR PROTECTOR

(a) Remove the bolt and the sensor protector.

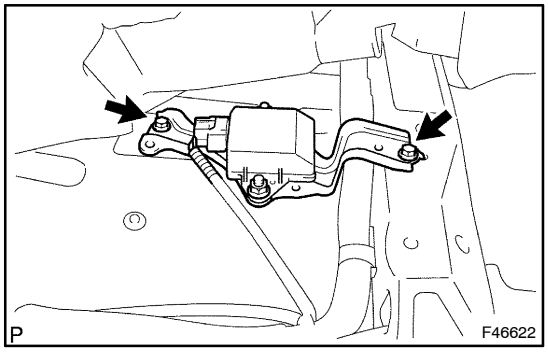


8. REMOVE YAWRATE SENSOR

(a) Disconnect the connector.

(b) Remove the 2 bolts and the yawrate sensor.

NOTICE:

Do not remove the yawrate sensor from the yawrate sensor bracket.

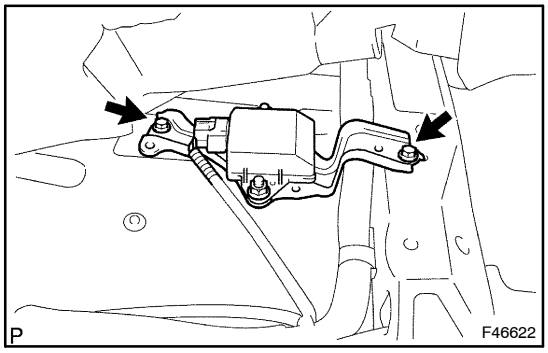


9. INSTALL YAWRATE SENSOR

(a) Install the yawrate sensor with the 2 bolts.

Torque: 14 N·m (143 kgf·cm, 10 ft.·lbf)

(b) Connect the connector.

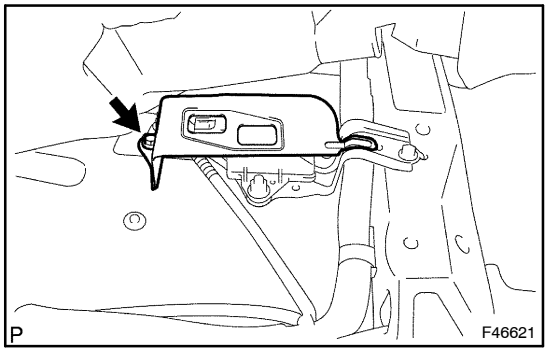

10. INSTALL YAWRATE SENSOR PROTECTOR
(a) Install the sensor protector with the bolt.
Torque: 14 N·m (143 kgf·cm, 10 ft.·lbf)

11. INSTALL CENTER PILLAR GARNISH LOWER RH (SEE PAGE 76–23)
12. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76–23)
13. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76–23)
14. INSTALL REAR DOOR SCUFF PLATE RH (SEE PAGE 76–23)
15. INSTALL FRONT DOOR SCUFF PLATE RH (SEE PAGE 76–23)
16. INSTALL FRONT SEAT ASSEMBLY RH (SEE PAGE 72–10, 72–17)
17. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (SEE PAGE 05–234)
18. CHECK IN THE TEST MODE (SEE PAGE 05–234)