
STEERING SENSOR


320X3–04

REPLACEMENT

1. PRECAUTION (SEE PAGE 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 01–4)
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
4. REMOVE HORN BUTTON ASSY (SEE PAGE 60–15)
5. REMOVE STEERING WHEEL ASSY (SEE PAGE 50–6)
   SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)
6. REMOVE STEERING COLUMN COVER UPR (SEE PAGE 50–6)
7. REMOVE SPIRAL CABLE SUB–ASSY (SEE PAGE 60–24)

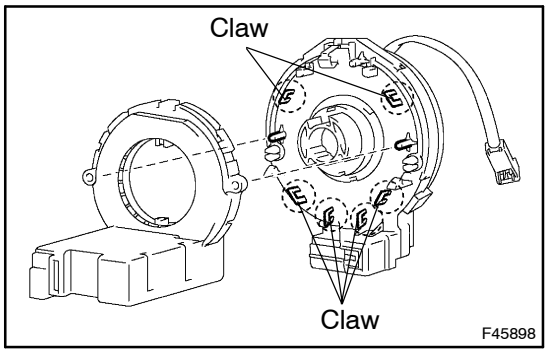

8. REMOVE STEERING SENSOR
(a) Release 6 claw fittings and remove the steering sensor from the spiral cable.

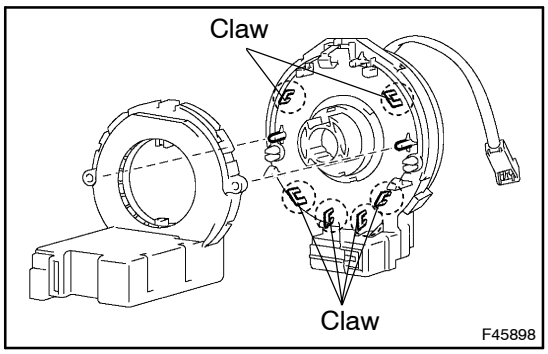

9. INSTALL STEERING SENSOR
(a) Install the steering sensor onto the spiral cable.

NOTICE:

- **Install the claw securely.**
- **Do not damage the claw.**

10. ADJUST CENTER FRONT WHEEL
11. INSTALL SPIRAL CABLE SUB–ASSY (SEE PAGE 60–24)
12. CENTER SPIRAL CABLE (SEE PAGE 60–24)
13. INSTALL STEERING WHEEL ASSY (SEE PAGE 50–6)
14. INSTALL HORN BUTTON ASSY (SEE PAGE 60–15)
15. INSPECT STEERING WHEEL CENTER POINT
16. INSPECT HORN BUTTON ASSY (SEE PAGE 60–10)
17. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 01–4)
18. INSPECT SRS WARNING LIGHT (SEE PAGE 05–507)