
SKID CONTROL ECU ASSY


32165–01

REPLACEMENT

1. REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY LOWER (SEE PAGE 71–9)

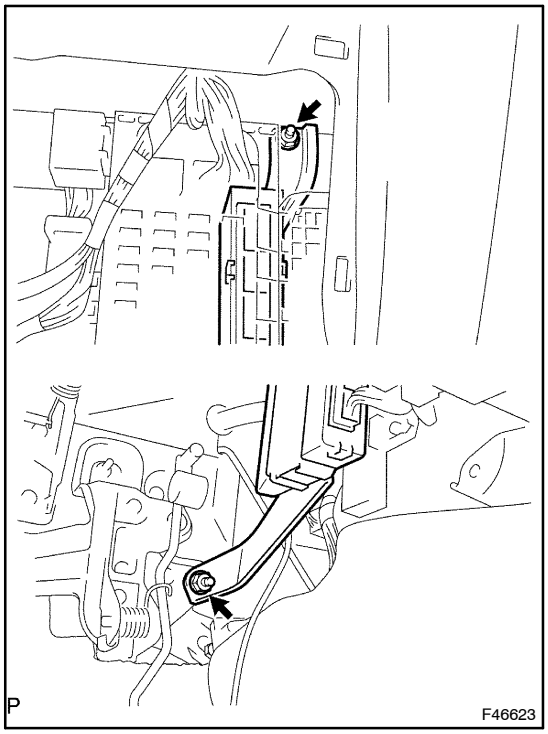

2. REMOVE SKID CONTROL ECU ASSY
(a) Disconnect the connector from the skid control computer.
(b) Remove the 2 nuts and skid control computer.

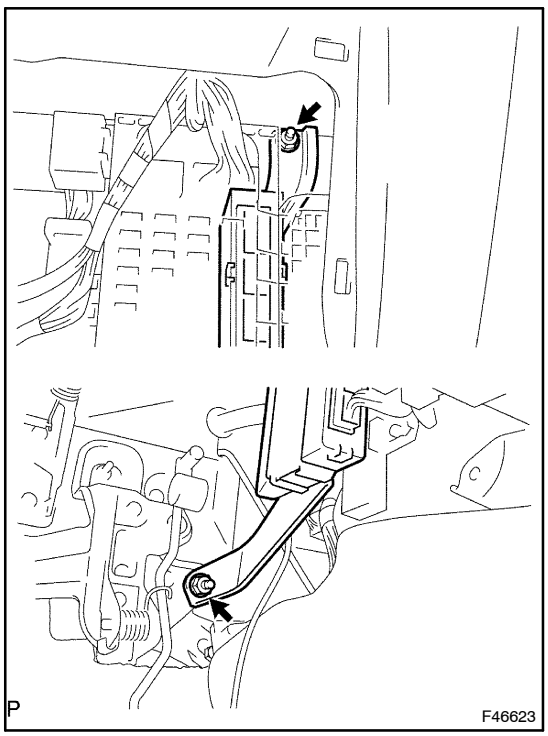

3. INSTALL SKID CONTROL ECU ASSY
(a) Install the skid control computer with the 2 nuts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)
(b) Connect the connector to the skid control computer.

4. INSTALL INSTRUMENT PANEL FINISH PANEL SUB–ASSY LOWER (SEE PAGE 71–9)
5. PERFORM DECELERATION SENSOR ZERO POINT CALIBRATION (SEE PAGE 05–156)
6. CHECK IN THE TEST MODE (SEE PAGE 05–156)