330CW–03

ADJUSTMENT

1. REMOVE REAR WHEEL

2. ADJUST PARKING BRAKE SHOE CLEARANCE (SEE PAGE 33–17)

3. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

4. INSPECT PARKING BRAKE PEDAL TRAVEL

(a) Strongly depress on the parking brake pedal.


(b) Release the parking brake.

(c) Once more, slowly depress the parking brake pedal all the way, and count the number of clicks.

Parking brake pedal travel: 5 to 7 clicks at 300 N (31 kgf, 67.46 lbf)

5. ADJUST PARKING BRAKE PEDAL TRAVEL

(a) Remove the instrument panel finish panel sub–assy lower (see page 71–9).

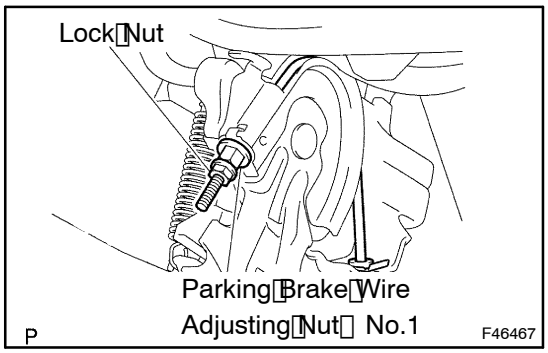

(b) Depress the parking brake pedal 5 clicks, and loosen the lock nut with fixing the adjust nut with a wrench.

(c) Release the parking brake pedal.

(d) Turn the parking brake wire adjusting nut No.1 until the parking brake pedal travel is correct.

(e) Using a spanner or equivalent to hold the parking brake wire adjusting nut No.1, tighten the lock nut.

Torque: 6.0 N·m (61 kgf·cm, 53 in.·lbf)

(f) Count the number of clicks after depressing and canceling the parking brake pedal 3 to 4 times.

(g) Check whether the parking brake drags or not.

(h) When operating the parking brake pedal, check that the parking brake pedal indicator light is lit.